



"STRELA" Limited Liability Company

ПОСТАВКА И РЕМОНТ АВИАЦИОННЫХ КОМПОНЕНТОВ И ОБОРУДОВАНИЯ

Тел/факс (495) 139-60-45 info@strela-at.ru

№	Код	Наименование детали	Доп.инфо
Комплектующие изделия и оборудование для Boeing			
1	0016-0015-5	CAP AY # CAP ASSY	CAP AY # CAP ASSY
2	0091520200-2	VALVE # RESERVOIR VENT VALVE ASSEMBLY	VALVE # RESERVOIR VENT VALVE ASSEMBLY
3	0091520200-3	VALVE AY# RESERVOIR VENT VALVE AY	VALVE AY# RESERVOIR VENT VALVE AY
4	0097-0005	FILLER # FILLER ASSY OXYGEN	FILLER # FILLER ASSY OXYGEN
5	0102LA2AG	SENSOR # SENSOR TOTAL AIR TEMPERATURE	SENSOR # SENSOR TOTAL AIR TEMPERATURE
6	0108124-0	REEL AY # REEL & SHOULDER HARNESS AY	REEL AY # REEL & SHOULDER HARNESS AY
7	0123CH1B	SENSOR # SENSOR - LOW FLOW	SENSOR # SENSOR - LOW FLOW
8	015067S2-16	COUPLING# COUPLING HALF ENG HYDR SYST	COUPLING# COUPLING HALF ENG HYDR SYST
9	01N65900	ELT # ELT-ADT406AF THREE FREQUENCY	ELT # ELT-ADT406AF THREE FREQUENCY
10	0212-0007	VALVE AY# VALVE CHECK	VALVE AY# VALVE CHECK
11	24116	FAN ASSY# FAN,SENSOR INSTL.HAT RACK	FAN ASSY# FAN,SENSOR INSTL.HAT RACK
12	024807-002	SWITCH # SWITCH, RUDDER TRIM CONTROL	SWITCH # SWITCH, RUDDER TRIM CONTROL
13	335205040	FAN # COOLING FAN ASSY	FAN # COOLING FAN ASSY
14	335205100	FAN # COOLING FAN ASSY	FAN # COOLING FAN ASSY
15	335205150	FAN # COOLING FAN ASSY	FAN # COOLING FAN ASSY
16	335205160	CLUTCH # STARTER MOTOR CLUTCH	CLUTCH # STARTER MOTOR CLUTCH
17	335708100	HARNESS # HARNESS, ENGINE	HARNESS # HARNESS, ENGINE
18	335708140	HARNESS # HARNESS, ENGINE	HARNESS # HARNESS, ENGINE
19	335905020	FCU # FUEL CONTROL AND PUMP ASSY	FCU # FUEL CONTROL AND PUMP ASSY
20	335905030	FCU # FUEL CONTROL AND PUMP ASSY	FCU # FUEL CONTROL AND PUMP ASSY
21	335908010	FCU # FUEL CONTROL AND PUMP ASSY	FCU # FUEL CONTROL AND PUMP ASSY
22	335908020	FCU # FUEL CONTROL AND PUMP ASSY	FCU # FUEL CONTROL AND PUMP ASSY
23	40210	FILTERAY# FILTER AY HYD UTILITY FLUID PR	FILTERAY# FILTER AY HYD UTILITY FLUID PR
24	046-55-999-0131	BOOM SET# BOOM SET HME 46-K	BOOM SET# BOOM SET HME 46-K
25	05939-103	BALLAST # BALLAST UNIT	BALLAST # BALLAST UNIT
26	05939-3	BALLAST # BALLAST UNIT-FLOURESCENT LAMP	BALLAST # BALLAST UNIT-FLOURESCENT LAMP
27	066-01127-1301	XPDR ATC# TRANSPONDER ATC TRA-67A	XPDR ATC# TRANSPONDER ATC TRA-67A
28	066-1093-10	DME INTR# DME INTERROGATOR KDM7060	DME INTR# DME INTERROGATOR KDM7060
29	066-1093-30	DME INTR# DME INTERROGATOR	DME INTR# DME INTERROGATOR
30	066-50001-1001	TA/VS1 # TA/VERTICAL SPEED INDICATOR	TA/VS1 # TA/VERTICAL SPEED INDICATOR
31	071-50001-8102	ANT TCAS# ANTENNA TCAS	ANT TCAS# ANTENNA TCAS
32	07311P000-01	SCREW AY# BALL SCREW ASSY 1+8 / 2+7	SCREW AY# BALL SCREW ASSY 1+8 / 2+7
33	07311P000-02	SCREW AY# SCREW ASSY BALL	SCREW AY# SCREW ASSY BALL
34	07312P000-01	SCREW AY# SCREW ASSY BALL	SCREW AY# SCREW ASSY BALL
35	080-20325-01	T-R UNIT# TRANSFORMER-RECTIFIER UNIT	T-R UNIT# TRANSFORMER-RECTIFIER UNIT
36	0851CM	PROBE # PROBE PITOT	PROBE # PROBE PITOT
37	0851CM-2	PROBE # PROBE PITOT	PROBE # PROBE PITOT
38	0851CM2	PROBE # PROBE PITOT	PROBE # PROBE PITOT
39	0856AE13	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
40	0856AE15	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
41	0856AE16	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
42	0856AE18	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
43	0856AE19	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
44	0A011-0149-1	TANK # TANK POTABLE WATER	TANK # TANK POTABLE WATER
45	0A090-0599	HEADREST# HEADREST ASSY GREY CPT,F/O	HEADREST# HEADREST ASSY GREY CPT,F/O
46	0A093-0031A	STRUCTUR# STRUCTURE BASE CPT	STRUCTUR# STRUCTURE BASE CPT
47	0A093-0032A	STRUCTUR# STRUCTURE BASE F/O	STRUCTUR# STRUCTURE BASE F/O
48	1-002-0102-1000	INVERTER# STATIC INVERTER	INVERTER# STATIC INVERTER
49	1-002-0102-2087	INVERTER# STATIC INVERTER	INVERTER# STATIC INVERTER
50	1-002-0102-2089	INVERTER# STATIC INVERTER	INVERTER# STATIC INVERTER
51	1-002-0102-2090	INVERTER# STATIC INVERTER	INVERTER# STATIC INVERTER
52	1-111-0102-0714	INVERTER# Static Inverter	INVERTER# Static Inverter
53	1-115205-4	HEATER # HEATER ASSY WATER	HEATER # HEATER ASSY WATER
54	10-1114-3	LIGHT AY# LIGHT ASSY EXIT	LIGHT AY# LIGHT ASSY EXIT
55	10-1327-1	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
56	10-1327-1M	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
57	10-1327-2	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
58	10-1327-2M	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
59	10-1327-3	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
60	10-1331-1	SIGN # INT. ILLUM. WIN-AND EXIT SIGN	SIGN # INT. ILLUM. WIN-AND EXIT SIGN
61	10-1468-5	SWITCH # SWITCH, THERMAL WINDOW NO.3	SWITCH # SWITCH, THERMAL WINDOW NO.3
62	10-1733-1	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
63	10-1733-3	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
64	окт.62	RELAY # PHASE SENSING RELAY,STAB.TRIM	RELAY # PHASE SENSING RELAY,STAB.TRIM
65	10-3059-3	VALVE # VALVE SOLENOID	VALVE # VALVE SOLENOID
66	10-3061-1	VALVE # BOOST PUMP MANUAL S/O VALVE	VALVE # BOOST PUMP MANUAL S/O VALVE
67	окт.78	DETECTOR# DETECTOR AIR FLOW	DETECTOR# DETECTOR AIR FLOW
68	10-3200-1	VALVE AS# MOTOR OPERATED SHUTOFF VALVE	VALVE AS# MOTOR OPERATED SHUTOFF VALVE
69	10-3200-2	VALVE AS# MOTOR OPERATED SHUTOFF VALVE	VALVE AS# MOTOR OPERATED SHUTOFF VALVE
70	10-3200-6	S/O VALV# SHUTOFF VALVE MOTOR ACTUATED	S/O VALV# SHUTOFF VALVE MOTOR ACTUATED
71	10-3204-23	VALVE # VALVE REGULATOR	VALVE # VALVE REGULATOR
72	10-3204-36	VALVE # VALVE.FLOW LIMITING	VALVE # VALVE.FLOW LIMITING
73	10-3204-7	VALVE # VALVE REGULATOR	VALVE # VALVE REGULATOR
74	10-3207-1	SWITCH # SWITCH THERMO HYDR FLUID OVERH	SWITCH # SWITCH THERMO HYDR FLUID OVERH
75	10-3223-32	XMTR # HYDR. PRESS TRANSMITTER	XMTR # HYDR. PRESS TRANSMITTER
76	10-3223-33	IND.PRES# HYDR. PRESS INDICATOR	IND.PRES# HYDR. PRESS INDICATOR
77	10-3223-43	INDICATR# INDICATOR DUAL DUCT PRESSURE	INDICATR# INDICATOR DUAL DUCT PRESSURE
78	10-3223-44	IND HYDR# BRAKE PRESS,INDICATOR	IND HYDR# BRAKE PRESS,INDICATOR
79	10-3257-3	T-R UNIT# TRANSFORMER-RECTIFIER UNIT	T-R UNIT# TRANSFORMER-RECTIFIER UNIT
80	10-3257-5	T-R UNIT# TRANSFORMER-RECTIFIER UNIT	T-R UNIT# TRANSFORMER-RECTIFIER UNIT
81	10-3269-12	SWITCH # OIL LOW PRESSURE SWITCH	SWITCH # OIL LOW PRESSURE SWITCH
82	10-3269-13	SWITCH # OIL FILTER BYPASS SWITCH	SWITCH # OIL FILTER BYPASS SWITCH



№	Код	Наименование детали	Доп.инфо
83	10-3275-32	FIRE EXT# FIRE EXTINGUISHER	FIRE EXT# FIRE EXTINGUISHER
84	10-3337-1	FILTERAY# FILTER AY HYD UTILITY FLUID PR	FILTERAY# FILTER AY HYD UTILITY FLUID PR
85	10-3337-6	FILTERAY# FILTER AY HYD UTILITY FLUID PR	FILTERAY# FILTER AY HYD UTILITY FLUID PR
86	10-3337-7	FILTERAY# FILTER AY HYD UTILITY FLUID PR	FILTERAY# FILTER AY HYD UTILITY FLUID PR
87	10-381750-14	EXCITER # EXCITER, IGNITION, APU	EXCITER # EXCITER, IGNITION, APU
88	10-60133-3	SWITCH # SWITCH THERMAL 190 DEGR F	SWITCH # SWITCH THERMAL 190 DEGR F
89	10-60491-3	VALVE AY# VALVE CHECK HYDR SYSTEM	VALVE AY# VALVE CHECK HYDR SYSTEM
90	10-60495-5	VALVE # VALVE WING ANTI ICE	VALVE # VALVE WING ANTI ICE
91	10-60495-7	VALVE # VALVE WING ANTI ICE	VALVE # VALVE WING ANTI ICE
92	10-60498-13	UNIT-CAB# UNIT-CABIN TEMPERATURE CONTROL	UNIT-CAB# UNIT-CABIN TEMPERATURE CONTROL
93	10-60498-3	ELEMENT # ELEMENT	ELEMENT # ELEMENT
94	10-60498-4	ELEMENT # SENSOR ANTICIPATOR	ELEMENT # SENSOR ANTICIPATOR
95	10-60498-7	ELEMENT # ELEMENT SENSOR TEMP	ELEMENT # ELEMENT SENSOR TEMP
96	10-60506-19	ACM # AIR CYCLE MACHINE	ACM # AIR CYCLE MACHINE
97	10-60506-7	SWITCH # SWITCH AY-THERMAL	SWITCH # SWITCH AY-THERMAL
98	10-60508-1	VALVE # 3-1/2" CHECK VALVE	VALVE # 3-1/2" CHECK VALVE
99	10-60508-2	VALVE # COLD AIR CHECK VALVE	VALVE # COLD AIR CHECK VALVE
100	10-60508-3	VALVE # 3-1/2" CHECK VALVE	VALVE # 3-1/2" CHECK VALVE
101	10-60521-2	IND.TEMP# FUEL TEMP. INDICATOR	IND.TEMP# FUEL TEMP. INDICATOR
102	10-60526-14	VALVE # VALVE CHECK	VALVE # VALVE CHECK
103	10-60526-17	VALVE # VALVE PUMP	VALVE # VALVE PUMP
104	10-60526-2	VALVE # VALVE CHECK	VALVE # VALVE CHECK
105	10-60526-4	VALVE # VALVE CHECK	VALVE # VALVE CHECK
106	10-60529-8	VALVE Ay# FUEL SHUTOFF VLV AY	VALVE Ay# FUEL SHUTOFF VLV AY
107	10-60529-9	VALVE AY# VALVE AY SHUT OFF	VALVE AY# VALVE AY SHUT OFF
108	10-60547-1	FAN-EC # FAN-EQUIPMENT COOLING	FAN-EC # FAN-EQUIPMENT COOLING
109	10-60551-1	VALVE AY# PRESS RELIEF VALVE	VALVE AY# PRESS RELIEF VALVE
110	10-60551-2	VALVE # PRESS RELIEF VALVE A-SYSTEM	VALVE # PRESS RELIEF VALVE A-SYSTEM
111	10-60551-3	VALVE AY# PRESS RELIEF VALVE	VALVE AY# PRESS RELIEF VALVE
112	10-60552-1	SWITCH # HYDR.PUMP LOW PRESS.SWITCH	SWITCH # HYDR.PUMP LOW PRESS.SWITCH
113	10-60552-22	SWITCH # HYDR.PUMP LOW PRESS.SWITCH	SWITCH # HYDR.PUMP LOW PRESS.SWITCH
114	10-60552-35	SWITCH # HYDR.PUMP LOW PRESS.SWITCH	SWITCH # HYDR.PUMP LOW PRESS.SWITCH
115	10-60554-30	HYD QTY # LIQUID QUANTITY TRANSMITTER	HYD QTY # LIQUID QUANTITY TRANSMITTER
116	10-60554-31	IND HYDR# HYDR.QTY INDICATOR SYST.A	IND HYDR# HYDR.QTY INDICATOR SYST.A
117	10-60554-32	IND BQTY# IND HYDR QTY SYST B	IND BQTY# IND HYDR QTY SYST B
118	10-60554-34	HYD QTY # LIQUID QUANTITY TRANSMITTER	HYD QTY # LIQUID QUANTITY TRANSMITTER
119	10-60554-37	HYD QTY # LIQUID QUANTITY TRANSMITTER	HYD QTY # LIQUID QUANTITY TRANSMITTER
120	10-60555-7	FILTERAY# FILTER AY HYDR CASE DRAIN	FILTERAY# FILTER AY HYDR CASE DRAIN
121	10-60556-20	PUMP HYD# PUMP HYDR B-SYSTEM ELECTRIC	PUMP HYD# PUMP HYDR B-SYSTEM ELECTRIC
122	10-60556-30	PUMP HYD# PUMP HYDR B-SYSTEM ELECTRIC	PUMP HYD# PUMP HYDR B-SYSTEM ELECTRIC
123	10-60556-32	PUMP HYD# HYDR PUMP B-SYSTEM ELECTRIC	PUMP HYD# HYDR PUMP B-SYSTEM ELECTRIC
124	10-60560-3	COMPENSA# COMPENSATOR CARTRIDGE HYD	COMPENSA# COMPENSATOR CARTRIDGE HYD
125	10-60561-1	VALVEHYD# VALVE DRAIN HYDRAULIC	VALVEHYD# VALVE DRAIN HYDRAULIC
126	10-60564-1	VALVE # SPEED BRAKE CONTROL VALVE	VALVE # SPEED BRAKE CONTROL VALVE
127	10-60581-3	VALVE AS# MOTOR OPERATED SELECTOR VALVE	VALVE AS# MOTOR OPERATED SELECTOR VALVE
128	10-60590-4	VALVE # STEERING CONTROL VALVE	VALVE # STEERING CONTROL VALVE
129	10-60593-1	FILTER Y# FILTER AY HYDR SINGLE STAGE	FILTER Y# FILTER AY HYDR SINGLE STAGE
130	10-60593-10	FILTER Y# FILTER AY HYDR SINGLE STAGE	FILTER Y# FILTER AY HYDR SINGLE STAGE
131	10-60593-13	FILTERAY# FILTER ASSY SINGLE STAGE.HYDR.	FILTERAY# FILTER ASSY SINGLE STAGE.HYDR.
132	10-60593-8	FILTER Y# FILTER AY HYDR SINGLE STAGE	FILTER Y# FILTER AY HYDR SINGLE STAGE
133	10-60593-9	FILTER Y# FILTER AY HYDR SINGLE STAGE	FILTER Y# FILTER AY HYDR SINGLE STAGE
134	10-60595-1	FILTERAY# FILTER AY HYDR SYSTEM FILLING	FILTERAY# FILTER AY HYDR SYSTEM FILLING
135	10-60598-1	VALVE,LE# LE CONTROL VALVE	VALVE,LE# LE CONTROL VALVE
136	10-60702-2	PROBE # PROBE PITOT	PROBE # PROBE PITOT
137	10-60702-3	PROBE # PROBE PITOT	PROBE # PROBE PITOT
138	10-60702-4	PROBE # PROBE PITOT	PROBE # PROBE PITOT
139	10-60702-5	PROBE # PROBE PITOT	PROBE # PROBE PITOT
140	10-60704-6	VALVE # VALVE EE CLNG AUTO FLOW CONT	VALVE # VALVE EE CLNG AUTO FLOW CONT
141	10-60704-7	VALVE # VALVE EE CLNG AUTO FLOW CONT	VALVE # VALVE EE CLNG AUTO FLOW CONT
142	10-60710-6	VALVE AS# MOTOR OPERATED SELECTOR VALVE	VALVE AS# MOTOR OPERATED SELECTOR VALVE
143	10-60722-11	XMTR # OIL QTY TRANSMITTER	XMTR # OIL QTY TRANSMITTER
144	10-60722-8	INDICATR# OIL QTY INDICATOR	INDICATR# OIL QTY INDICATOR
145	10-60726-5	DPC IND # DIFF PRESSURE CABIN INDICATOR	DPC IND # DIFF PRESSURE CABIN INDICATOR
146	10-60733-1	VALVE # CREW OXYGEN S/O VALVE	VALVE # CREW OXYGEN S/O VALVE
147	10-60735-1	IND.PRES# INDICATOR - OXY SYS PRESSURE	IND.PRES# INDICATOR - OXY SYS PRESSURE
148	10-60735-2	IND.PRES# INDICATOR - OXY SYS PRESSURE	IND.PRES# INDICATOR - OXY SYS PRESSURE
149	10-60751-1	ACTUATOR# ALT FLAP MOTOR	ACTUATOR# ALT FLAP MOTOR
150	10-60751-2	ACTUATOR# ALT FLAP MOTOR	ACTUATOR# ALT FLAP MOTOR
151	10-60755-6	IND-ROC # INDICATOR-RATE OF CLIMB	IND-ROC # INDICATOR-RATE OF CLIMB
152	10-60757-124	METER,AM# DC AMP METER	METER,AM# DC AMP METER
153	10-60757-128	IND.TEMP# CSD TEMP INDICATOR	IND.TEMP# CSD TEMP INDICATOR
154	10-60757-22	METER,V # AC VOLT METER	METER,V # AC VOLT METER
155	10-60757-23	METER,V # DC VOLT METER	METER,V # DC VOLT METER
156	10-60757-24	METER,AM# DC AMP METER	METER,AM# DC AMP METER
157	10-60757-25	MTR.FREQ# FREQUENCY METER	MTR.FREQ# FREQUENCY METER
158	10-60757-27	AMPMETER# METER - AC AMP	AMPMETER# METER - AC AMP
159	10-60757-28	IND.TEMP# CSD TEMP INDICATOR	IND.TEMP# CSD TEMP INDICATOR
160	10-60775-6	INDICATR# INDICATOR YAW DAMPER TEST	INDICATR# INDICATOR YAW DAMPER TEST
161	10-60783-4	VALVE # VALVE ASSY	VALVE # VALVE ASSY
162	10-60791-13	IND.FLAP# FLAP POS INDICATOR	IND.FLAP# FLAP POS INDICATOR
163	10-60797-2	UNIT # RUDDER AUX PCU	UNIT # RUDDER AUX PCU
164	10-60797-4	UNIT # RUDDER AUX PCU	UNIT # RUDDER AUX PCU
165	10-60797-8	UNIT # RUDDER AUX PCU	UNIT # RUDDER AUX PCU
166	10-60811-13	SOLENOID# SOLENOID VALVE AY CONTR PACKGE	SOLENOID# SOLENOID VALVE AY CONTR PACKGE
167	10-60811-8	VALVE # SOLENOID VALVE	VALVE # SOLENOID VALVE



№	Код	Наименование детали	Доп.инфо
168	10-60811-9	VALVESLD# SOLENOID VALVE AY CONTR PACKGE	VALVESLD# SOLENOID VALVE AY CONTR PACKGE
169	10-60900-9	REGULATR# OXYGEN PRESS REGULATOR	REGULATR# OXYGEN PRESS REGULATOR
170	10-60924-1	SWITCH # SWITCH THERMAL 250 DEGR F	SWITCH # SWITCH THERMAL 250 DEGR F
171	10-61066-11	CSD # CONSTANT SPEED DRIVE	CSD # CONSTANT SPEED DRIVE
172	10-61068-1	HEATER # HEATER ASSY WATER	HEATER # HEATER ASSY WATER
173	10-61072-7	XDCR # TRANSDUCER AIL+ELEV FORCE	XDCR # TRANSDUCER AIL+ELEV FORCE
174	10-61072-8	XDCR # TRANSDUCER AIL+ELEV FORCE	XDCR # TRANSDUCER AIL+ELEV FORCE
175	10-61093-181	X-DUCER # ANTI SKID WHEEL TRANSDUCER	X-DUCER # ANTI SKID WHEEL TRANSDUCER
176	10-61093-201	VALVE # ANTI-SKID VALVE	VALVE # ANTI-SKID VALVE
177	10-61093-303	ACU # ANTISKID CONTROL UNIT	ACU # ANTISKID CONTROL UNIT
178	10-61096-37	FIRE DET# FIRE DETECTOR, APU	FIRE DET# FIRE DETECTOR, APU
179	10-61096-47	FIRE DET# FIRE DETECTION ELEMENT ENGINE	FIRE DET# FIRE DETECTION ELEMENT ENGINE
180	10-61096-55	FIRE DET# DETECTOR ASSY-STRUT FIRE A.OVE	FIRE DET# DETECTOR ASSY-STRUT FIRE A.OVE
181	10-61096-56	FIRE DET# DETECTOR FIRE WARNING	FIRE DET# DETECTOR FIRE WARNING
182	10-61096-58	FIRE DET# DETECTOR FIRE WARNING	FIRE DET# DETECTOR FIRE WARNING
183	10-61096-59	MODULE # CONTROL MODULE FIRE OVERHEAT	MODULE # CONTROL MODULE FIRE OVERHEAT
184	10-61096-98	MODULE # MODULE FIRE OVERHEAT DETECTOR	MODULE # MODULE FIRE OVERHEAT DETECTOR
185	10-61209-15	PANEL-CP# PANEL-CABIN PRESSURE SELECT	PANEL-CP# PANEL-CABIN PRESSURE SELECT
186	10-61209-23	VALVE # VALVE-OUTFLOW SAFETY	VALVE # VALVE-OUTFLOW SAFETY
187	10-61209-300	VALVE # AFT OUTFLOW VALVE	VALVE # AFT OUTFLOW VALVE
188	10-61209-7	VALVE # AFT OUTFLOW VALVE	VALVE # AFT OUTFLOW VALVE
189	10-61213-1	VALVE # LANDING GEAR SELECTOR VALVE	VALVE # LANDING GEAR SELECTOR VALVE
190	10-61216-1	VALVE AY# VALVE ASSY	VALVE AY# VALVE ASSY
191	10-61219-10	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
192	10-61219-107	FSU # FUEL SUMMATION UNIT	FSU # FUEL SUMMATION UNIT
193	10-61219-11	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
194	10-61219-111	IND.-FQC# INDICATOR FUEL QTY CTR TANK	IND.-FQC# INDICATOR FUEL QTY CTR TANK
195	10-61219-112	FQTY IND# FUEL QTY IND WING STATION	FQTY IND# FUEL QTY IND WING STATION
196	10-61219-113	DCT-UNIT# DIGITAL CALIBRATION TRIM UNIT	DCT-UNIT# DIGITAL CALIBRATION TRIM UNIT
197	10-61219-114	FUEL COM# FUEL COMPENSATOR	FUEL COM# FUEL COMPENSATOR
198	10-61219-119	FUEL COM# FUEL COMPENSATOR	FUEL COM# FUEL COMPENSATOR
199	10-61219-121	FUEL COM# FUEL COMPENSATOR	FUEL COM# FUEL COMPENSATOR
200	10-61219-122	FSU # FUEL SUMMATION UNIT	FSU # FUEL SUMMATION UNIT
201	10-61219-13	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
202	10-61219-14	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
203	10-61219-16	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
204	10-61219-17	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
205	10-61219-18	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
206	10-61219-19	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
207	10-61219-20	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
208	10-61219-210	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
209	10-61219-211	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
210	10-61219-213	TANK UNI# TANK UNIT,FUEL	TANK UNI# TANK UNIT,FUEL
211	10-61219-214	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
212	10-61219-216	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
213	10-61219-217	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
214	10-61219-218	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
215	10-61219-220	TANK U # TANK UNIT,FUEL	TANK U # TANK UNIT,FUEL
216	10-61219-283	UNIT # TANK UNIT,FUEL	UNIT # TANK UNIT,FUEL
217	10-61219-44	TANKUNIT# TANKUNIT	TANKUNIT# TANKUNIT
218	10-61219-45	TANKUNIT# TANKUNIT	TANKUNIT# TANKUNIT
219	10-61219-83	UNIT # TANK UNIT,FUEL	UNIT # TANK UNIT,FUEL
220	10-61219-94	INDICTR # FUEL QTY IND.TANK 1 & 2 COCKPI	INDICTR # FUEL QTY IND.TANK 1 & 2 COCKPI
221	10-61219-96	INDICTR # FUEL QTY INDICATOR,CTR TANK	INDICTR # FUEL QTY INDICATOR,CTR TANK
222	10-61224-10	GEN.AC # GENERATOR-AC 40KVA	GEN.AC # GENERATOR-AC 40KVA
223	10-61224-12	GENERATR# GENERATOR AY-AC 40KVA ENG DRI	GENERATR# GENERATOR AY-AC 40KVA ENG DRI
224	10-61224-17	GCU # GENERATOR CONTROL UNIT	GCU # GENERATOR CONTROL UNIT
225	10-61224-2	GEN.AC # GENERATOR-AC 40KVA	GEN.AC # GENERATOR-AC 40KVA
226	10-61224-26	GCU # GENERATOR CONTROL UNIT	GCU # GENERATOR CONTROL UNIT
227	10-61224-27	GCU # GENERATOR CONTROL UNIT	GCU # GENERATOR CONTROL UNIT
228	10-61224-3	GCU # GENERATOR CONTROL UNIT	GCU # GENERATOR CONTROL UNIT
229	10-61224-4	PNL BUSP# BUS PROTECTION PANEL	PNL BUSP# BUS PROTECTION PANEL
230	10-61224-5	TRAFO # TRANSFORMER	TRAFO # TRANSFORMER
231	10-61224-7	XFORMER # CURRENT TRANSFORMER	XFORMER # CURRENT TRANSFORMER
232	10-61226-211	CARD PRO# CARD PROX-SWITCH	CARD PRO# CARD PROX-SWITCH
233	10-61233-11	COOLER # CSD OIL COOLER	COOLER # CSD OIL COOLER
234	10-61245-16	FUSE HYD# FUSE HYDRAULIC VLMTRC	FUSE HYD# FUSE HYDRAULIC VLMTRC
235	10-61245-23	FUSE # FUSE AY	FUSE # FUSE AY
236	10-61245-25	FUSE HYD# FUSE MLG WHEEL WELL AND AFT CA	FUSE HYD# FUSE MLG WHEEL WELL AND AFT CA
237	10-61286-1	ACTUATOR# ACT AY-ROTARY FWD AIRSTAIR DOO	ACTUATOR# ACT AY-ROTARY FWD AIRSTAIR DOO
238	10-61292-2	PUMP HYD# PUMP HYD AUX/STANDBY	PUMP HYD# PUMP HYD AUX/STANDBY
239	10-61292-4	PUMP HYD# PUMP HYD AUX/STANDBY	PUMP HYD# PUMP HYD AUX/STANDBY
240	10-61292-6	PUMP HYD# PUMP HYD AUX/STANDBY	PUMP HYD# PUMP HYD AUX/STANDBY
241	10-61307-104	TOILET # TOILET AY LAV C R/H	TOILET # TOILET AY LAV C R/H
242	10-61307-127	TOILET # TOILET AY LAV C R/H	TOILET # TOILET AY LAV C R/H
243	10-61307-54	TOILET # TOILET FLUSHING AY FWD	TOILET # TOILET FLUSHING AY FWD
244	10-61307-55	TOILET # TOILET ASSY AFT LEFT HAND	TOILET # TOILET ASSY AFT LEFT HAND
245	10-61312-10	SCREW AY# BALL SCREW 3+6	SCREW AY# BALL SCREW 3+6
246	10-61312-11	SCREW AY# BALL SCREW ASSY 4+5	SCREW AY# BALL SCREW ASSY 4+5
247	10-61312-12	SCREW AY# BALL SCREW 3+6	SCREW AY# BALL SCREW 3+6
248	10-61312-13	SCREW AY# TE FLAP BALL NUT + SCREW 4+5	SCREW AY# TE FLAP BALL NUT + SCREW 4+5
249	10-61312-2	SCREW AY# TE FLAP BALL NUT + SCREW 3+6	SCREW AY# TE FLAP BALL NUT + SCREW 3+6
250	10-61312-20	SCREW AY# BALL SCREW 3+6	SCREW AY# BALL SCREW 3+6
251	10-61312-22	SCREW AY# BALL SCREW ASSY 1+8 / 2+7	SCREW AY# BALL SCREW ASSY 1+8 / 2+7
252	10-61312-3	SCREW AY# TE FLAP BALL NUT + SCREW 4+5	SCREW AY# TE FLAP BALL NUT + SCREW 4+5



№	Код	Наименование детали	Доп.инфо
253	10-61312-4	SCREW AY# BALL SCREW ASSY 1+8 /2+7	SCREW AY# BALL SCREW ASSY 1+8 /2+7
254	10-61312-7	SCREW AY# BALL SCREW 3+6	SCREW AY# BALL SCREW 3+6
255	10-61312-8	SCREW AY# BALL SCREW ASSY 4+5	SCREW AY# BALL SCREW ASSY 4+5
256	10-61312-9	SCREW AY# BALL SCREW ASSY 1+8 / 2+7	SCREW AY# BALL SCREW ASSY 1+8 / 2+7
257	10-61318-28	SWITCH # SWITCH	SWITCH # SWITCH
258	10-61318-29	SWITCH # SWITCH	SWITCH # SWITCH
259	10-61318-31	SWITCH # SWITCH ASSY-ENG FIRE	SWITCH # SWITCH ASSY-ENG FIRE
260	10-61318-32	SWITCH # SWITCH	SWITCH # SWITCH
261	10-61329-12	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
262	10-61329-16	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
263	10-61329-2	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
264	10-61329-21	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
265	10-61329-22	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
266	10-61329-25	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
267	10-61329-26	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
268	10-61330-60	LT-MCD # LIGHT AY-MASTER CAUTION DISPL.	LT-MCD # LIGHT AY-MASTER CAUTION DISPL.
269	10-61330-61	LT-MCD # LIGHT AY-MASTER CAUTION DISPL.	LT-MCD # LIGHT AY-MASTER CAUTION DISPL.
270	10-61333-3	ANT VOR # VOR/ILS ANTENNA	ANT VOR # VOR/ILS ANTENNA
271	10-61337-8	CABLE # CABLE GRND SPEED BRAKE INTERL	CABLE # CABLE GRND SPEED BRAKE INTERL
272	10-61359-2	ACTUATOR# AUTOM.SPEED BRAKE ACT	ACTUATOR# AUTOM.SPEED BRAKE ACT
273	10-61359-3	ACTUATOR# AUTOM.SPEED BRAKE ACT	ACTUATOR# AUTOM.SPEED BRAKE ACT
274	10-61369-6	ACTUATOR# ACTUATOR MACH TRIM	ACTUATOR# ACTUATOR MACH TRIM
275	10-61369-7	ACTUATOR# ACTUATOR MACH TRIM	ACTUATOR# ACTUATOR MACH TRIM
276	10-61383-2	INDICATR# INDICATOR GAUGE WATER QUANTITY	INDICATR# INDICATOR GAUGE WATER QUANTITY
277	10-61383-3	XMTR # TRANSMITTER WATER QUANTITY	XMTR # TRANSMITTER WATER QUANTITY
278	10-61383-4	INDICATR# INDICATOR GAUGE WATER QUANTITY	INDICATR# INDICATOR GAUGE WATER QUANTITY
279	10-61389-1	VALVE # VALVE Float Ctr Wing Tank	VALVE # VALVE Float Ctr Wing Tank
280	10-61458-13	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
281	10-61458-15	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
282	10-61458-16	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
283	10-61458-18	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
284	10-61458-19	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
285	10-61458-8	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
286	10-61472-10	MOTOR # MOTOR STABILIZER TRIM AP	MOTOR # MOTOR STABILIZER TRIM AP
287	10-61777-1	FILLER # FILLER ASSY OXYGEN	FILLER # FILLER ASSY OXYGEN
288	10-61794-1	PUMP EDP# PUMP HYDRAULIC EDP	PUMP EDP# PUMP HYDRAULIC EDP
289	10-61794-2	PUMP EDP# PUMP HYDRAULIC EDP	PUMP EDP# PUMP HYDRAULIC EDP
290	10-61816-5	LIMITER # LIMITER AILERON FORCE	LIMITER # LIMITER AILERON FORCE
291	10-61818-18	MASI # MACH AIRSPEED INDICATOR	MASI # MACH AIRSPEED INDICATOR
292	10-61826-8	ALT IND # INDICATOR ALTIMETER ELECTRICAL	ALT IND # INDICATOR ALTIMETER ELECTRICAL
293	10-61833-1	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
294	10-61833-2	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
295	10-61833-3	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
296	10-61833-4	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
297	10-61833-6	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
298	10-61841-9	X-MTR FL# FLAP POS.TRANSMITTER	X-MTR FL# FLAP POS.TRANSMITTER
299	10-61873-6	TANK # TANK POTABLE WATER	TANK # TANK POTABLE WATER
300	10-61897-1	VALVE # VALVE ASSY - PRESSURE RELIEF	VALVE # VALVE ASSY - PRESSURE RELIEF
301	10-61897-6	VALVE # VALVE ASSY - PRESSURE RELIEF	VALVE # VALVE ASSY - PRESSURE RELIEF
302	10-61898-1	ARRESTOR# FLAME ARRESTOR	ARRESTOR# FLAME ARRESTOR
303	10-61926-4	IND.FLAP# FLAP POS INDICATOR	IND.FLAP# FLAP POS INDICATOR
304	10-61976-1	PUMP # APU FUEL PUMP AY	PUMP # APU FUEL PUMP AY
305	10-61985-5	ACTUATOR# A/P ACTUATOR AIL/ELEV.	ACTUATOR# A/P ACTUATOR AIL/ELEV.
306	10-62008-1	VALVE # CHECK VALVE 5TH STAGE	VALVE # CHECK VALVE 5TH STAGE
307	10-62008-16	COOLER # PRECOOLER BLEED AIR SYSTEM	COOLER # PRECOOLER BLEED AIR SYSTEM
308	10-62008-23	REGULATR# BLEED AIR REGULATOR	REGULATR# BLEED AIR REGULATOR
309	10-62008-24	SENSOR # SENSOR-PRECOOLER CONTROL VALVE	SENSOR # SENSOR-PRECOOLER CONTROL VALVE
310	10-62008-25	SENSOR # SENSOR - 230 C THERMOSTAT	SENSOR # SENSOR - 230 C THERMOSTAT
311	10-62008-30	VALVE # PRESS.REGULATING SHUTOFF VALVE	VALVE # PRESS.REGULATING SHUTOFF VALVE
312	10-62008-31	VALVE # HIGH STAGE VALVE REGULATOR	VALVE # HIGH STAGE VALVE REGULATOR
313	10-62008-32	VALVE # HIGH STAGE VALVE	VALVE # HIGH STAGE VALVE
314	10-62008-33	VALVE # PRECOOLER FAN AIR VALVE	VALVE # PRECOOLER FAN AIR VALVE
315	10-62008-37	REGULATR# BLEED AIR REGULATOR	REGULATR# BLEED AIR REGULATOR
316	10-62008-39	VALVE # HIGH STAGE VALVE REGULATOR	VALVE # HIGH STAGE VALVE REGULATOR
317	10-62009-1	REC FAN # RECIRCULATION FAN	REC FAN # RECIRCULATION FAN
318	10-62010-21	ACTUATOR# ACTUATOR AUTOTHROTTLE	ACTUATOR# ACTUATOR AUTOTHROTTLE
319	10-62010-4	SWITCH # SWITCH MECHANISM TORQUE AT	SWITCH # SWITCH MECHANISM TORQUE AT
320	10-62017-30	COMPUTER# COMPUTER AUTOTHROTTLE	COMPUTER# COMPUTER AUTOTHROTTLE
321	10-62018-7	VALVE # THRUST REV. CONTROL VALVE	VALVE # THRUST REV. CONTROL VALVE
322	10-62018-8	VALVE # THRUST REV. CONTROL VALVE	VALVE # THRUST REV. CONTROL VALVE
323	10-62025-1	ACTUATOR# RUDDER TRIM ACTUATOR	ACTUATOR# RUDDER TRIM ACTUATOR
324	10-62025-3	ACTUATOR# RUDDER TRIM ACTUATOR	ACTUATOR# RUDDER TRIM ACTUATOR
325	10-62026-1	ACTUATOR# AILERON TRIM ACTUATOR	ACTUATOR# AILERON TRIM ACTUATOR
326	10-62027-1	ACTUATOR# ROTARY ACT RUD/PEDAL STEERING	ACTUATOR# ROTARY ACT RUD/PEDAL STEERING
327	10-62028-3	INDICATR# INDICATOR N1	INDICATR# INDICATOR N1
328	10-62029-3	VALVE # BRAKE METERING VALVE	VALVE # BRAKE METERING VALVE
329	10-62031-1	INDICATR# INDICATOR N2	INDICATR# INDICATOR N2
330	10-62033-4	ACTUATOR# ACTUATOR ASSY-ELEC.	ACTUATOR# ACTUATOR ASSY-ELEC.
331	10-62035-1	IND RUDT# RUDDER TRIM INDICATOR	IND RUDT# RUDDER TRIM INDICATOR
332	10-62035-2	IND RUDT# RUDDER TRIM INDICATOR	IND RUDT# RUDDER TRIM INDICATOR
333	10-62038-237	MCP # MODE CONTROL PANEL	MCP # MODE CONTROL PANEL
334	10-62038-3	FCC # FLIGHT CONTROL COMPUTER	FCC # FLIGHT CONTROL COMPUTER
335	10-62038-4	FCC # FLIGHT CONTROL COMPUTER	FCC # FLIGHT CONTROL COMPUTER
336	10-62039-2	VALVE # LANDING GEAR TRANSFER VALVE	VALVE # LANDING GEAR TRANSFER VALVE
337	10-62042-001-04	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT



№	Код	Наименование детали	Доп.инфо
338	10-62042-002-02	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
339	10-62042-101	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT
340	10-62042-102	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT
341	10-62042-201	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT
342	10-62042-301-01	ADAP IRS# DIGITAL ANALOG ADAPTER IRS	ADAP IRS# DIGITAL ANALOG ADAPTER IRS
343	10-62043-2	VALVE AY# T.E. FLAP PRIORITY VALVE	VALVE AY# T.E. FLAP PRIORITY VALVE
344	10-62044-001	CDU FMCS# CONTROL DISPLAY UNIT FMS	CDU FMCS# CONTROL DISPLAY UNIT FMS
345	10-62044-401-03	FMC # FLIGHT MANAGEMENT COMPUTER	FMC # FLIGHT MANAGEMENT COMPUTER
346	10-62044-401-07	FMC # FLIGHT MANAGEMENT COMPUTER	FMC # FLIGHT MANAGEMENT COMPUTER
347	10-62045-1	FUSE # HYDR FUSE BRAKE	FUSE # HYDR FUSE BRAKE
348	10-62047-5	AOA SENS# ANGLE OF ATTACK SENSOR	AOA SENS# ANGLE OF ATTACK SENSOR
349	10-62048-101	LIGHT AY# LIGHT ASSY EXIT	LIGHT AY# LIGHT ASSY EXIT
350	10-62049-4	PUMP # FUEL BOOSTER PUMP	PUMP # FUEL BOOSTER PUMP
351	10-62054-1	INDICATR# INDICATOR	INDICATR# INDICATOR
352	10-62058-6	ANNUNCIA# AUTOFLIGHT STATUS ANNUNCIATOR	ANNUNCIA# AUTOFLIGHT STATUS ANNUNCIATOR
353	10-62058-7	ANNUNCIA# THRUST MODE ANNUNCIATOR	ANNUNCIA# THRUST MODE ANNUNCIATOR
354	10-62065-1	PTU # POWER TRANSFER UNIT HYD SYS	PTU # POWER TRANSFER UNIT HYD SYS
355	10-62088-2	FILTR AY# FILTER ASSY	FILTR AY# FILTER ASSY
356	10-62090-110	REU # REMOTE ELECTRONIC UNIT	REU # REMOTE ELECTRONIC UNIT
357	10-62090-12	REU # REMOTE ELECTRONIC UNIT	REU # REMOTE ELECTRONIC UNIT
358	10-62090-30	SPEAKER # COCKPIT SPEAKER	SPEAKER # COCKPIT SPEAKER
359	10-62090-45	ACP # AUDIO CONTROL PANEL	ACP # AUDIO CONTROL PANEL
360	10-62090-60	ACP # AUDIO CONTROL PANEL	ACP # AUDIO CONTROL PANEL
361	10-62090-61	ACP # AUDIO CONTROL PANEL	ACP # AUDIO CONTROL PANEL
362	10-62090-64	ACP # AUDIO CONTROL PANEL	ACP # AUDIO CONTROL PANEL
363	10-62092-2	VALVE # VALVE SAFETY	VALVE # VALVE SAFETY
364	10-62092-3	VALVE # VALVE SAFETY	VALVE # VALVE SAFETY
365	10-62153-1	DADC # DIGITAL AIR DATA COMPUTER	DADC # DIGITAL AIR DATA COMPUTER
366	10-62153-3	DADC # DIGITAL AIR DATA COMPUTER	DADC # DIGITAL AIR DATA COMPUTER
367	10-62167-2	PUMP HYD# PUMP HYDRAULIC,EDP/ADP	PUMP HYD# PUMP HYDRAULIC,EDP/ADP
368	10-62178-102	PANEL # PANEL EIS PRIMARY DISPLAY	PANEL # PANEL EIS PRIMARY DISPLAY
369	10-62178-104	PANEL # PANEL EIS PRIMARY DISPLAY	PANEL # PANEL EIS PRIMARY DISPLAY
370	10-62178-202	PANEL # PANEL EIS SECONDARY DISPLAY	PANEL # PANEL EIS SECONDARY DISPLAY
371	10-62183-1	ETC # ELECTRONIC TEMP CONTROL UNIT	ETC # ELECTRONIC TEMP CONTROL UNIT
372	10-62187-1	ACCESSOR# COMP.OVERHEAT ACC.UNIT M237	ACCESSOR# COMP.OVERHEAT ACC.UNIT M237
373	10-62187-2	ACCESSOR# COMP.OVERHEAT ACC.UNIT M237	ACCESSOR# COMP.OVERHEAT ACC.UNIT M237
374	10-62190-3	INDICATR# EGT INDICATOR APU	INDICATR# EGT INDICATOR APU
375	10-62194-002	MCDU # MULTIPURPOSE CONTROL DU	MCDU # MULTIPURPOSE CONTROL DU
376	10-62199-103	APUCU # APU CONTROL UNIT APS2000	APUCU # APU CONTROL UNIT APS2000
377	10-62199-108	FADEC AP# FADEC APU APS2000	FADEC AP# FADEC APU APS2000
378	10-62199-109	FADEC AP# FADEC APU APS2000	FADEC AP# FADEC APU APS2000
379	10-62204-11	FUSE ASS# FUSE HYDR VLMTRC	FUSE ASS# FUSE HYDR VLMTRC
380	10-62204-12	FUSE STB# fuse hydraulic stby assy	FUSE STB# fuse hydraulic stby assy
381	10-62204-13	FUSE HYD# FUSE ASSY	FUSE HYD# FUSE ASSY
382	10-62204-15	FUSE # FUSE AY	FUSE # FUSE AY
383	10-62204-17	FUSE AY # FUSE ASSY	FUSE AY # FUSE ASSY
384	10-62204-5	FUSE # FUSE AY	FUSE # FUSE AY
385	10-62204-7	FUSE # HYDR FUSE BRAKE	FUSE # HYDR FUSE BRAKE
386	10-62205-1	SWITCH # SWITCH PRESSURE	SWITCH # SWITCH PRESSURE
387	10-62213-1	VALVE # VALVE ASSY WASTE SYST.LAV.B/C	VALVE # VALVE ASSY WASTE SYST.LAV.B/C
388	10-62219-1	VALVE # BOOST PUMP MANUAL S/O VALVE	VALVE # BOOST PUMP MANUAL S/O VALVE
389	10-62220-2	SWITCH # RUDDER TRIM CONTROL SWITCH	SWITCH # RUDDER TRIM CONTROL SWITCH
390	10-62225-004	FMC # Flight Management Computer	FMC # Flight Management Computer
391	10-62253-2	COUPLER # COUPLER YAW DAMPER	COUPLER # COUPLER YAW DAMPER
392	10-62255-1	REDUCER # rudder pressure reducer	REDUCER # rudder pressure reducer
393	10-631045-2	EXCITER # IGNITION EXCITER UNIT TFN-30	EXCITER # IGNITION EXCITER UNIT TFN-30
394	100-10-610-02	MIXER # WATER MIXER	MIXER # WATER MIXER
395	100-10-611-02	FAUCET # FAUCET ASSY WATER SYSTEM	FAUCET # FAUCET ASSY WATER SYSTEM
396	100-10.610.02	MIXER # WATER MIXER	MIXER # WATER MIXER
397	100-10.611-02	FAUCET # FAUCET ASSY WATER SYSTEM	FAUCET # FAUCET ASSY WATER SYSTEM
398	100-20-287	MIXER # WATER MIXER	MIXER # WATER MIXER
399	10031-0000-01	INDICATR# OIL QTY INDICATOR	INDICATR# OIL QTY INDICATOR
400	10033-0000-02	IND HYDR# HYDR.QTY INDICATOR SYST.A	IND HYDR# HYDR.QTY INDICATOR SYST.A
401	10034-0000-02	IND BQTY# IND HYDR QTY SYST B	IND BQTY# IND HYDR QTY SYST B
402	10035-2000-02	FSU # FUEL SUMMATION UNIT	FSU # FUEL SUMMATION UNIT
403	10035-2000-03	FSU # FUEL SUMMATION UNIT	FSU # FUEL SUMMATION UNIT
404	10037-1000-0154	INDICTR # FUEL QTY IND.TANK 1 & 2 COCKPI	INDICTR # FUEL QTY IND.TANK 1 & 2 COCKPI
405	10037-1000-0156	INDICTR # FUEL QTY INDICATOR,CTR TANK	INDICTR # FUEL QTY INDICATOR,CTR TANK
406	10101000C-J	VALVE # VALVE ASSY WASTE DRAIN SYS	VALVE # VALVE ASSY WASTE DRAIN SYS
407	10101000C-N	VALVE # VALVE ASSY WASTE SYST.LAV.B/C	VALVE # VALVE ASSY WASTE SYST.LAV.B/C
408	10101000CJ	VALVE # VALVE ASSY WASTE DRAIN SYS	VALVE # VALVE ASSY WASTE DRAIN SYS
409	10101000CN	VALVE # VALVE ASSY WASTE SYST.LAV.B/C	VALVE # VALVE ASSY WASTE SYST.LAV.B/C
410	10166N01N00	IND RUDT# RUDDER TRIM INDICATOR	IND RUDT# RUDDER TRIM INDICATOR
411	102LA2AG	SENSOR # SENSOR TOTAL AIR TEMPERATURE	SENSOR # SENSOR TOTAL AIR TEMPERATURE
412	10470-2	PUMP HYD# PUMP HYD AUX/STANDBY	PUMP HYD# PUMP HYD AUX/STANDBY
413	10470-6	PUMP HYD# PUMP HYD AUX/STANDBY	PUMP HYD# PUMP HYD AUX/STANDBY
414	10525000	COOLER # OIL COOLER ASSY	COOLER # OIL COOLER ASSY
415	106788A144	ACTUATOR# ACTUATOR APU FUEL S/O VALVE	ACTUATOR# ACTUATOR APU FUEL S/O VALVE
416	106788B200	ACTUATOR# ACTUATOR, S/O-VALVE	ACTUATOR# ACTUATOR, S/O-VALVE
417	107484-5	VALVE # HIGH STAGE VALVE REGULATOR	VALVE # HIGH STAGE VALVE REGULATOR
418	107484-6	VALVE # HIGH STAGE VALVE REGULATOR	VALVE # HIGH STAGE VALVE REGULATOR
419	107484-7	VALVE # HIGH STAGE VALVE REGULATOR	VALVE # HIGH STAGE VALVE REGULATOR
420	107492-2	REGULATR# BLEED AIR REGULATOR	REGULATR# BLEED AIR REGULATOR
421	107492-3	REGULATR# BLEED AIR REGULATOR	REGULATR# BLEED AIR REGULATOR
422	108032-8	PRESS RE# BLEED AIR PRESS REGULATOR	PRESS RE# BLEED AIR PRESS REGULATOR



№	Код	Наименование детали	Доп.инфо
423	108032-9	PRESS RE# BLEED AIR PRESS REGULATOR	PRESS RE# BLEED AIR PRESS REGULATOR
424	108032-9-1	PRESS RE# BLEED AIR PRESS REGULATOR	PRESS RE# BLEED AIR PRESS REGULATOR
425	109486-1	VALVE # VALVE, SHUTOFF LOAD CTRL, APU	VALVE # VALVE, SHUTOFF LOAD CTRL, APU
426	109486-1-1	VALVE # VALVE, SHUTOFF LOAD CTRL, APU	VALVE # VALVE, SHUTOFF LOAD CTRL, APU
427	109486-4	VALVE # VALVE, SHUTOFF LOAD CTRL, APU	VALVE # VALVE, SHUTOFF LOAD CTRL, APU
428	109486-4-1	VALVE # VALVE, SHUTOFF LOAD CTRL, APU	VALVE # VALVE, SHUTOFF LOAD CTRL, APU
429	109486-5-1	VALVE # VALVE, SHUTOFF LOAD CTRL, APU	VALVE # VALVE, SHUTOFF LOAD CTRL, APU
430	109486-6-1	VALVE # VALVE, SHUTOFF LOAD CTRL, APU	VALVE # VALVE, SHUTOFF LOAD CTRL, APU
431	109486-8	VALVE # VALVE, SHUTOFF LOAD CTRL, APU	VALVE # VALVE, SHUTOFF LOAD CTRL, APU
432	11-5831-1	LIGHT AY# LIGHT ASSY	LIGHT AY# LIGHT ASSY
433	111RAA3	ACTUATOR# ACTUATOR AUTOTHROTTLE	ACTUATOR# ACTUATOR AUTOTHROTTLE
434	1121S6-1-5	VALVE # VALVE REGULATOR	VALVE # VALVE REGULATOR
435	1121S6-1-5	VALVE # VALVE REGULATOR	VALVE # VALVE REGULATOR
436	1122027	BULB # BULB	BULB # BULB
437	11290-2	VALVE # VALVE CHECK BLOWER EE COOLING	VALVE # VALVE CHECK BLOWER EE COOLING
438	1145-0035	XMTR # TRANSMITTER WATER QUANTITY	XMTR # TRANSMITTER WATER QUANTITY
439	1173T183-2	SWITCH # SWITCH THERMAL 190 DEGR F	SWITCH # SWITCH THERMAL 190 DEGR F
440	1173T212	SWITCH # SWITCH THERMAL 250 DEGR F	SWITCH # SWITCH THERMAL 250 DEGR F
441	1211175-007	ACTUATOR# VSV ACTUATOR	ACTUATOR# VSV ACTUATOR
442	1211175-011	ACTUATOR# VSV ACTUATOR	ACTUATOR# VSV ACTUATOR
443	121664-3	ACTUATOR# BALLSCREW ACTUATOR VBV	ACTUATOR# BALLSCREW ACTUATOR VBV
444	121664-4	ACTUATOR# BALLSCREW ACTUATOR VBV	ACTUATOR# BALLSCREW ACTUATOR VBV
445	121664-5	ACTUATOR# BALLSCREW ACTUATOR VBV	ACTUATOR# BALLSCREW ACTUATOR VBV
446	121664-8	ACTUATOR# BALLSCREW ACTUATOR VBV	ACTUATOR# BALLSCREW ACTUATOR VBV
447	121666-7	ACTUATOR# MASTER BALLSCREW ACTUATOR	ACTUATOR# MASTER BALLSCREW ACTUATOR
448	1225P6-1	SWITCH # HYDR.PUMP LOW PRESS.SWITCH	SWITCH # HYDR.PUMP LOW PRESS.SWITCH
449	1225P6-2	SWITCH # HYDR.PUMP LOW PRESS.SWITCH	SWITCH # HYDR.PUMP LOW PRESS.SWITCH
450	123266-2-1	VALVE # 3-1/2" CHECK VALVE	VALVE # 3-1/2" CHECK VALVE
451	123268-1-1	VALVE # COLD AIR CHECK VALVE	VALVE # COLD AIR CHECK VALVE
452	123558-1-1	VALVE # 3-1/2" CHECK VALVE	VALVE # 3-1/2" CHECK VALVE
453	123558-1-3	VALVE # 3-1/2" CHECK VALVE	VALVE # 3-1/2" CHECK VALVE
454	123558-1-4	VALVE # 3-1/2" CHECK VALVE	VALVE # 3-1/2" CHECK VALVE
455	123CH1	SENSOR # SENSOR - LOW FLOW	SENSOR # SENSOR - LOW FLOW
456	123CH1A	SENSOR # SENSOR - LOW FLOW	SENSOR # SENSOR - LOW FLOW
457	124-832	METER,V # AC VOLT METER	METER,V # AC VOLT METER
458	124-833	METER,V # DC VOLT METER	METER,V # DC VOLT METER
459	124-834	METER,AM# DC AMP METER	METER,AM# DC AMP METER
460	124-835	MTR.FREQ# FREQUENCY METER	MTR.FREQ# FREQUENCY METER
461	124-837	AMPMETER# METER - AC AMP	AMPMETER# METER - AC AMP
462	124-838	IND.TEMP# CSD TEMP INDICATOR	IND.TEMP# CSD TEMP INDICATOR
463	124.832	METER,V # Voltmeter	METER,V # Voltmeter
464	124.833	METER,V # DC VOLT METER	METER,V # DC VOLT METER
465	124.834	METER,AM# DC AMP METER	METER,AM# DC AMP METER
466	124.835	MTR.FREQ# METER FREQUENCY	MTR.FREQ# METER FREQUENCY
467	124.837	AMPMETER# METER - AC AMP	AMPMETER# METER - AC AMP
468	124.838	IND.TEMP# CSD TEMP INDICATOR	IND.TEMP# CSD TEMP INDICATOR
469	124835	MTR.FREQ# FREQUENCY METER	MTR.FREQ# FREQUENCY METER
470	124838	IND.TEMP# CSD TEMP INDICATOR	IND.TEMP# CSD TEMP INDICATOR
471	127032-001	RELAY # RELAY	RELAY # RELAY
472	129666-2	SENSOR # SENSOR-PRECOOLER CONTROL VALVE	SENSOR # SENSOR-PRECOOLER CONTROL VALVE
473	129694-1	SENSOR # SENSOR - 230 C THERMOSTAT	SENSOR # SENSOR - 230 C THERMOSTAT
474	129694-2	SENSOR # SENSOR - 230 C THERMOSTAT	SENSOR # SENSOR - 230 C THERMOSTAT
475	129694-3	SENSOR # SENSOR - 230 C THERMOSTAT	SENSOR # SENSOR - 230 C THERMOSTAT
476	12D117-13	VALVE # VALVE ASSY	VALVE # VALVE ASSY
477	12D117-4	VALVE # VALVE ASSY	VALVE # VALVE ASSY
478	130595	VALVE # BOOST PUMP MANUAL S/O VALVE	VALVE # BOOST PUMP MANUAL S/O VALVE
479	1311-510	VALVE # IDLE RESET VALVE	VALVE # IDLE RESET VALVE
480	1311-526	VALVE # IDLE RESET VALVE	VALVE # IDLE RESET VALVE
481	1316200-3	VALVE # BRAKE METERING VALVE	VALVE # BRAKE METERING VALVE
482	1317M47G01	NOZZLE # FUEL NOZZLE	NOZZLE # FUEL NOZZLE
483	1317M47G16	NOZZLE # FUEL NOZZLE (STARTER)	NOZZLE # FUEL NOZZLE (STARTER)
484	1317M47G17	NOZZLE # FUEL NOZZLE	NOZZLE # FUEL NOZZLE
485	13TX-0115-A	XMTR POS# TRANSM. POS. ELEV. CONTROL	XMTR POS# TRANSM. POS. ELEV. CONTROL
486	13TX-5115-A	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
487	13TX-5315-A	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
488	13TX0115A	XMTR POS# POSITION TRANSMITTER	XMTR POS# POSITION TRANSMITTER
489	13TX5115A	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
490	13TX5315A	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
491	14132-1	BACKREST# BACKREST ASSY UPPER 1.OBS	BACKREST# BACKREST ASSY UPPER 1.OBS
492	144-148-000-021	SENSOR # SENSOR AY VIBRATION PICK UP N1	SENSOR # SENSOR AY VIBRATION PICK UP N1
493	144-405-000-011	SENSOR # VIBRATION SENSOR BRG.5	SENSOR # VIBRATION SENSOR BRG.5
494	144-405-000-013	SENSOR # VIBRATION SENSOR BRG.5	SENSOR # VIBRATION SENSOR BRG.5
495	144805-1	PUMP # WATER PUMP AND MOTOR ASSEMBLY	PUMP # WATER PUMP AND MOTOR ASSEMBLY
496	1459M27P05	CONTROL # MAIN ENGINE CONTROL CFM56-3C1	CONTROL # MAIN ENGINE CONTROL CFM56-3C1
497	1459M27P06	CONTROL # MAIN ENGINE CONTROL CFM56-3C1	CONTROL # MAIN ENGINE CONTROL CFM56-3C1
498	147LC10	IND.TEMP# INDICATOR-TEMP	IND.TEMP# INDICATOR-TEMP
499	149LA6	METER,AM# DC AMP METER	METER,AM# DC AMP METER
500	149LA7	AMPMETER# METER - AC AMP	AMPMETER# METER - AC AMP
501	149LF10	MTR.FREQ# METER-FREQUENCY	MTR.FREQ# METER-FREQUENCY
502	15-40F	PBE # PBE,OPERATIONEL TSO C116	PBE # PBE,OPERATIONEL TSO C116
503	15-40F-11	PBE # PBE GASEOUS OXYGEN	PBE # PBE GASEOUS OXYGEN
504	15-40F11	PBE # PBE GASEOUS OXYGEN	PBE # PBE GASEOUS OXYGEN
505	152050-2-1	COOLER # COOLER ASSY-OIL, APU	COOLER # COOLER ASSY-OIL, APU
506	152050-5-1	COOLER # COOLER ASSY-OIL, APU	COOLER # COOLER ASSY-OIL, APU
507	152050-6-1	COOLER # COOLER ASSY-OIL, APU	COOLER # COOLER ASSY-OIL, APU



"STRELA" Limited Liability Company

ПОСТАВКА И РЕМОНТ АВИАЦИОННЫХ КОМПОНЕНТОВ И ОБОРУДОВАНИЯ

Тел/факс (495) 139-60-45 info@strela-at.ru

№	Код	Наименование детали	Доп.инфо
508	1521M72P01	ACTUATOR# VSV ACTUATOR	ACTUATOR# VSV ACTUATOR
509	1527M90P01	VALVE # AIR BLEED STARTING VALVE	VALVE # AIR BLEED STARTING VALVE
510	152LMA23	INDICATR# EGT INDICATOR APU	INDICATR# EGT INDICATOR APU
511	1540F	PBE # PBE,OPERATIONEL TSO C116	PBE # PBE,OPERATIONEL TSO C116
512	15434-11	VALVE # IDLE RESET VALVE	VALVE # IDLE RESET VALVE
513	154BY	SENSOR # TEMP SENSOR T12	SENSOR # TEMP SENSOR T12
514	158300-101	A/P ACTU# A/P ACTUATOR AIL/ELEV.	A/P ACTU# A/P ACTUATOR AIL/ELEV.
515	16007-035	VALVE # CHECK VALVE ASSY	VALVE # CHECK VALVE ASSY
516	16007-045	VALVE # CHECK VALVE ASSY	VALVE # CHECK VALVE ASSY
517	160544-1	PLUG # IGNITER PLUG	PLUG # IGNITER PLUG
518	162300-103	COMPUTER# RUDDER & ELEV. FEEL COMPUTER	COMPUTER# RUDDER & ELEV. FEEL COMPUTER
519	162BL505	IND-CT # INDICATOR-CABIN TEMPERATURE	IND-CT # INDICATOR-CABIN TEMPERATURE
520	162BL801	IND. TEMP# FUEL TEMP. INDICATOR	IND. TEMP# FUEL TEMP. INDICATOR
521	162BL804A	INDICATR# OIL TEMP INDICATOR	INDICATR# OIL TEMP INDICATOR
522	162BL903	IND-CT # INDICATOR-CABIN TEMPERATURE	IND-CT # INDICATOR-CABIN TEMPERATURE
523	1646-1-6	CONTROLR# CONTROLLER,FLUORESCENT LAMP	CONTROLR# CONTROLLER,FLUORESCENT LAMP
524	1646-1-7	CONTROLR# CONTROLLER-FLUORESCENT LAMP	CONTROLR# CONTROLLER-FLUORESCENT LAMP
525	1651	VALVE # PRESS RELIEF VALVE A-SYSTEM	VALVE # PRESS RELIEF VALVE A-SYSTEM
526	1652	VALVE AY# PRESS RELIEF VALVE	VALVE AY# PRESS RELIEF VALVE
527	165W01020	PUMP HYD# PUMP HYD AUX/STANDBY	PUMP HYD# PUMP HYD AUX/STANDBY
528	166891-01-01	CDU FMCS# CONTROL DISPLAY UNIT FMS	CDU FMCS# CONTROL DISPLAY UNIT FMS
529	167550-01-01	ANCDU # ALT NAV CONTROL DISPLAY UNIT	ANCDU # ALT NAV CONTROL DISPLAY UNIT
530	167726-07-01	FMC # FLIGHT MANAGEMENT COMPUTER	FMC # FLIGHT MANAGEMENT COMPUTER
531	167726-14-01	FMC # FLIGHT MANAGEMENT COMPUTER	FMC # FLIGHT MANAGEMENT COMPUTER
532	168661-3	COOLER # OIL COOLER ASSY	COOLER # OIL COOLER ASSY
533	168661-3-F	COOLER # OIL COOLER ASSY	COOLER # OIL COOLER ASSY
534	168661-3-G	COOLER # OIL COOLER ASSY	COOLER # OIL COOLER ASSY
535	168661-3-H	COOLER # OIL COOLER ASSY	COOLER # OIL COOLER ASSY
536	168661-3F	COOLER # OIL COOLER ASSY	COOLER # OIL COOLER ASSY
537	168661-3H	COOLER # OIL COOLER ASSY	COOLER # OIL COOLER ASSY
538	168925-05-01	FMC # FLIGHT MANAGEMENT COMPUTER	FMC # FLIGHT MANAGEMENT COMPUTER
539	168925-06-01	FMC # FLIGHT MANAGEMENT COMPUTER	FMC # FLIGHT MANAGEMENT COMPUTER
540	1697EA	VALVE # SPEED BRAKE CONTROL VALVE	VALVE # SPEED BRAKE CONTROL VALVE
541	1697EA-1	VALVE # SPEED BRAKE CONTROL VALVE	VALVE # SPEED BRAKE CONTROL VALVE
542	1697EA1	VALVE # SPEED BRAKE CONTROL VALVE	VALVE # SPEED BRAKE CONTROL VALVE
543	16C194	VALVE # VALVE CHECK	VALVE # VALVE CHECK
544	16F110	VALVE # VALVE Float Ctr Wing Tank	VALVE # VALVE Float Ctr Wing Tank
545	170079-100	UNIT # EVENT MONITORING UNIT	UNIT # EVENT MONITORING UNIT
546	170089-02-01	MCDU # MULTIPURPOSE CONTROL DU	MCDU # MULTIPURPOSE CONTROL DU
547	170155-106	FCU # FUEL CONTROL AND PUMP ASSY	FCU # FUEL CONTROL AND PUMP ASSY
548	170155-106A	FCU # FUEL CONTROL AND PUMP ASSY	FCU # FUEL CONTROL AND PUMP ASSY
549	1704600-1	REDUCER # rudder pressure reducer	REDUCER # rudder pressure reducer
550	170684-100	PUMP AY # OIL PUMP/ OIL FILTER ASSY	PUMP AY # OIL PUMP/ OIL FILTER ASSY
551	171254-100B	FADEC AP# FADEC APU APS2000	FADEC AP# FADEC APU APS2000
552	171254-100BD	FADEC AP# FADEC APU APS2000	FADEC AP# FADEC APU APS2000
553	171254-100C	FADEC AP# FADEC APU APS2000	FADEC AP# FADEC APU APS2000
554	171254-100D	FADEC AP# FADEC APU APS2000	FADEC AP# FADEC APU APS2000
555	171254-100E	FADEC AP# FADEC APU APS2000	FADEC AP# FADEC APU APS2000
556	171254-100F	FADEC AP# FADEC APU APS2000	FADEC AP# FADEC APU APS2000
557	171256-100	APUCU # APU CONTROL UNIT APS2000	APUCU # APU CONTROL UNIT APS2000
558	171808-100	HARNESS # HARNESS, ENGINE	HARNESS # HARNESS, ENGINE
559	171808-102	HARNESS # HARNESS, ENGINE	HARNESS # HARNESS, ENGINE
560	171808-103	HARNESS # HARNESS, ENGINE	HARNESS # HARNESS, ENGINE
561	171808-103A	HARNESS # HARNESS, ENGINE	HARNESS # HARNESS, ENGINE
562	171808-103B	HARNESS # HARNESS, ENGINE	HARNESS # HARNESS, ENGINE
563	172625-7	VALVE # NOSE COWL A/I VALVE	VALVE # NOSE COWL A/I VALVE
564	172938-001	RELAY # RELAY COMPASS TRAN	RELAY # RELAY COMPASS TRAN
565	1732510-03	FILTER # FILTER ASSY TANK WATER SYS	FILTER # FILTER ASSY TANK WATER SYS
566	17343-116-825F	SWITCH # TEMP OVERHEAT SWITCH	SWITCH # TEMP OVERHEAT SWITCH
567	174101-02-01	CDU FMS # CONTROL DISPLAY UNIT FMS	CDU FMS # CONTROL DISPLAY UNIT FMS
568	176200-01-01	FMC # FLIGHT MANAGEMENT COMPUTER	FMC # FLIGHT MANAGEMENT COMPUTER
569	179374-1	SENSOR # SENSOR OIL LEVEL	SENSOR # SENSOR OIL LEVEL
570	179398-10	PROBE # PROBE 2, SPEED SENSOR	PROBE # PROBE 2, SPEED SENSOR
571	179420-1	EXCITER # EXCITER APU	EXCITER # EXCITER APU
572	179420-2	EXCITER # EXCITER APU	EXCITER # EXCITER APU
573	179427-1	SENSOR # SENSOR PRESSURE	SENSOR # SENSOR PRESSURE
574	179427-2	SENSOR # SENSOR PRESSURE	SENSOR # SENSOR PRESSURE
575	179428-1	SENSOR # SENSOR TEMPERATURE	SENSOR # SENSOR TEMPERATURE
576	179431-1	SWITCH # PRESSURE SWITCH, LOW OIL	SWITCH # PRESSURE SWITCH, LOW OIL
577	179505-1	IGN LEAD# IGNITER CABLE	IGN LEAD# IGNITER CABLE
578	179505-3	IGN LEAD# IGNITER CABLE	IGN LEAD# IGNITER CABLE
579	179505-4	IGN LEAD# IGNITER CABLE	IGN LEAD# IGNITER CABLE
580	179528-3	VALVE # SERVO BLEED VALVE	VALVE # SERVO BLEED VALVE
581	18-1299-6	IND.FLAP# FLAP POS INDICATOR	IND.FLAP# FLAP POS INDICATOR
582	18-1299-6-2	IND.FLAP# FLAP POS INDICATOR	IND.FLAP# FLAP POS INDICATOR
583	18-1738-9	X-MTR FL# FLAP POS.TRANSMITTER	X-MTR FL# FLAP POS.TRANSMITTER
584	18-2141	XMTR HYD# XMTR PRESS HYDRAULIC	XMTR HYD# XMTR PRESS HYDRAULIC
585	18-2141-2	XMTR HYD# XMTR PRESS HYDRAULIC	XMTR HYD# XMTR PRESS HYDRAULIC
586	18-2141-3	XMTR HYD# TRANSMITTER-PRESSURE	XMTR HYD# TRANSMITTER-PRESSURE
587	18-3001-3	ACCELMTR# ACCELEROMETER THREE AXIS	ACCELMTR# ACCELEROMETER THREE AXIS
588	182820-1-1	HEAT EX # HEAT EXCHANGER	HEAT EX # HEAT EXCHANGER
589	182820-2	HEAT EX # HEAT EXCHANGER	HEAT EX # HEAT EXCHANGER
590	182820-3	HEAT EX # HEAT EXCHANGER	HEAT EX # HEAT EXCHANGER
591	182936	IND.PRES# INDICATOR - OXY SYS PRESSURE	IND.PRES# INDICATOR - OXY SYS PRESSURE
592	182972	IND.PRES# INDICATOR - OXY SYS PRESSURE	IND.PRES# INDICATOR - OXY SYS PRESSURE



№	Код	Наименование детали	Доп.инфо
593	183010-4	SEPARATO# WATER SEPARATOR	SEPARATO# WATER SEPARATOR
594	1857-1	ALRTUNIT# AURAL ALTITUDE ALERT UNIT	ALRTUNIT# AURAL ALTITUDE ALERT UNIT
595	18801-5-380	DETECTOR# DETECTOR AIR FLOW	DETECTOR# DETECTOR AIR FLOW
596	194792-4	COOLER # PRECOOLER BLEED AIR SYSTEM	COOLER # PRECOOLER BLEED AIR SYSTEM
597	1983-1	BALLAST # BALLAST UNIT-FLOURESCENT LAMP	BALLAST # BALLAST UNIT-FLOURESCENT LAMP
598	1A081-0155-1	TIMER # TIMER ASSY TOILET FLUSH	TIMER # TIMER ASSY TOILET FLUSH
599	1A081-0155-11	TIMER # TIMER ASSY TOILET FLUSH	TIMER # TIMER ASSY TOILET FLUSH
600	1G196	SWITCH # SWITCH OIL PRESS SEQUENCE	SWITCH # SWITCH OIL PRESS SEQUENCE
601	1G196-1	SWITCH # SWITCH, LOW OIL PRESS, APU	SWITCH # SWITCH, LOW OIL PRESS, APU
602	1G259-1	SWITCH # SWITCH, LOW OIL PRESS, APU	SWITCH # SWITCH, LOW OIL PRESS, APU
603	1G259-2	SWITCH # SWITCH OIL PRESS SEQUENCE	SWITCH # SWITCH OIL PRESS SEQUENCE
604	1G400	SWITCH # SWITCH PRESSURE	SWITCH # SWITCH PRESSURE
605	1U1065-2	COMPENSA# COMPENSATOR CARTRIDGE HYD	COMPENSA# COMPENSATOR CARTRIDGE HYD
606	1U1150	UNIT # RUDDER AUX PCU	UNIT # RUDDER AUX PCU
607	1U1150-1	UNIT # RUDDER AUX PCU	UNIT # RUDDER AUX PCU
608	1U1150-3	AUX.RPCU# AUXILIARY RUDDER PCU	AUX.RPCU# AUXILIARY RUDDER PCU
609	2-299	TRU # TRANSFORMER-RECTIFIER UNIT	TRU # TRANSFORMER-RECTIFIER UNIT
610	2-541501-1	SNUBBER # SNUBBER AY-HYDR	SNUBBER # SNUBBER AY-HYDR
611	2-541501-1A	SNUBBER # SNUBBER AY-HYDR	SNUBBER # SNUBBER AY-HYDR
612	2-7462-3	VALVE # SHUTTLE VALVE AUTOBRAKE	VALVE # SHUTTLE VALVE AUTOBRAKE
613	2-7680-1	FUSE # FUSE HYDRAULIC	FUSE # FUSE HYDRAULIC
614	2-7680-2	FUSE # FUSE HYDRAULIC	FUSE # FUSE HYDRAULIC
615	2-7735-1	FUSE # FUSE AY	FUSE # FUSE AY
616	2-7737-1	FUSE # HYDR FUSE BRAKE	FUSE # HYDR FUSE BRAKE
617	2-7892-2	SNUBBER # SNUBBER AY-HYDR CARGO DOOR	SNUBBER # SNUBBER AY-HYDR CARGO DOOR
618	2-792-01	CHARGER # BATTERY CHARGER	CHARGER # BATTERY CHARGER
619	2-792-02	CHARGER # BATTERY CHARGER	CHARGER # BATTERY CHARGER
620	2-8020-1	FUSE AY # FUSE AY PLUMBING INSTL-MAIN WH	FUSE AY # FUSE AY PLUMBING INSTL-MAIN WH
621	2-8020-11	FUSE ASS# FUSE HYDR VLMTRC	FUSE ASS# FUSE HYDR VLMTRC
622	2-8020-12	FUSE STB# fuse hydraulic stby assy	FUSE STB# fuse hydraulic stby assy
623	2-8020-13	FUSE HYD# FUSE ASSY	FUSE HYD# FUSE ASSY
624	2-8020-15	FUSE # FUSE AY	FUSE # FUSE AY
625	2-8020-2	FUSE ASS# FUSE AY PLUMBING INSTL-MAIN WH	FUSE ASS# FUSE AY PLUMBING INSTL-MAIN WH
626	2-8020-3	FUSE AY # FUSE AY PLUMBING INSTL-MAIN WH	FUSE AY # FUSE AY PLUMBING INSTL-MAIN WH
627	2-8041-1	FUSE AY # FUSE ASSY	FUSE AY # FUSE ASSY
628	20-035008-300	ACCESSOR# COMP.OVERHEAT ACC.UNIT M237	ACCESSOR# COMP.OVERHEAT ACC.UNIT M237
629	20041-0000-03	XMTR # OIL QTY TRANSMITTER	XMTR # OIL QTY TRANSMITTER
630	20044-0000-01	HYD QTY # LIQUID QUANTITY TRANSMITTER	HYD QTY # LIQUID QUANTITY TRANSMITTER
631	20102060-101	VALVE # AUTO BRAKE CONTROL VALVE	VALVE # AUTO BRAKE CONTROL VALVE
632	20102060-102	VALVE # AUTO BRAKE CONTROL VALVE	VALVE # AUTO BRAKE CONTROL VALVE
633	20102060-103	VALVE # AUTO BRAKE CONTROL VALVE	VALVE # AUTO BRAKE CONTROL VALVE
634	2012-1	CHARGER # BATTERY CHARGER	CHARGER # BATTERY CHARGER
635	2013-1A	BATTERY # BATTERY AY-6 NiCd D-CELL FAA	BATTERY # BATTERY AY-6 NiCd D-CELL FAA
636	20138-1000-0101	HYD QTY # LIQUID QUANTITY TRANSMITTER	HYD QTY # LIQUID QUANTITY TRANSMITTER
637	20138-1000-0201	HYD QTY # LIQUID QUANTITY TRANSMITTER	HYD QTY # LIQUID QUANTITY TRANSMITTER
638	204050-11	ACM # AIR CYCLE MACHINE	ACM # AIR CYCLE MACHINE
639	2041213-0413	MOUNT # MOUNT TRANSCEIVER WXR	MOUNT # MOUNT TRANSCEIVER WXR
640	2041217-0415	XCVR WXR# WXR TRANSCEIVER RTA-4A	XCVR WXR# WXR TRANSCEIVER RTA-4A
641	2041234-3434	NAV RCV # RECEIVER NAV RNA-34	NAV RCV # RECEIVER NAV RNA-34
642	2041444-0401	DRIVE AY# WXR ANTENNA DRIVE UNIT DAA-4A	DRIVE AY# WXR ANTENNA DRIVE UNIT DAA-4A
643	2041446-0401	PLATE WX# WXR ANTENNA FLAT PLATE	PLATE WX# WXR ANTENNA FLAT PLATE
644	01.01.2057	ALT IND # INDICATOR ALTIMETER ELECTRICAL	ALT IND # INDICATOR ALTIMETER ELECTRICAL
645	2061-14-1	IND.FLAP# FLAP POSITION INDICATOR	IND.FLAP# FLAP POSITION INDICATOR
646	2070122-0502	ADF CPLR# COUPLER ADF SENSE ANTENNA	ADF CPLR# COUPLER ADF SENSE ANTENNA
647	01.11.2083	MASI # MACH AIRSPEED INDICATOR	MASI # MACH AIRSPEED INDICATOR
648	2094-0004	INDICATR# INDICATOR GAUGE WATER QUANTITY	INDICATR# INDICATOR GAUGE WATER QUANTITY
649	2094-0011	INDICATR# INDICATOR GAUGE WATER QUANTITY	INDICATR# INDICATOR GAUGE WATER QUANTITY
650	20C144-4	VALVE # VALVE CHECK	VALVE # VALVE CHECK
651	20C144-7	VALVE # VALVE CHK PUMP	VALVE # VALVE CHK PUMP
652	2100-4043-00	DFDR # DIGITAL FLIGHT DATA RECORDER	DFDR # DIGITAL FLIGHT DATA RECORDER
653	01.01.2101	FQTY IND# FUEL QTY IND WING STATION	FQTY IND# FUEL QTY IND WING STATION
654	02.01.2101	FQTY IND# FUEL QTY IND WING STATION	FQTY IND# FUEL QTY IND WING STATION
655	211C223-177	SWITCH # SWITCH PRESSURE	SWITCH # SWITCH PRESSURE
656	211C223-203	SWITCH # SWITCH PRESS ALTERN. BRAKE	SWITCH # SWITCH PRESS ALTERN. BRAKE
657	211C223-275	SWITCH # SWITCH PRESS	SWITCH # SWITCH PRESS
658	211C223-278	SWITCH # SWITCH	SWITCH # SWITCH
659	211C223-319	SWITCH # SWITCH PRESSURE	SWITCH # SWITCH PRESSURE
660	211C223-320	SWITCH # SWITCH PRESS ALTERN. BRAKE	SWITCH # SWITCH PRESS ALTERN. BRAKE
661	211C223-324	SWITCH # SWITCH PRESS	SWITCH # SWITCH PRESS
662	211C223-516	SWITCH # SWITCH PRESSURE	SWITCH # SWITCH PRESSURE
663	211C223-518	SWITCH # SWITCH PRESS ALTERN. BRAKE	SWITCH # SWITCH PRESS ALTERN. BRAKE
664	211C223-526	SWITCH # SWITCH PRESS	SWITCH # SWITCH PRESS
665	211C223-527	SWITCH # SWITCH	SWITCH # SWITCH
666	212EDP1-1	PANEL # PANEL EIS SECONDARY DISPLAY	PANEL # PANEL EIS SECONDARY DISPLAY
667	212EDP1-2	PANEL # PANEL EIS SECONDARY DISPLAY	PANEL # PANEL EIS SECONDARY DISPLAY
668	212EDP1-3	PANEL # PANEL EIS SECONDARY DISPLAY	PANEL # PANEL EIS SECONDARY DISPLAY
669	217200-1	VALVE # VALVE CHECK	VALVE # VALVE CHECK
670	217200-4	VALVE # VALVE CHECK	VALVE # VALVE CHECK
671	218-066-2	PUMP # APU FUEL PUMP AY	PUMP # APU FUEL PUMP AY
672	218066-1	PUMP # APU FUEL PUMP AY	PUMP # APU FUEL PUMP AY
673	218066-2	PUMP # APU FUEL PUMP AY	PUMP # APU FUEL PUMP AY
674	218066-3	PUMP # APU FUEL PUMP AY	PUMP # APU FUEL PUMP AY
675	21C1-3-22	SWITCH # SWITCH PRESS.PUMP LOW FLOW	SWITCH # SWITCH PRESS.PUMP LOW FLOW
676	21SN04-209	SWITCH # FUEL DIFF PRESS SWITCH	SWITCH # FUEL DIFF PRESS SWITCH
677	21SN04-209A	SWITCH # FUEL DIFF PRESS SWITCH	SWITCH # FUEL DIFF PRESS SWITCH



№	Код	Наименование детали	Доп.инфо
678	21SN04-211	SWITCH # OIL LOW PRESSURE SWITCH	SWITCH # OIL LOW PRESSURE SWITCH
679	21SN04-211A	SWITCH # OIL LOW PRESSURE SWITCH	SWITCH # OIL LOW PRESSURE SWITCH
680	21SN04-226	SWITCH # OIL FILTER BYPASS SWITCH	SWITCH # OIL FILTER BYPASS SWITCH
681	21SN04-226A	SWITCH # OIL FILTER BYPASS SWITCH	SWITCH # OIL FILTER BYPASS SWITCH
682	21SN41-52	SWITCH # SWITCH PRESSURE THERMAL ANTICE	SWITCH # SWITCH PRESSURE THERMAL ANTICE
683	2203185-1	NOZZLE # NOZZLE	NOZZLE # NOZZLE
684	2233000-3-B	DFDAU # DIG. FLIGHT DATA ACQUIS. UNIT	DFDAU # DIG. FLIGHT DATA ACQUIS. UNIT
685	2233000-3B	DFDAU # DIG. FLIGHT DATA ACQUIS. UNIT	DFDAU # DIG. FLIGHT DATA ACQUIS. UNIT
686	01.02.2261	INDICATR# INDICATOR TAT/SAT/TAS	INDICATR# INDICATOR TAT/SAT/TAS
687	01.01.2300	IND.-FQC# INDICATOR FUEL QTY CTR TANK	IND.-FQC# INDICATOR FUEL QTY CTR TANK
688	01.04.2307	IND.-FQC# INDICATOR FUEL QTY CTR TANK	IND.-FQC# INDICATOR FUEL QTY CTR TANK
689	231-1	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
690	231-2	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
691	2313M-194-3	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
692	2313M-194-4	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
693	2313M-21-5	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
694	2313M-21-6	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
695	2313M194-3	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
696	2313M194-4	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
697	2313M21-5	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
698	2313M21-6	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
699	2315M-20-3	BLADE # BLADE ASSY WINDSHIELD WIPER	BLADE # BLADE ASSY WINDSHIELD WIPER
700	2315M20-3	BLADE # BLADE ASSY WINDSHIELD WIPER	BLADE # BLADE ASSY WINDSHIELD WIPER
701	233145	S/O VALV# SHUTOFF VALVE MOTOR ACTUATED	S/O VALV# SHUTOFF VALVE MOTOR ACTUATED
702	241-250-000-121	EV MU # ENGINE VIBRATION MONITOR UNIT	EV MU # ENGINE VIBRATION MONITOR UNIT
703	24C225	VALVE # VALVE AY BYPASS	VALVE # VALVE AY BYPASS
704	24C236	VALVE # VALVE AY BYPASS	VALVE # VALVE AY BYPASS
705	2532-025-02-01	CONTROL # TEMP CONTROL	CONTROL # TEMP CONTROL
706	253884	INDICATR# INDICATOR YAW DAMPER TEST	INDICATR# INDICATOR YAW DAMPER TEST
707	01.03.2600	CLOCK # CLOCK ASSY	CLOCK # CLOCK ASSY
708	2601590-002	CABLE FU# CABLE FUEL SHUTOFF RH	CABLE FU# CABLE FUEL SHUTOFF RH
709	2604880-001	VSV CABL# VSV FEEDBACK CABLE	VSV CABL# VSV FEEDBACK CABLE
710	2604880-002	VBV CABL# VBV FEEDBACK CABLE	VBV CABL# VBV FEEDBACK CABLE
711	01.07.2610	CLOCK # CLOCK DIGITAL CAPT & F/O	CLOCK # CLOCK DIGITAL CAPT & F/O
712	2651-256-2DLH	CAP # CAP ASSY	CAP # CAP ASSY
713	2651-278-12	VALVE # VALVE DRAIN ASSY	VALVE # VALVE DRAIN ASSY
714	2651-311-6	VALVE # LAVATORY DRAIN VALVE ASSY	VALVE # LAVATORY DRAIN VALVE ASSY
715	2660472M5	ACCUMLTR# ACCUMULATOR HYD BRAKE	ACCUMLTR# ACCUMULATOR HYD BRAKE
716	266E0305-00	ULB # UNDERWATER LOCATOR BEACON	ULB # UNDERWATER LOCATOR BEACON
717	266E0305-01	ULB # UNDERWATER LOCATOR BEACON	ULB # UNDERWATER LOCATOR BEACON
718	2670136	VALVE # PRESS.FUELING SHUTOFF VALVE	VALVE # PRESS.FUELING SHUTOFF VALVE
719	2670150-5	MANIFOLD# MANIFOLD AY FUELING	MANIFOLD# MANIFOLD AY FUELING
720	01.01.2720	ANNUNCIA# THRUST MODE ANNUNCIATOR	ANNUNCIA# THRUST MODE ANNUNCIATOR
721	27325-13	CABLE # CABLE GRND SPEED BRAKE INTERL	CABLE # CABLE GRND SPEED BRAKE INTERL
722	274N1051-3	VALVE # SELECTOR VALVE ALTERNATE BR	VALVE # SELECTOR VALVE ALTERNATE BR
723	274T4621-4	VALVE # SELECTOR VALVE ALTERNATE BR	VALVE # SELECTOR VALVE ALTERNATE BR
724	27550-01	VALVE # CREW OXYGEN S/O VALVE	VALVE # CREW OXYGEN S/O VALVE
725	27550-1	VALVE # CREW OXYGEN S/O VALVE	VALVE # CREW OXYGEN S/O VALVE
726	2760000-101	VALVE # VALVE AY MOTOR OP AIR SHUTOFF	VALVE # VALVE AY MOTOR OP AIR SHUTOFF
727	27660-08	REGULATR# OXYGEN PRESS REGULATOR	REGULATR# OXYGEN PRESS REGULATOR
728	2790521-102	VALVECHK# VALVE CHECK HYDR MODULE REV TH	VALVECHK# VALVE CHECK HYDR MODULE REV TH
729	2800003-103	VALVE # VALVE ASSY - PRESSURE RELIEF	VALVE # VALVE ASSY - PRESSURE RELIEF
730	2810015-101	VALVE # CHECK VALVE	VALVE # CHECK VALVE
731	2820095-101	VALVE # VALVE SOLENOID	VALVE # VALVE SOLENOID
732	28410	VALVE # VALVE EE CLNG AUTO FLOW CONT	VALVE # VALVE EE CLNG AUTO FLOW CONT
733	28420	VALVE # VALVE EE CLNG AUTO FLOW CONT	VALVE # VALVE EE CLNG AUTO FLOW CONT
734	285T0855-1	MOD ASSY# FLIGHT DECK ACC. SYS. CNTR	MOD ASSY# FLIGHT DECK ACC. SYS. CNTR
735	285U0037-304	RCP # RADIO COMMUNICATION PANEL	RCP # RADIO COMMUNICATION PANEL
736	28823-1	COMPRESR# AIR COMPRESSOR	COMPRESR# AIR COMPRESSOR
737	2900036-101	VALVE # BOOST PUMP MANUAL S/O VALVE	VALVE # BOOST PUMP MANUAL S/O VALVE
738	2A7-200A	ACTUATOR# ACTUATOR MACH TRIM	ACTUATOR# ACTUATOR MACH TRIM
739	2A7200A	ACTUATOR# ACTUATOR MACH TRIM	ACTUATOR# ACTUATOR MACH TRIM
740	2CM9ABH7	SENSOR # GENERATOR SENSOR N1 + N2	SENSOR # GENERATOR SENSOR N1 + N2
741	2CM9ABY7	SENSOR # GENERATOR SENSOR N1 + N2	SENSOR # GENERATOR SENSOR N1 + N2
742	2S2566	VALVE # VALVE CHECK	VALVE # VALVE CHECK
743	3-111794	VALVEHYD# VALVE ASSY-RESERVOIR DRAIN	VALVEHYD# VALVE ASSY-RESERVOIR DRAIN
744	30-0837-21	LIGHT AY# ANTI COLL-STROBE LIGHT	LIGHT AY# ANTI COLL-STROBE LIGHT
745	30-0837-5	LIGHT AY# UPR ANTI-COLLISION LIGHT ASSY	LIGHT AY# UPR ANTI-COLLISION LIGHT ASSY
746	30-0906-104	LIGHT AY# LIGHT AY,WING TIP STROBE RH	LIGHT AY# LIGHT AY,WING TIP STROBE RH
747	30-0906-105	LIGHT AY# LIGHT AY,WING TIP STROBE LH	LIGHT AY# LIGHT AY,WING TIP STROBE LH
748	30-0906-4	LIGHT AY# LIGHT AY,WING TIP STROBE RH	LIGHT AY# LIGHT AY,WING TIP STROBE RH
749	30-0906-5	LIGHT AY# LIGHT AY,WING TIP STROBE LH	LIGHT AY# LIGHT AY,WING TIP STROBE LH
750	30-0909-1	LIGHT AY# LIGHT AY-TAIL POSITION STROBE	LIGHT AY# LIGHT AY-TAIL POSITION STROBE
751	30-0909-101	LIGHT AY# LIGHT AY-TAIL POSITION STROBE	LIGHT AY# LIGHT AY-TAIL POSITION STROBE
752	30-0909-201	LIGHT AY# LIGHT AY-TAIL POSITION STROBE	LIGHT AY# LIGHT AY-TAIL POSITION STROBE
753	30-1401-3	LIGHT AY# LIGHT AY-STROBE ANTI COLLISION	LIGHT AY# LIGHT AY-STROBE ANTI COLLISION
754	30-1401-3M	LIGHT AY# LIGHT AY-STROBE ANTI COLLISION	LIGHT AY# LIGHT AY-STROBE ANTI COLLISION
755	3000-46-27	SWITCH # SWITCH THERMAL ANTI ICE	SWITCH # SWITCH THERMAL ANTI ICE
756	3000-46-29	SWITCH # SWITCH THERMOSTATIC	SWITCH # SWITCH THERMOSTATIC
757	301-771-601-0	SENSOR # TEMP SENSOR T12	SENSOR # TEMP SENSOR T12
758	301-776-501-0	HEATER # SERVO FUEL HEATER	HEATER # SERVO FUEL HEATER
759	301-776-702-0	MOTOR # HYDRAULIC GEARMOTOR VBV	MOTOR # HYDRAULIC GEARMOTOR VBV
760	301-776-703-0	MOTOR # HYDRAULIC GEARMOTOR VBV	MOTOR # HYDRAULIC GEARMOTOR VBV
761	301-776-704-0	MOTOR # HYDRAULIC GEARMOTOR VBV	MOTOR # HYDRAULIC GEARMOTOR VBV
762	301-778-703-0	SENSOR # SENSOR AY VIBRATION PICK UP N1	SENSOR # SENSOR AY VIBRATION PICK UP N1



"STRELA" Limited Liability Company

ПОСТАВКА И РЕМОНТ АВИАЦИОННЫХ КОМПОНЕНТОВ И ОБОРУДОВАНИЯ

Тел/факс (495) 139-60-45 info@strela-at.ru

№	Код	Наименование детали	Доп.инфо
763	301-779-005-0	PUMP # FUEL PUMP	PUMP # FUEL PUMP
764	301-779-303-0	SENSOR # VIBRATION SENSOR BRG.5	SENSOR # VIBRATION SENSOR BRG.5
765	301-779-602-0	SENSOR # VIBRATION SENSOR BRG.5	SENSOR # VIBRATION SENSOR BRG.5
766	301-779-801-0	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
767	301-784-201-0	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
768	301-785-001-0	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
769	301-798-601-0	SENSOR # TEMP SENSOR T12	SENSOR # TEMP SENSOR T12
770	30211-0102	FUEL TSD# TRANSIENT SUPPRESSION DEVICE	FUEL TSD# TRANSIENT SUPPRESSION DEVICE
771	30220	ACCUMLTR# ACCUMULATOR HYD BRAKE	ACCUMLTR# ACCUMULATOR HYD BRAKE
772	304313-1	ETC # ELECTRONIC TEMP CONTROL UNIT	ETC # ELECTRONIC TEMP CONTROL UNIT
773	304313-2	ETC # ELECTRONIC TEMP CONTROL UNIT	ETC # ELECTRONIC TEMP CONTROL UNIT
774	304461-2	EGTPROBE# THERMOCOUPLE ETC	EGTPROBE# THERMOCOUPLE ETC
775	305593-3	SWITCH # SWITCH, 3 SPEED ELECTR, APU	SWITCH # SWITCH, 3 SPEED ELECTR, APU
776	305593-5	SWITCH # SWITCH, 3 SPEED ELECTR, APU	SWITCH # SWITCH, 3 SPEED ELECTR, APU
777	305593-7	SWITCH # SWITCH, 3 SPEED ELECTR, APU	SWITCH # SWITCH, 3 SPEED ELECTR, APU
778	31-8137-1	LIGHT AY# LIGHT ASSY NAVIGATIONAL	LIGHT AY# LIGHT ASSY NAVIGATIONAL
779	31040	VALVE # VALVE EE CLNG AUTO FLOW CONT	VALVE # VALVE EE CLNG AUTO FLOW CONT
780	311EDP4-1	PANEL # PANEL EIS PRIMARY DISPLAY	PANEL # PANEL EIS PRIMARY DISPLAY
781	311EDP4-2	PANEL # PANEL EIS PRIMARY DISPLAY	PANEL # PANEL EIS PRIMARY DISPLAY
782	311EDP4-3	PANEL # PANEL EIS PRIMARY DISPLAY	PANEL # PANEL EIS PRIMARY DISPLAY
783	311EDP6-2	PANEL # PANEL EIS PRIMARY DISPLAY	PANEL # PANEL EIS PRIMARY DISPLAY
784	312EDP2-1	PANEL # PANEL EIS PRIMARY DISPLAY	PANEL # PANEL EIS PRIMARY DISPLAY
785	312EDP2-2	PANEL # PANEL EIS PRIMARY DISPLAY	PANEL # PANEL EIS PRIMARY DISPLAY
786	312EDP2-3	PANEL # PANEL EIS PRIMARY DISPLAY	PANEL # PANEL EIS PRIMARY DISPLAY
787	315A1016-3	BOX AY S# BOX AY STRUT DRUM RH	BOX AY S# BOX AY STRUT DRUM RH
788	315A1016-4	BOX AY S# BOX AY STRUT DRUM LH	BOX AY S# BOX AY STRUT DRUM LH
789	315A1040-10	BOX # FUEL CONTROL BOX AS CFM56-3B1	BOX # FUEL CONTROL BOX AS CFM56-3B1
790	315A1040-11	BOX # FUEL CONTROL BOX	BOX # FUEL CONTROL BOX
791	315A1801-14	ACTUATOR# LOCKING ACTUATOR L/H	ACTUATOR# LOCKING ACTUATOR L/H
792	315A1801-18	ACTUATOR# LOCKING ACTUATOR L/H	ACTUATOR# LOCKING ACTUATOR L/H
793	315A1801-22	ACTUATOR# LOCKING ACTUATOR L/H	ACTUATOR# LOCKING ACTUATOR L/H
794	315A1801-26	ACTUATOR# LOCKING ACTUATOR L/H	ACTUATOR# LOCKING ACTUATOR L/H
795	316565	VALVE # AIR PRESS RELIEF VALVE - TANK	VALVE # AIR PRESS RELIEF VALVE - TANK
796	32-2684-003	VALVE-SO# VALVE - SHUTOFF MOTOR OPERATED	VALVE-SO# VALVE - SHUTOFF MOTOR OPERATED
797	32-2684-004	VALVE-SO# VALVE-SHUT OFF	VALVE-SO# VALVE-SHUT OFF
798	32-2684-007	VALVE-SO# VALVE - SHUTOFF MOTOR OPERATED	VALVE-SO# VALVE - SHUTOFF MOTOR OPERATED
799	320-094-001-0	SENSOR # SPEED SENSOR N1	SENSOR # SPEED SENSOR N1
800	3200-10	PUMP # TOILET PUMP ASSY	PUMP # TOILET PUMP ASSY
801	3200-11	PUMP # TOILET PUMP ASSY	PUMP # TOILET PUMP ASSY
802	3200-19	PUMP # MOTOR ASSY FILTER AND PUMP	PUMP # MOTOR ASSY FILTER AND PUMP
803	3202096-2	VALVE # VALVE AY AIR CHECK RECIRCULTN	VALVE # VALVE AY AIR CHECK RECIRCULTN
804	3202222-1	VALVE # CHECK VALVE 5TH STAGE	VALVE # CHECK VALVE 5TH STAGE
805	320362-2-1	VALVE # VALVE, SOLENOID SHUTOFF, APU	VALVE # VALVE, SOLENOID SHUTOFF, APU
806	3212KGB01	SENSOR # SPEED SENSOR N1	SENSOR # SPEED SENSOR N1
807	3214446-4	VALVE # HIGH STAGE VALVE	VALVE # HIGH STAGE VALVE
808	3214552-5	VALVE # PRESS.REGULATING SHUTOFF VALVE	VALVE # PRESS.REGULATING SHUTOFF VALVE
809	3214552-6	VALVE # PRESS.REGULATING SHUTOFF VALVE	VALVE # PRESS.REGULATING SHUTOFF VALVE
810	321942-1-1	VALVE # A/I CONTR VALVE AIR CYCLE SYST	VALVE # A/I CONTR VALVE AIR CYCLE SYST
811	324495	VALVE # AIR BLEED STARTING VALVE	VALVE # AIR BLEED STARTING VALVE
812	327375	VALVE # VALVE EE CLNG AUTO FLOW CONT	VALVE # VALVE EE CLNG AUTO FLOW CONT
813	3282556-2	STOP MEC# STOP MECHANISM	STOP MEC# STOP MECHANISM
814	3282556-21	STOP MEC# STOP MECHANISM	STOP MEC# STOP MECHANISM
815	3289562-5	VALVE # PRECOOLER FAN AIR VALVE	VALVE # PRECOOLER FAN AIR VALVE
816	3289630-2	VALVE # STARTER VALVE	VALVE # STARTER VALVE
817	3289630-3	VALVE # STARTER VALVE	VALVE # STARTER VALVE
818	3290662-1	VALVE # NOSE COWL A/I VALVE	VALVE # NOSE COWL A/I VALVE
819	331-0001-01	VALVE # VALVE ASSY WASTE SYST.LAV.B/C	VALVE # VALVE ASSY WASTE SYST.LAV.B/C
820	335-011-904-0	PANEL # MID ACOUSTIC PANEL	PANEL # MID ACOUSTIC PANEL
821	335-260-906-0	OIL CAP # OIL CAP ASSY	OIL CAP # OIL CAP ASSY
822	335-261-005-0	LUB UNIT# LUBRICATION UNIT	LUB UNIT# LUBRICATION UNIT
823	335-296-302-0	PLUG # PLUG MAGNETIC	PLUG # PLUG MAGNETIC
824	335-296-450-0	PLUG # PLUG MAGNETIC	PLUG # PLUG MAGNETIC
825	335-296-452-0	PLUG # PLUG MAGNETIC	PLUG # PLUG MAGNETIC
826	33700002	FIRE EXT# FIRE EXTINGUISHER	FIRE EXT# FIRE EXTINGUISHER
827	340565	VALVE AY# MOTOR OP. SHUTOFF VALVE	VALVE AY# MOTOR OP. SHUTOFF VALVE
828	341525	VALVE AY# MOTOR OP. SHUTOFF VALVE	VALVE AY# MOTOR OP. SHUTOFF VALVE
829	341525-1	VALVE AY# MOTOR OP. SHUTOFF VALVE	VALVE AY# MOTOR OP. SHUTOFF VALVE
830	34200405-1	FIRE EXT# FIRE EXTINGUISHER	FIRE EXT# FIRE EXTINGUISHER
831	35008-307	ACCESSOR# COMP.OVERHEAT ACC.UNIT M237	ACCESSOR# COMP.OVERHEAT ACC.UNIT M237
832	3505526-3-1	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
833	3505526-4-1	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
834	3505526-5-1	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
835	3505526-6-1	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
836	3505526-7-1	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
837	3505526-8-1	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
838	3505526-9-1	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
839	3505716-3	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
840	3505716-5	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
841	3505716-6	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
842	35577-4-255	ELEMENT # ELEMENT	ELEMENT # ELEMENT
843	35805-0	FDCU # FIRE AND OVERHEAT CONTROL UNIT	FDCU # FIRE AND OVERHEAT CONTROL UNIT
844	3600-12	DRAIN # DRAIN VALVE TOILET	DRAIN # DRAIN VALVE TOILET
845	3601193-3	ATOMIZER# ATOMIZER	ATOMIZER# ATOMIZER
846	3601193-4	ATOMIZER# ATOMIZER	ATOMIZER# ATOMIZER
847	3602310-17	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU



№	Код	Наименование детали	Доп.инфо
848	3602310-17-1	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU
849	3602310-22AT	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU
850	3602310-25	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU
851	3602310-28	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU
852	3602310-28-1	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU
853	3602310-30-1	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU
854	3602310-5	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU
855	3602310-5-1	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU
856	3603281-6	EXCITER # EXCITER, IGNITION, APU	EXCITER # EXCITER, IGNITION, APU
857	3603281-7	EXCITER # EXCITER, IGNITION, APU	EXCITER # EXCITER, IGNITION, APU
858	3604524-29	CMBSTR # COMBUSTOR UNIT ASSY, APU	CMBSTR # COMBUSTOR UNIT ASSY, APU
859	3604524-45	CMBSTR # COMBUSTOR UNIT ASSY, APU	CMBSTR # COMBUSTOR UNIT ASSY, APU
860	3605239-2	VALVE # PROPORTIONAL VALVE	VALVE # PROPORTIONAL VALVE
861	3605384-3	LINER # LINER ASSY-COMB CHAMBR, APU	LINER # LINER ASSY-COMB CHAMBR, APU
862	3605384-8	LINER # LINER ASSY-COMB CHAMBR, APU	LINER # LINER ASSY-COMB CHAMBR, APU
863	3605812-13	STARTER # STARTER - ELEC ENG, APU	STARTER # STARTER - ELEC ENG, APU
864	3605812-13-1	STARTER # STARTER - ELEC ENG, APU	STARTER # STARTER - ELEC ENG, APU
865	3605812-13-1A	STARTER # STARTER - ELEC ENG, APU	STARTER # STARTER - ELEC ENG, APU
866	3605812-16	STARTER # STARTER - ELEC ENG, APU	STARTER # STARTER - ELEC ENG, APU
867	3605812-16-1	STARTER # STARTER - ELEC ENG, APU	STARTER # STARTER - ELEC ENG, APU
868	3605812-19	STARTER # STARTER - ELEC ENG, APU	STARTER # STARTER - ELEC ENG, APU
869	3605812-19-1	STARTER # STARTER - ELEC ENG, APU	STARTER # STARTER - ELEC ENG, APU
870	3605812-22	STARTER # STARTER - ELEC ENG, APU	STARTER # STARTER - ELEC ENG, APU
871	3605812-22-1	STARTER # STARTER - ELEC ENG, APU	STARTER # STARTER - ELEC ENG, APU
872	3608000-12	TAFCU # FCU, TIMED ACCELATION, APU	TAFCU # FCU, TIMED ACCELATION, APU
873	3608000-4	TAFCU # FCU, TIMED ACCELATION, APU	TAFCU # FCU, TIMED ACCELATION, APU
874	3609150-1	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU
875	3609150-1-1	FCU # FUEL CONTROL UNIT APU	FCU # FUEL CONTROL UNIT APU
876	364-1	CONVERTR# PHASE CONVERTER	CONVERTR# PHASE CONVERTER
877	36400049-1	VALVE # VALVE DIVERTER	VALVE # VALVE DIVERTER
878	369162	IGNITER # IGNITER PLUG	IGNITER # IGNITER PLUG
879	369259-32	LEAD # LEAD	LEAD # LEAD
880	3700-101	TOILET # TOILET AY LAV C R/H	TOILET # TOILET AY LAV C R/H
881	3700-124	TOILET # TOILET AY LAV C R/H	TOILET # TOILET AY LAV C R/H
882	3700-45	TOILET # TOILET FLUSHING AY FWD	TOILET # TOILET FLUSHING AY FWD
883	3700-46	TOILET # TOILET ASSY AFT LEFT HAND	TOILET # TOILET ASSY AFT LEFT HAND
884	3700-77	TOILET # TOILET AY LAV C R/H	TOILET # TOILET AY LAV C R/H
885	371380	PUMP EDP# PUMP HYDRAULIC EDP A-SYSTEM	PUMP EDP# PUMP HYDRAULIC EDP A-SYSTEM
886	3762-039	TANK AY # TANK & TOP ASSY RH / AFT ONLY	TANK AY # TANK & TOP ASSY RH / AFT ONLY
887	3762-040	TANK # TANK ASSY	TANK # TANK ASSY
888	3765-175-2	VALVE # CHECK VALVE VACUUM BREAKER	VALVE # CHECK VALVE VACUUM BREAKER
889	3780078-105	ACCUMLTR# ACCUMULATOR HYD BRAKE	ACCUMLTR# ACCUMULATOR HYD BRAKE
890	379580-150	PUMP # PUMP ASSY-OIL, APU	PUMP # PUMP ASSY-OIL, APU
891	379580-300	PUMP # PUMP ASSY-OIL, APU	PUMP # PUMP ASSY-OIL, APU
892	379580-600	PUMP # PUMP ASSY-OIL, APU	PUMP # PUMP ASSY-OIL, APU
893	379580-650	PUMP # PUMP ASSY-OIL, APU	PUMP # PUMP ASSY-OIL, APU
894	379580-700	PUMP # PUMP ASSY-OIL	PUMP # PUMP ASSY-OIL
895	3810056-105	VALVE # THRUST REV. CONTROL VALVE	VALVE # THRUST REV. CONTROL VALVE
896	3810056-106	VALVE # THRUST REV. CONTROL VALVE	VALVE # THRUST REV. CONTROL VALVE
897	3810056-107	VALVE # THRUST REV. CONTROL VALVE	VALVE # THRUST REV. CONTROL VALVE
898	3810056-109	VALVE # THRUST REV. CONTROL VALVE	VALVE # THRUST REV. CONTROL VALVE
899	3876259-2	SWITCH # SWITCH, 3 SPEED ELECTR, APU	SWITCH # SWITCH, 3 SPEED ELECTR, APU
900	3876259-4	SWITCH # SWITCH, 3 SPEED ELECTR, APU	SWITCH # SWITCH, 3 SPEED ELECTR, APU
901	3890010-102	VALVE # VALVE SAFETY	VALVE # VALVE SAFETY
902	3890010-103	VALVE # VALVE SAFETY	VALVE # VALVE SAFETY
903	39-353	VALVE # ANTI-SKID VALVE	VALVE # ANTI-SKID VALVE
904	39-353501	FILTER # FILTER CLEANABLE	FILTER # FILTER CLEANABLE
905	391041-020	FUEL COM# FUEL COMPENSATOR	FUEL COM# FUEL COMPENSATOR
906	391041-023	FUEL COM# FUEL COMPENSATOR	FUEL COM# FUEL COMPENSATOR
907	391041-026	FUEL COM# FUEL COMPENSATOR	FUEL COM# FUEL COMPENSATOR
908	391041-027	FUEL COM# FUEL COMPENSATOR	FUEL COM# FUEL COMPENSATOR
909	391046-04128	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
910	391046-04129	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
911	391046-04130	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
912	391046-04131	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
913	391046-04133	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
914	391046-04134	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
915	391046-04136	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
916	391046-04137	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
917	391046-04138	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
918	391046-05129	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
919	391046-05130	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
920	391046-05131	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
921	391046-05133	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
922	391046-05134	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
923	391046-05136	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
924	391046-05137	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
925	391046-05138	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
926	391046-174	FUEL QTY# FUEL QUANTITY TRANSMITTER	FUEL QTY# FUEL QUANTITY TRANSMITTER
927	391046-299	FUEL QTY# TANKUNIT	FUEL QTY# TANKUNIT
928	391046-300	FUEL QTY# TANKUNIT	FUEL QTY# TANKUNIT
929	391046-478	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL
930	391046-483	FUEL QTY# TANKUNIT	FUEL QTY# TANKUNIT
931	391046-484	FUEL QTY# TANKUNIT	FUEL QTY# TANKUNIT
932	391046-486	FUEL QTY# TANK UNIT,FUEL	FUEL QTY# TANK UNIT,FUEL



№	Код	Наименование детали	Доп.инфо
933	391097-16009	FUEL QTY# FUEL QUANTITY TRANSMITTER	FUEL QTY# FUEL QUANTITY TRANSMITTER
934	392678-1-1	VALVE,CO# TURBOFAN CONTROL VALVE	VALVE,CO# TURBOFAN CONTROL VALVE
935	392678-3-1	VALVE,CO# TURBOFAN CONTROL VALVE	VALVE,CO# TURBOFAN CONTROL VALVE
936	396442-1	VALVE # FLOW CONTROL AND PACK VALVE	VALVE # FLOW CONTROL AND PACK VALVE
937	397868-1	VALVE # VALVE-PNEU, SHUTOFF, APU	VALVE # VALVE-PNEU, SHUTOFF, APU
938	397868-1-1	VALVE # VALVE-PNEU, SHUTOFF, APU	VALVE # VALVE-PNEU, SHUTOFF, APU
939	398116-1-1	VALVE,MI# AIR MIXING VALVE	VALVE,MI# AIR MIXING VALVE
940	39B168-1-B	INVERTER# STATIC INVERTER	INVERTER# STATIC INVERTER
941	39B168-1-C	INVERTER# STATIC INVERTER	INVERTER# STATIC INVERTER
942	39B168-1B	INVERTER# STATIC INVERTER	INVERTER# STATIC INVERTER
943	39B168-1C	INVERTER# STATIC INVERTER	INVERTER# STATIC INVERTER
944	39B168-1STYLEC	INVERTER# STATIC INVERTER	INVERTER# STATIC INVERTER
945	3A090-0020-04-2	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
946	3A090-0021-01-1	SEAT CPT# SEAT CPT	SEAT CPT# SEAT CPT
947	3A090-0021-02-2	SEAT CPT# SEAT CPT	SEAT CPT# SEAT CPT
948	3A090-0021-04-2	SEAT CPT# SEAT CPT	SEAT CPT# SEAT CPT
949	3A090-0021-06-2	SEAT CPT# SEAT CPT	SEAT CPT# SEAT CPT
950	3A090-0022-01-1	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
951	3A090-0022-01-1Z	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
952	3A090-0022-01-2	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
953	3A090-0022-01-2Z	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
954	3A090-0022-02-2	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
955	3A090-0022-02-2Z	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
956	3A090-0022-04-2	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
957	3A090-0022-04-2Z	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
958	3A090-0022-06-2	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
959	3A090-0022-06-2Z	SEAT F/O# SEAT F/O	SEAT F/O# SEAT F/O
960	4-254-02	CHARGER # CHARGER-BATTERY	CHARGER # CHARGER-BATTERY
961	4-254-03	CHARGER # CHARGER-BATTERY	CHARGER # CHARGER-BATTERY
962	4-254-04	CHARGER # CHARGER-BATTERY	CHARGER # CHARGER-BATTERY
963	4-60000H440-00	MAST # MAST ASSY WATER DRAIN	MAST # MAST ASSY WATER DRAIN
964	40-176-7	BATTERY # MAIN AND APU BATTERY	BATTERY # MAIN AND APU BATTERY
965	40-817	X-DUCER # ANTI SKID WHEEL TRANSDUCER	X-DUCER # ANTI SKID WHEEL TRANSDUCER
966	40176-7	BATTERY # MAIN AND APU BATTERY	BATTERY # MAIN AND APU BATTERY
967	4034559-901	RDDMI # RDDMI INDICATOR	RDDMI # RDDMI INDICATOR
968	4034559-908	RDDMI # RDDMI INDICATOR	RDDMI # RDDMI INDICATOR
969	4035-01	TSU # Transient Suppression Unit	TSU # Transient Suppression Unit
970	4039893-903	VSI IND # VERTICAL SPEED INDICATOR	VSI IND # VERTICAL SPEED INDICATOR
971	4051600-913	FCC # FLIGHT CONTROL COMPUTER	FCC # FLIGHT CONTROL COMPUTER
972	4051600-914	FCC # FLIGHT CONTROL COMPUTER	FCC # FLIGHT CONTROL COMPUTER
973	4051600-923	FCC # FLIGHT CONTROL COMPUTER	FCC # FLIGHT CONTROL COMPUTER
974	40574-4	ACTUATOR# ACTUATOR FUEL S/O VALVE	ACTUATOR# ACTUATOR FUEL S/O VALVE
975	4061100-901	DADC # DIGITAL AIR DATA COMPUTER	DADC # DIGITAL AIR DATA COMPUTER
976	4082260-937	MCP # MODE CONTROL PANEL	MCP # MODE CONTROL PANEL
977	4084042-911	COUPLER # COUPLER YAW DAMPER	COUPLER # COUPLER YAW DAMPER
978	40F104	VALVE AY# VALVE ASSY	VALVE AY# VALVE ASSY
979	4105DA	VALVE # LANDING GEAR SELECTOR VALVE	VALVE # LANDING GEAR SELECTOR VALVE
980	4129RA4	VALVE # STEERING CONTROL VALVE	VALVE # STEERING CONTROL VALVE
981	4129RA9	VALVE # STEERING CONTROL VALVE	VALVE # STEERING CONTROL VALVE
982	4163DA	VALVE,LE# LE CONTROL VALVE	VALVE,LE# LE CONTROL VALVE
983	417N5120-17	LIGHT AY# LIGHT AY	LIGHT AY# LIGHT AY
984	418-20044	XMTR # OIL PRESS TRANSMITTER	XMTR # OIL PRESS TRANSMITTER
985	419200-1003	RUDDER P# RUDDER POWER CONTR. UNIT	RUDDER P# RUDDER POWER CONTR. UNIT
986	42-719-02	ACU # ANTISKID CONTROL UNIT	ACU # ANTISKID CONTROL UNIT
987	421-0001-1	HEATER # HEATER ASSY WATER	HEATER # HEATER ASSY WATER
988	4215-01	DCT-UNIT# DIGITAL CALIBRATION TRIM UNIT	DCT-UNIT# DIGITAL CALIBRATION TRIM UNIT
989	4215-02	DCT-UNIT# DIGITAL CALIBRATION TRIM UNIT	DCT-UNIT# DIGITAL CALIBRATION TRIM UNIT
990	4221T100-1	ACTUATOR# ALTERN. TRAIL. EDGE FLAP DRIVE	ACTUATOR# ALTERN. TRAIL. EDGE FLAP DRIVE
991	4221T100-3	ACTUATOR# ALTERN. TRAIL. EDGE FLAP DRIVE	ACTUATOR# ALTERN. TRAIL. EDGE FLAP DRIVE
992	436-2	CONTR AY# CONTROLLER ASSY	CONTR AY# CONTROLLER ASSY
993	43B034RB30	BATTERY # MAIN AND APU BATTERY	BATTERY # MAIN AND APU BATTERY
994	44376	STATOR # STATOR ALTERNATOR	STATOR # STATOR ALTERNATOR
995	44376-0100	STATOR # STATOR ALTERNATOR	STATOR # STATOR ALTERNATOR
996	44376-1	STATOR # STATOR ALTERNATOR	STATOR # STATOR ALTERNATOR
997	45-0083-5	LIGHT # RETRACTABLE AC-LANDING LIGHT	LIGHT # RETRACTABLE AC-LANDING LIGHT
998	45-0083-7	LIGHT AY# RETRACTABLE AC-LANDING LIGHT	LIGHT AY# RETRACTABLE AC-LANDING LIGHT
999	4500133	FAN # COOLING FAN ASSY	FAN # COOLING FAN ASSY
1000	4500228	NOZZLE # NOZZLE ASSY	NOZZLE # NOZZLE ASSY
1001	4500228A	NOZZLE # nozzle	NOZZLE # nozzle
1002	4501461A	NOZZLE # START FUEL NOZZLE ASSY	NOZZLE # START FUEL NOZZLE ASSY
1003	4501462A	NOZZLE # START FUEL NOZZLE ASSY	NOZZLE # START FUEL NOZZLE ASSY
1004	4503653	FCU # FUEL CONTROL AND PUMP ASSY	FCU # FUEL CONTROL AND PUMP ASSY
1005	4503653A	FCU # FUEL CONTROL AND PUMP ASSY	FCU # FUEL CONTROL AND PUMP ASSY
1006	4503762	FCU # FUEL CONTROL AND PUMP ASSY	FCU # FUEL CONTROL AND PUMP ASSY
1007	4503762A	FCU # FUEL CONTROL AND PUMP ASSY	FCU # FUEL CONTROL AND PUMP ASSY
1008	45080-1	VALVE AY# VALVE ASSY SOLENOID	VALVE AY# VALVE ASSY SOLENOID
1009	45332-8038	HEAT EXC# OIL/FUEL HEAT EXCHANGER	HEAT EXC# OIL/FUEL HEAT EXCHANGER
1010	4556	VALVE # VALVE ASSY	VALVE # VALVE ASSY
1011	45731-1251-1	HEATER # SERVO FUEL HEATER	HEATER # SERVO FUEL HEATER
1012	461800-0208-1606	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
1013	461800-0408-1606	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
1014	463600-01-01	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT
1015	4663-8	VALVE # VALVE GROUND START	VALVE # VALVE GROUND START
1016	4709-21	CAP AY # CAP ASSY	CAP AY # CAP ASSY
1017	472094	FIRE DET# FIRE DETECTION ELEMENT ENGINE	FIRE DET# FIRE DETECTION ELEMENT ENGINE



№	Код	Наименование детали	Доп.инфо
1018	472582	FIRE DET# EXHAUST CORE DETECTOR ASSY	FIRE DET# EXHAUST CORE DETECTOR ASSY
1019	472582-1	FIRE DET# EXHAUST CORE DETECTOR ASSY	FIRE DET# EXHAUST CORE DETECTOR ASSY
1020	472583	FIRE DET# DETECTOR STRUT FIRE OVERHEAT	FIRE DET# DETECTOR STRUT FIRE OVERHEAT
1021	472584	FIRE DET# GEARBOX FIRE DETECTOR ASSY	FIRE DET# GEARBOX FIRE DETECTOR ASSY
1022	472622	MODULE # MODULE FIRE OVERHEAT DETECTOR	MODULE # MODULE FIRE OVERHEAT DETECTOR
1023	473597-5	DETECTOR# SMOKE DETECTOR CARGO COMP	DETECTOR# SMOKE DETECTOR CARGO COMP
1024	4950084	MANIFOLD# MAIN FUEL MANIFOLD	MANIFOLD# MAIN FUEL MANIFOLD
1025	4951030	COOLER # OIL COOLER ASSY	COOLER # OIL COOLER ASSY
1026	4951351	PROBE # PROBE 1, SPEED SENSOR	PROBE # PROBE 1, SPEED SENSOR
1027	4951352	PROBE # PROBE 2, SPEED SENSOR	PROBE # PROBE 2, SPEED SENSOR
1028	4952547	SWITCH # HIGH OIL TEMP. SWITCH	SWITCH # HIGH OIL TEMP. SWITCH
1029	49574	ROTOR # ROTOR ALTERNATOR	ROTOR # ROTOR ALTERNATOR
1030	50-0199-9	LIGHT AY# LIGHT ASSY,TAXI NOSE GEAR	LIGHT AY# LIGHT ASSY,TAXI NOSE GEAR
1031	500-12Y	ELT # EMERGENCY LOCATOR TRANSMITTER	ELT # EMERGENCY LOCATOR TRANSMITTER
1032	501-1656-04	HORIZON # INDICATOR STANDBY HORIZON	HORIZON # INDICATOR STANDBY HORIZON
1033	50160-32	LEAD # LEAD	LEAD # LEAD
1034	501FAD1-1	DADC # DIGITAL AIR DATA COMPUTER	DADC # DIGITAL AIR DATA COMPUTER
1035	5059-2	VALVE # AUTO BRAKE SHUTTLE VALVE	VALVE # AUTO BRAKE SHUTTLE VALVE
1036	508P270-44	NOZZLE # FUEL NOZZLE	NOZZLE # FUEL NOZZLE
1037	01.01.5140	REU # REMOTE ELECTRONIC UNIT	REU # REMOTE ELECTRONIC UNIT
1038	08.01.5140	REU # REMOTE ELECTRONIC UNIT	REU # REMOTE ELECTRONIC UNIT
1039	5142-1	SPEAKER # LOUDSPEAKER COCKPIT	SPEAKER # LOUDSPEAKER COCKPIT
1040	5145-1-45	ACP # AUDIO CONTROL PANEL	ACP # AUDIO CONTROL PANEL
1041	5145-1-45DLH	ACP # AUDIO CONTROL PANEL	ACP # AUDIO CONTROL PANEL
1042	5145-1-47	ACP # AUDIO CONTROL PANEL	ACP # AUDIO CONTROL PANEL
1043	5145-1-60	ACP # AUDIO CONTROL PANEL	ACP # AUDIO CONTROL PANEL
1044	5145-1-61	ACP # AUDIO CONTROL PANEL	ACP # AUDIO CONTROL PANEL
1045	5145-1-64	ACP # AUDIO CONTROL PANEL	ACP # AUDIO CONTROL PANEL
1046	52000827-1	VALVE # VALVE METERING	VALVE # VALVE METERING
1047	522-1837-000	ADF ANT # ANTENNA ADF LOOP 137A5	ADF ANT # ANTENNA ADF LOOP 137A5
1048	522-2213-038	CTRL HF # HF CONTROL PANEL	CTRL HF # HF CONTROL PANEL
1049	522-2996-011	MKR RCV # RECEIVER MARKER 51Z4	MKR RCV # RECEIVER MARKER 51Z4
1050	522-4114-008	LRRA IND# INDICATOR LRRA 339H-1	LRRA IND# INDICATOR LRRA 339H-1
1051	522-4538-002	AMPL PA # PASSENGER ADDRESS AMPLIFIER	AMPL PA # PASSENGER ADDRESS AMPLIFIER
1052	5403	FIRE DET# FIRE DETECTOR, APU	FIRE DET# FIRE DETECTOR, APU
1053	541674-4	ACTUATOR# RAM AIR DOOR ACTUATOR	ACTUATOR# RAM AIR DOOR ACTUATOR
1054	54436	SWITCH # SWITCH	SWITCH # SWITCH
1055	548376-6	UNIT-CAB# UNIT-CABIN TEMPERATURE CONTROL	UNIT-CAB# UNIT-CABIN TEMPERATURE CONTROL
1056	548384-1	ELEMENT # SENSOR ANTICIPATOR	ELEMENT # SENSOR ANTICIPATOR
1057	548388-1	ELEMENT # ELEMENT SENSOR TEMP	ELEMENT # ELEMENT SENSOR TEMP
1058	548392-1	ELEMENT # ELEMENT	ELEMENT # ELEMENT
1059	548620-2	SWITCH # SWITCH AY-THERMAL	SWITCH # SWITCH AY-THERMAL
1060	5500-A1A-BF23A	OXYBOTTL# OXY.BOTTLE 4,25 CU/FT W/O LUNG	OXYBOTTL# OXY.BOTTLE 4,25 CU/FT W/O LUNG
1061	5500-C1A-BF20B	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS
1062	5500-C1ABF20B	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS
1063	5500A1A-BF23A	OXYBOTTL# OXY.BOTTLE 4,25 CU/FT W/O LUNG	OXYBOTTL# OXY.BOTTLE 4,25 CU/FT W/O LUNG
1064	5500A1ABF23A	OXYBOTTL# OXY.BOTTLE 4,25 CU/FT W/O LUNG	OXYBOTTL# OXY.BOTTLE 4,25 CU/FT W/O LUNG
1065	5500C1ABF20B	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS
1066	55098-01	PUMP HYD# PUMP HYDR VARIABLE PFD-MAH-BRU	PUMP HYD# PUMP HYDR VARIABLE PFD-MAH-BRU
1067	55098-08	PUMP HYD# PUMP HYDRAULIC,VARIABLE DELIVR	PUMP HYD# PUMP HYDRAULIC,VARIABLE DELIVR
1068	5509808	PUMP HYD# PUMP HYDRAULIC,VARIABLE DELIVR	PUMP HYD# PUMP HYDRAULIC,VARIABLE DELIVR
1069	55584	SWITCH # SWITCH	SWITCH # SWITCH
1070	5669-7	VALVE # VALVE EE CLNG AUTO FLOW CONT	VALVE # VALVE EE CLNG AUTO FLOW CONT
1071	568-1-26713-004	PUMP # FUEL BOOSTER PUMP	PUMP # FUEL BOOSTER PUMP
1072	568-1-26713-005	PUMP # FUEL BOOSTER PUMP	PUMP # FUEL BOOSTER PUMP
1073	569670	MOTOR # TE FLAP DRIVE HYDR MOTOR	MOTOR # TE FLAP DRIVE HYDR MOTOR
1074	56B94	XMTR # OIL TEMPERATURE TRANSMITTER	XMTR # OIL TEMPERATURE TRANSMITTER
1075	5701802	SCREW AY# TE FLAP BALL NUT + SCREW 3+6	SCREW AY# TE FLAP BALL NUT + SCREW 3+6
1076	5701803	SCREW AY# TE FLAP BALL NUT + SCREW 4+5	SCREW AY# TE FLAP BALL NUT + SCREW 4+5
1077	5702224	SCREW AY# BALL SCREW ASSY 1+8 /2+7	SCREW AY# BALL SCREW ASSY 1+8 /2+7
1078	57186-07	PUMP HYD# PUMP AND MOTOR-PACKAGE, MODEL	PUMP HYD# PUMP AND MOTOR-PACKAGE, MODEL
1079	57186-10	PUMP AC # HYD A-C MOTOR DRIVEN PUMP	PUMP AC # HYD A-C MOTOR DRIVEN PUMP
1080	5718610	HYD AC P# HYD A-C MOTOR DRIVEN PUMP	HYD AC P# HYD A-C MOTOR DRIVEN PUMP
1081	572757-1	SWITCH # SWITCH AY-THERMAL	SWITCH # SWITCH AY-THERMAL
1082	580-219-032	CABLE FU# CABLE FUEL SHUTOFF RH	CABLE FU# CABLE FUEL SHUTOFF RH
1083	580-268-041	VBV CABL# VBV FEEDBACK CABLE	VBV CABL# VBV FEEDBACK CABLE
1084	580-285-051	VSV CABL# VSV FEEDBACK CABLE	VSV CABL# VSV FEEDBACK CABLE
1085	580-285-052	VSV CABL# VSV FEEDBACK CABLE	VSV CABL# VSV FEEDBACK CABLE
1086	580-285-054	VSV CABL# VSV FEEDBACK CABLE	VSV CABL# VSV FEEDBACK CABLE
1087	5865-656-8	INDIC. # BRAKE TEMP. IND.	INDIC. # BRAKE TEMP. IND.
1088	59600-5007	VALVESLD# VALVE ASSY-SOLENOID	VALVESLD# VALVE ASSY-SOLENOID
1089	59600-5011	VALVESLD# VALVE ASSY-HYD. SOLENOID	VALVESLD# VALVE ASSY-HYD. SOLENOID
1090	600011-9	DRAIN # DRAIN VALVE ASSY	DRAIN # DRAIN VALVE ASSY
1091	601200-02	ACTUATOR# LINEAR ACTUATOR SPEED BREAK	ACTUATOR# LINEAR ACTUATOR SPEED BREAK
1092	6012A-1	ACTUATOR# LINEAR ACTUATOR SPEED BREAK	ACTUATOR# LINEAR ACTUATOR SPEED BREAK
1093	6012A1	ACTUATOR# AUTOM.SPEED BRAKE ACT	ACTUATOR# AUTOM.SPEED BRAKE ACT
1094	607400-1-1	SELECTOR# SELECTOR -CAB. TEMP COMP MAINT	SELECTOR# SELECTOR -CAB. TEMP COMP MAINT
1095	607400-2-1	UNIT-CT # UNIT-CABIN TEMP SELECTOR	UNIT-CT # UNIT-CABIN TEMP SELECTOR
1096	607510-3	CONTROLL# 2GR CONTROLL BOX WATER SEP.	CONTROLL# 2GR CONTROLL BOX WATER SEP.
1097	607512-1-1	SENSOR # SENSOR	SENSOR # SENSOR
1098	607518-2	UNIT-RAC# UNIT-RAM AIR CONTROL	UNIT-RAC# UNIT-RAM AIR CONTROL
1099	607690-2	ELT # EMERGENCY LOCATOR TRANSMITTER	ELT # EMERGENCY LOCATOR TRANSMITTER
1100	607690-5	ELT # EMERGENCY LOCATOR TRANSMITTER	ELT # EMERGENCY LOCATOR TRANSMITTER
1101	60785	VALVE # VALVE ASSY - PRESSURE RELIEF	VALVE # VALVE ASSY - PRESSURE RELIEF
1102	60896-5	ACCUMLTR# ACCUMULATOR HYD BRAKE	ACCUMLTR# ACCUMULATOR HYD BRAKE



№	Код	Наименование детали	Доп.инфо
1103	60946-5	ACCUMLTR# ACCUMULATOR HYD BRAKE	ACCUMLTR# ACCUMULATOR HYD BRAKE
1104	60B00226-5	PRESS.MO# RESERVOIR PRESS.MODULAR	PRESS.MO# RESERVOIR PRESS.MODULAR
1105	60B00263-3	VALVE # AUTO BRAKE CONTROL VALVE	VALVE # AUTO BRAKE CONTROL VALVE
1106	60B00263-4	VALVE # AUTO BRAKE CONTROL VALVE	VALVE # AUTO BRAKE CONTROL VALVE
1107	60B00273-11	ACCUMLTR# ACCUMULATOR HYD BRAKE	ACCUMLTR# ACCUMULATOR HYD BRAKE
1108	60B00273-5	ACCUMLTR# ACCUMULATOR HYD BRAKE	ACCUMLTR# ACCUMULATOR HYD BRAKE
1109	60B00303-105	CLOCK # CLOCK DIGITAL CAPT & F/O	CLOCK # CLOCK DIGITAL CAPT & F/O
1110	60B40017-5	BATTERY # MAIN AND APU BATTERY	BATTERY # MAIN AND APU BATTERY
1111	60B40017-7	BATTERY # MAIN AND APU BATTERY	BATTERY # MAIN AND APU BATTERY
1112	60B40019-1	CHARGER # BATTERY CHARGER	CHARGER # BATTERY CHARGER
1113	60B40019-2	CHARGER # BATTERY CHARGER	CHARGER # BATTERY CHARGER
1114	60B40023-2	INVERTER# STATIC INVERTER	INVERTER# STATIC INVERTER
1115	60B40038-1	VALVE # RAIN REPELANT S/O VALVE	VALVE # RAIN REPELANT S/O VALVE
1116	60B40038-2	VALVE # RAIN REPELANT S/O VALVE	VALVE # RAIN REPELANT S/O VALVE
1117	60B40042-1	XMTR POS# POSITION TRANSMITTER	XMTR POS# POSITION TRANSMITTER
1118	60B40042-3	XMTR POS# POSITION TRANSMITTER	XMTR POS# POSITION TRANSMITTER
1119	60B40042-5	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
1120	60B40042-6	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
1121	60B50012-6	COMPRESR# AIR COMPRESSOR	COMPRESR# AIR COMPRESSOR
1122	60B50027-25	FAUCET # FAUCET ASSY MECHANICALLY TIMED	FAUCET # FAUCET ASSY MECHANICALLY TIMED
1123	60B50058-6	TIMER # TIMER ASSY TOILET FLUSH	TIMER # TIMER ASSY TOILET FLUSH
1124	60B50087-93	OXYBOTLE# OXYGEN BOTTLE - 77CU/FT.	OXYBOTLE# OXYGEN BOTTLE - 77CU/FT.
1125	60B92400-11	SWITCH # FUEL LOW PRESSURE SWITCH	SWITCH # FUEL LOW PRESSURE SWITCH
1126	60B92400-3	SWITCH # FUEL LOW PRESS SWITCH	SWITCH # FUEL LOW PRESS SWITCH
1127	60B92400-5	SWITCH # SWITCH PRESSURE FUEL	SWITCH # SWITCH PRESSURE FUEL
1128	60B92400-6	SWITCH # FUEL LOW PRESS. SWITCH, CENTER	SWITCH # FUEL LOW PRESS. SWITCH, CENTER
1129	60B92401-4	VALVE # VALVE AY BYPASS	VALVE # VALVE AY BYPASS
1130	6114-6	VALVE # VALVE, FLOW LIMITING	VALVE # VALVE, FLOW LIMITING
1131	61162	VALVE AY# VALVE AY SHUT OFF	VALVE AY# VALVE AY SHUT OFF
1132	61163	VALVE AY# FUEL SHUTOFF VLV AY	VALVE AY# FUEL SHUTOFF VLV AY
1133	61165	ADAPTER # ADAPTOR ASSY	ADAPTER # ADAPTOR ASSY
1134	61251	VALVE AY# ACTUATOR AY AND GATE AY	VALVE AY# ACTUATOR AY AND GATE AY
1135	61251-1	VALVE AY# ACTUATOR AY AND GATE AY	VALVE AY# ACTUATOR AY AND GATE AY
1136	6147-1	VALVE # VALVE REGULATOR	VALVE # VALVE REGULATOR
1137	617166-1	SENSOR # SENSOR TEMP	SENSOR # SENSOR TEMP
1138	61767-101	Reservoir# Reservoir and Valve Assembly	Reservoir# Reservoir and Valve Assembly
1139	61767-201	Reservoir# Reservoir and Valve Assembly	Reservoir# Reservoir and Valve Assembly
1140	61768-101	Reservoir# Reservoir and Valve Assembly	Reservoir# Reservoir and Valve Assembly
1141	61768-201	Reservoir# Reservoir and Valve Assembly	Reservoir# Reservoir and Valve Assembly
1142	622-1181-001	XCVR VHF# VHF COMM TRANSCEIVER 618M-3	XCVR VHF# VHF COMM TRANSCEIVER 618M-3
1143	622-1396-101	XCVR VHF# VHF COMM TRANSCEIVER 618M-3A	XCVR VHF# VHF COMM TRANSCEIVER 618M-3A
1144	622-2224-001	ATC XPDR# TRANSPONDER ATC 621A-6	ATC XPDR# TRANSPONDER ATC 621A-6
1145	622-2921-001	DME INTR# INTERROGATOR DME 860E-5	DME INTR# INTERROGATOR DME 860E-5
1146	622-2921-006	DME INTR# INTERROGATOR DME 860E-5	DME INTR# INTERROGATOR DME 860E-5
1147	622-3257-001	VOR RCV # RECEIVER NAV 51RV4	VOR RCV # RECEIVER NAV 51RV4
1148	622-3699-001	ADAPTER # ADAPTER HF TRANSCEIVER	ADAPTER # ADAPTER HF TRANSCEIVER
1149	622-3890-020	LRRA TR # TRANSCEIVER LRRA 860F-4	LRRA TR # TRANSCEIVER LRRA 860F-4
1150	622-3890-021	LRRA TR # TRANSCEIVER LRRA 860F-4	LRRA TR # TRANSCEIVER LRRA 860F-4
1151	622-4096-001	AMPL PA # PASSENGER ADDRESS AMPLIFIER	AMPL PA # PASSENGER ADDR AMPLIFIER
1152	622-4096-002	AMPL PA # PASSENGER ADDR AMPLIFIER	AMPL PA # PASSENGER ADDR AMPLIFIER
1153	622-4555-002	RLS-701 # RLS-701 REMOTE LIGHT SENSOR	RLS-701 # RLS-701 REMOTE LIGHT SENSOR
1154	622-5129-105	CTRL WXR# WXR CONTROL PANEL WCP-701	CTRL WXR# WXR CONTROL PANEL WCP-701
1155	622-5132-106	XCVR WXR# WXR TRANSCEIVER WRT-701X	XCVR WXR# WXR TRANSCEIVER WRT-701X
1156	622-5135-002	DRV WXR # WXR ANTENNA PEDESTAL SINGLE	DRV WXR # WXR ANTENNA PEDESTAL SINGLE
1157	622-5272-001	XCVR HF # HF COMM TRANSCEIVER HFS-700	XCVR HF # HF COMM TRANSCEIVER HFS-700
1158	622-5342-001	AMPL PA # PUBLIC ADDRESS AMPLIFIER	AMPL PA # PUBLIC ADDRESS AMPLIFIER
1159	622-5377-001	XCVR HF # HF TRANSCEIVER 628T-2A	XCVR HF # HF TRANSCEIVER 628T-2A
1160	622-6827-002	CTRL HF # HF COMM CONTROL PANEL	CTRL HF # HF COMM CONTROL PANEL
1161	622-6831-021	CTRL VHF# VHF COMM CONTROL PANEL	CTRL VHF# VHF COMM CONTROL PANEL
1162	622-7878-201	XPDR ATC# TRANSPONDER ATC TPR-720	XPDR ATC# TRANSPONDER ATC TPR-720
1163	622-7998-003	EFIS ADI# EFIS ATTITUDE DIRECTOR IND	EFIS ADI# EFIS ATTITUDE DIRECTOR IND
1164	622-7998-013	EFIS ADI# EFIS ATTITUDE DIRECTOR IND	EFIS ADI# EFIS ATTITUDE DIRECTOR IND
1165	622-7999-002	EFIS HSI# EFIS HORIZONTAL SITUATION IND	EFIS HSI# EFIS HORIZONTAL SITUATION IND
1166	622-7999-003	EFIS HSI# EFIS HORIZONTAL SITUATION IND	EFIS HSI# EFIS HORIZONTAL SITUATION IND
1167	622-7999-013	EFIS HSI# EFIS HORIZONTAL SITUATION IND	EFIS HSI# EFIS HORIZONTAL SITUATION IND
1168	622-8000-005	EFIP-701# ELCTRONIC FLIGHT INSTR PROCESS	EFIP-701# ELCTRONIC FLIGHT INSTR PROCESS
1169	622-8000-006	EFIP-701# EFIS SYMBOL GENERATOR	EFIP-701# EFIS SYMBOL GENERATOR
1170	622-8001-350	EFIS CTL# EFIS CONTROL PANEL	EFIS CTL# EFIS CONTROL PANEL
1171	622-8001-352	EFIS CTL# EFIS CONTROL PANEL	EFIS CTL# EFIS CONTROL PANEL
1172	622-8971-020	TCAS XCV# TRANSCEIVER TCAS II	TCAS XCV# TRANSCEIVER TCAS II
1173	622-8971-022	TCAS XCV# COMPUTER TCAS II CHANGE 7	TCAS XCV# COMPUTER TCAS II CHANGE 7
1174	622-8973-001	ANT TCAS# ANTENNA TCAS-DIRECTIONAL	ANT TCAS# ANTENNA TCAS-DIRECTIONAL
1175	622-8974-016	CTRL TCA# TCAS TRANSPONDER CONTROL PANEL	CTRL TCA# TCAS TRANSPONDER CONTROL PANEL
1176	622-9436-100	EFIP-701# EFIS SYMBOL GENERATOR UNIT	EFIP-701# EFIS SYMBOL GENERATOR UNIT
1177	622-9436-101	EFIP-701# EFIS SYMBOL GENERATOR UNIT	EFIP-701# EFIS SYMBOL GENERATOR UNIT
1178	623337	PUMP EDP# PUMP HYDRAULIC EDP	PUMP EDP# PUMP HYDRAULIC EDP
1179	6237M86B	SENSOR # VIBRATION SENSOR BRG.5	SENSOR # VIBRATION SENSOR BRG.5
1180	6252	FUSE # HYDR FUSE BRAKE	FUSE # HYDR FUSE BRAKE
1181	6257	FUSE HYD# FUSE HYDRAULIC VLMTRC	FUSE HYD# FUSE HYDRAULIC VLMTRC
1182	6271	FUSE AY# FUSE ASSY	FUSE AY# FUSE ASSY
1183	6271-1	FUSE HYD# FUSE MLG WHEEL WELL AND AFT CA	FUSE HYD# FUSE MLG WHEEL WELL AND AFT CA
1184	6272	FUSE # FUSE ASSY	FUSE # FUSE ASSY
1185	6272-1	FUSE # FUSE ASSY	FUSE # FUSE ASSY
1186	6273-1	FUSE T/R# FUSE AY HYDR VOLUMETRIC T/R	FUSE T/R# FUSE AY HYDR VOLUMETRIC T/R
1187	6273-5	FUSE # FUSE AY	FUSE # FUSE AY



№	Код	Наименование детали	Доп.инфо
1188	627570-1	SENSOR # SENSOR	SENSOR # SENSOR
1189	63169	PTU # POWER TRANSFER UNIT HYD SYS	PTU # POWER TRANSFER UNIT HYD SYS
1190	641100-2	SWITCH # SWITCH AY-THERMAL	SWITCH # SWITCH AY-THERMAL
1191	64161-233-1	ALT IND # ALTIMETER METRIC	ALT IND # ALTIMETER METRIC
1192	64161.233.1	ALT IND # ALTIMETER	ALT IND # ALTIMETER
1193	645055-2	FAN MOTR# EQU.COOLING SUPPLY FAN	FAN MOTR# EQU.COOLING SUPPLY FAN
1194	645055-3	FAN MOTR# EQU.COOLING SUPPLY FAN	FAN MOTR# EQU.COOLING SUPPLY FAN
1195	645405-1	REC FAN # RECIRCULATION FAN	REC FAN # RECIRCULATION FAN
1196	645405-2	REC FAN # RECIRCULATION FAN	REC FAN # RECIRCULATION FAN
1197	65-0294-21	LT-MCD # LIGHT AY-MASTER CAUTION DISPL.	LT-MCD # LIGHT AY-MASTER CAUTION DISPL.
1198	65-0294-23	LT-MCD # LIGHT AY-MASTER CAUTION DISPL.	LT-MCD # LIGHT AY-MASTER CAUTION DISPL.
1199	65-17819-10	ACTUATOR# NLG LOCK ACTUATOR	ACTUATOR# NLG LOCK ACTUATOR
1200	65-17819-14	ACTUATOR# NLG LOCK ACTUATOR	ACTUATOR# NLG LOCK ACTUATOR
1201	65-17819-8	ACTUATOR# NLG LOCK ACTUATOR	ACTUATOR# NLG LOCK ACTUATOR
1202	65-17821-18	MODULE # MODULE HYDR SYSTEM A UND B	MODULE # MODULE HYDR SYSTEM A UND B
1203	65-17821-20	MODULE # MODULE HYDR SYSTEM A UND B	MODULE # MODULE HYDR SYSTEM A UND B
1204	65-17821-21	MODULE # MODULE HYDR SYSTEM A UND B	MODULE # MODULE HYDR SYSTEM A UND B
1205	65-2346-3	SNUBBER # SNUBBER AY-GALLEY DOOR	SNUBBER # SNUBBER AY-GALLEY DOOR
1206	65-2346-4	SNUBBER # SNUBBER AY-GALLEY DOOR	SNUBBER # SNUBBER AY-GALLEY DOOR
1207	65-2346-5	SNUBBER # SNUBBER AY-GALLEY DOOR	SNUBBER # SNUBBER AY-GALLEY DOOR
1208	65-24721-1	WHEEL # WHEEL ASSY	WHEEL # WHEEL ASSY
1209	65-24721-3	WHEEL # WHEEL ASSY STAB TRIM	WHEEL # WHEEL ASSY STAB TRIM
1210	65-24721-6	WHEEL # WHEEL ASSY STAB TRIM	WHEEL # WHEEL ASSY STAB TRIM
1211	65-24721-8	WHEEL # WHEEL ASSY STAB TRIM	WHEEL # WHEEL ASSY STAB TRIM
1212	65-24721-9	WHEEL AY# WHEEL AY STAB TRIM	WHEEL AY# WHEEL AY STAB TRIM
1213	65-44503-10	ACTUATOR# ELEVATOR FEEL ACTUATOR ASSY	ACTUATOR# ELEVATOR FEEL ACTUATOR ASSY
1214	65-44503-8	CYLINDER# ELEVATOR FEEL ACTUATOR ASSY	CYLINDER# ELEVATOR FEEL ACTUATOR ASSY
1215	65-44551-5	ACTUATOR# LE FLAP ACTUATOR	ACTUATOR# LE FLAP ACTUATOR
1216	65-44551-6	ACTUATOR# LE FLAP ACTUATOR	ACTUATOR# LE FLAP ACTUATOR
1217	65-44551-7	ACTUATOR# LE FLAP ACTUATOR	ACTUATOR# LE FLAP ACTUATOR
1218	65-44551-9	ACTUATOR# LE FLAP ACTUATOR	ACTUATOR# LE FLAP ACTUATOR
1219	65-44561-10	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1220	65-44561-11	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1221	65-44561-12	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1222	65-44561-13	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1223	65-44561-14	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1224	65-44561-15	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1225	65-44561-5	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1226	65-44561-5X	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1227	65-44561-6	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1228	65-44561-6X	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1229	65-44561-7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1230	65-44561-8	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1231	65-44561-8X	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1232	65-44561-9	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7	ACTUATOR# FLIGHT SPOILER ACT NO 2,3,6,7
1233	65-44600-19	RSRVR AY# RESERVOIR AY SYST A HYDRAULIC	RSRVR AY# RESERVOIR AY SYST A HYDRAULIC
1234	65-44600-20	RSRVR AY# RESERVOIR AY SYST A HYDRAULIC	RSRVR AY# RESERVOIR AY SYST A HYDRAULIC
1235	65-44600-22	RSRVR AY# RESERVOIR AY SYST A HYDRAULIC	RSRVR AY# RESERVOIR AY SYST A HYDRAULIC
1236	65-44610-4	ACTUATOR# ACTUATOR RETRACTION NLG	ACTUATOR# ACTUATOR RETRACTION NLG
1237	65-44631-1	VALVE # TE FLAP CONTROL VALVE	VALVE # TE FLAP CONTROL VALVE
1238	65-44681-11	MODULESB# MODULE STANDBY HYDR SYSTEM	MODULESB# MODULE STANDBY HYDR SYSTEM
1239	65-44681-17	MODULESB# MODULE STANDBY HYDR SYSTEM	MODULESB# MODULE STANDBY HYDR SYSTEM
1240	65-44691-3	MODULAR # MODULE HYDRAULIC MLG	MODULAR # MODULE HYDRAULIC MLG
1241	65-44691-4	MODULAR # MODULE HYDRAULIC NLG	MODULAR # MODULE HYDRAULIC NLG
1242	65-44691-5	MODULAR # MODULE HYDRAULIC MLG	MODULAR # MODULE HYDRAULIC MLG
1243	65-44691-6	MODULAR # MODULE HYDRAULIC NLG	MODULAR # MODULE HYDRAULIC NLG
1244	65-44710-3	CYLINDER# CYLINDER STEERING ACTUATOR NLG	CYLINDER# CYLINDER STEERING ACTUATOR NLG
1245	65-44710-4	CYLINDER# CYLINDER STEERING ACTUATOR NLG	CYLINDER# CYLINDER STEERING ACTUATOR NLG
1246	65-44710-7	CYLINDER# CYLINDER STEERING ACTUATOR NLG	CYLINDER# CYLINDER STEERING ACTUATOR NLG
1247	65-44710-8	CYLINDER# CYLINDER STEERING ACTUATOR NLG	CYLINDER# CYLINDER STEERING ACTUATOR NLG
1248	65-44710-9	CYLINDER# CYLINDER STEERING ACTUATOR NLG	CYLINDER# CYLINDER STEERING ACTUATOR NLG
1249	65-44760-10	ACTUATOR# L/E SLAT ACTUATOR 1+6	ACTUATOR# L/E SLAT ACTUATOR 1+6
1250	65-44760-11	ACTUATOR# L/E SLAT ACTUATOR 3+4	ACTUATOR# L/E SLAT ACTUATOR 3+4
1251	65-44760-13	ACTUATOR# L/E SLAT ACTUATOR 1+6	ACTUATOR# L/E SLAT ACTUATOR 1+6
1252	65-44760-14	ACTUATOR# L/E SLAT ACTUATOR 3+4	ACTUATOR# L/E SLAT ACTUATOR 3+4
1253	65-44760-25	SLATACTU# L/E SLAT ACTUATOR 1+6	SLATACTU# L/E SLAT ACTUATOR 1+6
1254	65-44760-26	ACTUATOR# ACTUATOR ASSY L/E SLAT 3+4	ACTUATOR# ACTUATOR ASSY L/E SLAT 3+4
1255	65-44760-27	ACTUATOR# ACTUATOR ASSY L/E SLAT 2+5	ACTUATOR# ACTUATOR ASSY L/E SLAT 2+5
1256	65-44760-34	SLATACTU# L/E SLAT ACTUATOR 3+4	SLATACTU# L/E SLAT ACTUATOR 3+4
1257	65-44760-35	SLATACTU# L/E SLAT ACTUATOR 2+5	SLATACTU# L/E SLAT ACTUATOR 2+5
1258	65-44760-7	ACTUATOR# L/E SLAT ACTUATOR 3+4	ACTUATOR# L/E SLAT ACTUATOR 3+4
1259	65-44761-12	UNIT # AIL + ELEV PCU	UNIT # AIL + ELEV PCU
1260	65-44761-15	UNIT # AIL + ELEV PCU	UNIT # AIL + ELEV PCU
1261	65-44761-16	UNIT # AIL + ELEV PCU	UNIT # AIL + ELEV PCU
1262	65-44761-18	POWER UT# AIL/ELEV. POWER CONTROL UNIT	POWER UT# AIL/ELEV. POWER CONTROL UNIT
1263	65-44761-19	UNIT # AIL + ELEV PCU	UNIT # AIL + ELEV PCU
1264	65-44761-21	POWER UT# AIL/ELEV. POWER CONTROL UNIT	POWER UT# AIL/ELEV. POWER CONTROL UNIT
1265	65-44761-22	POWER UT# AIL/ELEV. POWER CONTROL UNIT	POWER UT# AIL/ELEV. POWER CONTROL UNIT
1266	65-44771-3	DAMPER # SHIMMY DAMPER MLG	DAMPER # SHIMMY DAMPER MLG
1267	65-44771-4	DAMPER # SHIMMY DAMPER MLG	DAMPER # SHIMMY DAMPER MLG
1268	65-44810-3	ACTUATOR# ACTUATOR LOCK MLG RH	ACTUATOR# ACTUATOR LOCK MLG RH
1269	65-44810-4	ACTUATOR# ACTUATOR LOCK MLG LH	ACTUATOR# ACTUATOR LOCK MLG LH
1270	65-44810-5	ACTUATOR# ACTUATOR LOCK MLG RH	ACTUATOR# ACTUATOR LOCK MLG RH
1271	65-44810-6	ACTUATOR# ACTUATOR LOCK MLG LH	ACTUATOR# ACTUATOR LOCK MLG LH
1272	65-44851-12	ACTUATOR# ACTUATOR ASSY-GND SPOILER LOCK	ACTUATOR# ACTUATOR ASSY-GND SPOILER LOCK



№	Код	Наименование детали	Доп.инфо
1273	65-44851-13	ACTUATOR# ACTUATOR ASSY-GND SPOILER LOCK	ACTUATOR# ACTUATOR ASSY-GND SPOILER LOCK
1274	65-44851-7	ACTUATOR# ACTUATOR ASSY-GND SPOILER LOCK	ACTUATOR# ACTUATOR ASSY-GND SPOILER LOCK
1275	65-44861-12	PCU RUD # RUDDER POWER CONTROL UNIT	PCU RUD # RUDDER POWER CONTROL UNIT
1276	65-44891-7	MODULAR # FLIGHT CONTROL MODULAR ASSY	MODULAR # FLIGHT CONTROL MODULAR ASSY
1277	65-44891-8	MODULAR # FLIGHT CONTROL MODULAR ASSY	MODULAR # FLIGHT CONTROL MODULAR ASSY
1278	65-44910-11	ACTUATOR# ACTUATOR RETRACTION MLG	ACTUATOR# ACTUATOR RETRACTION MLG
1279	65-44910-12	ACTUATOR# ACTUATOR RETRACTION MLG	ACTUATOR# ACTUATOR RETRACTION MLG
1280	65-44910-27	ACTUATOR# ACTUATOR RETRACTION MLG	ACTUATOR# ACTUATOR RETRACTION MLG
1281	65-44910-29	ACTUATOR# ACTUATOR RETRACTION MLG	ACTUATOR# ACTUATOR RETRACTION MLG
1282	65-44910-30	ACTUATOR# ACTUATOR RETRACTION MLG	ACTUATOR# ACTUATOR RETRACTION MLG
1283	65-44910-32	ACTUATOR# ACTUATOR RETRACTION MLG	ACTUATOR# ACTUATOR RETRACTION MLG
1284	65-44910-6	ACTUATOR# ACTUATOR RETRACTION MLG	ACTUATOR# ACTUATOR RETRACTION MLG
1285	65-44910-7	ACTUATOR# ACTUATOR RETRACTION MLG	ACTUATOR# ACTUATOR RETRACTION MLG
1286	65-44910-8	ACTUATOR# ACTUATOR RETRACTION MLG	ACTUATOR# ACTUATOR RETRACTION MLG
1287	65-44910-9	ACTUATOR# ACTUATOR RETRACTION MLG	ACTUATOR# ACTUATOR RETRACTION MLG
1288	65-44980-13	DISC AY # DISCONNECT AY MODULAR HYDR GRD	DISC AY # DISCONNECT AY MODULAR HYDR GRD
1289	65-44980-9	DISC AY # DISCONNECT AY MODULAR HYDR GRD	DISC AY # DISCONNECT AY MODULAR HYDR GRD
1290	65-44981-5	MODULEAY# MODULE GRD SERVICE HYDR PACKAG	MODULEAY# MODULE GRD SERVICE HYDR PACKAG
1291	65-44981-6	MODULEAY# MODULE GRD SERVICE HYDR PACKAG	MODULEAY# MODULE GRD SERVICE HYDR PACKAG
1292	65-45122-12	COLUMN F# COLUMN FO	COLUMN F# COLUMN FO
1293	65-45122-13	COLUMN C# COLUMN CAPT	COLUMN C# COLUMN CAPT
1294	65-45314-53	MODULE # DELTA-P-MODULE	MODULE # DELTA-P-MODULE
1295	65-45314-58	MODULE # DELTA-P-MODULE	MODULE # DELTA-P-MODULE
1296	65-46203-24	COLLAR A# COLLAR AY STEERING NLG	COLLAR A# COLLAR AY STEERING NLG
1297	65-46203-26	COLLAR A# COLLAR AY STEERING NLG	COLLAR A# COLLAR AY STEERING NLG
1298	65-46203-31	COLLAR A# COLLAR ASSY STEERING	COLLAR A# COLLAR ASSY STEERING
1299	65-46230-11	BRACE AY# LOWER DRAG BRACE ASSY	BRACE AY# LOWER DRAG BRACE ASSY
1300	65-46230-13	BRACE AY# LOWER DRAG BRACE ASSY	BRACE AY# LOWER DRAG BRACE ASSY
1301	65-46230-17	BRACE AY# LOWER DRAG BRACE ASSY	BRACE AY# LOWER DRAG BRACE ASSY
1302	65-46288-11	LINK AY # TORSION LINK ASSY	LINK AY # TORSION LINK ASSY
1303	65-46288-13	LINK AY # TORSION LINK ASSY	LINK AY # TORSION LINK ASSY
1304	65-46288-15	LINK AY # TORSION LINK ASSY	LINK AY # TORSION LINK ASSY
1305	65-46288-9	LINK AY # TORSION LINK ASSY	LINK AY # TORSION LINK ASSY
1306	65-46360-3	MIXER,SP# MIXER ASSY SPOILER	MIXER,SP# MIXER ASSY SPOILER
1307	65-46360-4	MIXER,SP# MIXER ASSY SPOILER	MIXER,SP# MIXER ASSY SPOILER
1308	65-46360-5	MIXER,SP# MIXER ASSY SPOILER	MIXER,SP# MIXER ASSY SPOILER
1309	65-46360-6	MIXER,SP# MIXER ASSY SPOILER	MIXER,SP# MIXER ASSY SPOILER
1310	65-46360-7	MIXER,SP# MIXER ASSY SPOILER	MIXER,SP# MIXER ASSY SPOILER
1311	65-46370-16	CHANGER # CHANGER ASSY - RATIO	CHANGER # CHANGER ASSY - RATIO
1312	65-46370-17	CHANGER # CHANGER ASSY - RATIO	CHANGER # CHANGER ASSY - RATIO
1313	65-46370-18	CHANGER # CHANGER ASSY - RATIO	CHANGER # CHANGER ASSY - RATIO
1314	65-46370-19	CHANGER # CHANGER ASSY - RATIO	CHANGER # CHANGER ASSY - RATIO
1315	65-46370-20	CHANGER # CHANGER ASSY - RATIO	CHANGER # CHANGER ASSY - RATIO
1316	65-46481-101	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH
1317	65-46481-103	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1318	65-46481-104	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH
1319	65-46481-105	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1320	65-46481-106	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH
1321	65-46481-107	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1322	65-46481-108	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH
1323	65-46481-109	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1324	65-46481-110	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH
1325	65-46481-111	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH
1326	65-46481-113	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1327	65-46481-114	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH
1328	65-46481-115	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH
1329	65-46481-117	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1330	65-46481-118	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH
1331	65-46481-119	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1332	65-46481-120	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH
1333	65-46481-121	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH
1334	65-46481-123	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH
1335	65-46481-133	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1336	65-46481-87	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH
1337	65-46481-89	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1338	65-46481-90	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH
1339	65-46481-91	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH
1340	65-46481-93	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1341	65-46481-94	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH
1342	65-46481-97	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH
1343	65-49540-109	LENS AY # LENS AY LH WING & TAXI LIGHT	LENS AY # LENS AY LH WING & TAXI LIGHT
1344	65-49970-25	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1345	65-49970-26	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1346	65-49970-27	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1347	65-49970-28	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1348	65-49970-29	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1349	65-50254-2	TRANSMIS# TE FLAP TRANSMISSION POS 4	TRANSMIS# TE FLAP TRANSMISSION POS 4
1350	65-50254-4	TRANSMIS# TE FLAP TRANSMISSION POS 4	TRANSMIS# TE FLAP TRANSMISSION POS 4
1351	65-50254-5	TRANSMIS# TE FLAP TRANSMISSION POS 4	TRANSMIS# TE FLAP TRANSMISSION POS 4
1352	65-50254-6	TRANSMIS# TE FLAP TRANSMISSION POS 4	TRANSMIS# TE FLAP TRANSMISSION POS 4
1353	65-50255-2	TRANSMIS# TE FLAP TRANSMISSION POS 5	TRANSMIS# TE FLAP TRANSMISSION POS 5
1354	65-50255-4	TRANSMIS# TE FLAP TRANSMISSION POS 5	TRANSMIS# TE FLAP TRANSMISSION POS 5
1355	65-50255-5	TRANSMIS# TE FLAP TRANSMISSION POS 5	TRANSMIS# TE FLAP TRANSMISSION POS 5
1356	65-50255-6	TRANSMIS# TE FLAP TRANSMISSION POS 5	TRANSMIS# TE FLAP TRANSMISSION POS 5
1357	65-50324-1	TRANSMIS# TE FLAP TRANSMISSION POS 4	TRANSMIS# TE FLAP TRANSMISSION POS 4



№	Код	Наименование детали	Доп.инфо
1358	65-50324-2	TRANSMIS# TE FLAP TRANSMISSION POS 4	TRANSMIS# TE FLAP TRANSMISSION POS 4
1359	65-50324-3	TRANSMIS# TE FLAP TRANSMISSION POS 4	TRANSMIS# TE FLAP TRANSMISSION POS 4
1360	65-50324-4	TRANSMIS# TE FLAP TRANSMISSION POS 4	TRANSMIS# TE FLAP TRANSMISSION POS 4
1361	65-50324-5	TRANSMIS# FLAP TRANSMISSION POS 4	TRANSMIS# FLAP TRANSMISSION POS 4
1362	65-50325-1	TRANSMIS# TE FLAP TRANSMISSION POS 5	TRANSMIS# TE FLAP TRANSMISSION POS 5
1363	65-50325-2	TRANSMIS# TE FLAP TRANSMISSION POS 5	TRANSMIS# TE FLAP TRANSMISSION POS 5
1364	65-50325-3	TRANSMIS# FLAP TRANSMISSION POS 5	TRANSMIS# FLAP TRANSMISSION POS 5
1365	65-50325-4	TRANSMIS# TE FLAP TRANSMISSION POS 5	TRANSMIS# TE FLAP TRANSMISSION POS 5
1366	65-50325-5	TRANSMIS# TE FLAP TRANSMISSION POS 5	TRANSMIS# TE FLAP TRANSMISSION POS 5
1367	65-52803-8	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
1368	65-52805-339	ACC UNIT# ACCESSORY UNIT FLT INSTRUMENT	ACC UNIT# ACCESSORY UNIT FLT INSTRUMENT
1369	65-52805-379	ACC UNIT# ACCESSORY UNIT FLT INSTRUMENT	ACC UNIT# ACCESSORY UNIT FLT INSTRUMENT
1370	65-52806-365	UNIT-SWT# SOLID STATE SW ACC. UNIT	UNIT-SWT# SOLID STATE SW ACC. UNIT
1371	65-52806-444	MISC.ACC# ACCESSORY UNIT M278	MISC.ACC# ACCESSORY UNIT M278
1372	65-52807-33	ACC UNIT# FLAP SLAT POS ACCESSORY UNIT	ACC UNIT# FLAP SLAT POS ACCESSORY UNIT
1373	65-52807-39	ACC UNIT# FLAP SLAT POS ACCESSORY UNIT	ACC UNIT# FLAP SLAT POS ACCESSORY UNIT
1374	65-52807-73	ACC UNIT# FLAP SLAT POS ACCESSORY UNIT	ACC UNIT# FLAP SLAT POS ACCESSORY UNIT
1375	65-52807-76	ACC UNIT# FLAP SLAT POS ACCESSORY UNIT	ACC UNIT# FLAP SLAT POS ACCESSORY UNIT
1376	65-52810-50	ACAU # AIR CONDITIONING ACC. UNIT	ACAU # AIR CONDITIONING ACC. UNIT
1377	65-52810-57	ACAU # ACC. UNIT AIR CONDITIONING	ACAU # ACC. UNIT AIR CONDITIONING
1378	65-52810-59	ACAU # ACC. UNIT AIR CONDITIONING	ACAU # ACC. UNIT AIR CONDITIONING
1379	65-52813-16	UNIT # POWER SYSTEM TEST MODULE	UNIT # POWER SYSTEM TEST MODULE
1380	65-52817-9	AFC UNIT# AFP ACCESSORY UNIT	AFC UNIT# AFP ACCESSORY UNIT
1381	65-52818-7	ASL COMP# AUTO SLAT COMPUTER	ASL COMP# AUTO SLAT COMPUTER
1382	65-52818-9	ASL COMP# AUTO SLAT COMPUTER	ASL COMP# AUTO SLAT COMPUTER
1383	65-52819-13	COMP-STW# STALL WARNING COMPUTER	COMP-STW# STALL WARNING COMPUTER
1384	65-52819-23	COMP-STW# STALL WARNING COMPUTER	COMP-STW# STALL WARNING COMPUTER
1385	65-52819-7	COMP-STW# STALL WARNING COMPUTER	COMP-STW# STALL WARNING COMPUTER
1386	65-52820-1	IFSAU # INTEGRATED FLIGHT SYS ACC UNIT	IFSAU # INTEGRATED FLIGHT SYS ACC UNIT
1387	65-52820-2	IFSAU # INTEGRATED FLIGHT SYS ACC UNIT	IFSAU # INTEGRATED FLIGHT SYS ACC UNIT
1388	65-52822-3	COMPUTER# COMPUTER ASSY STALL MANAGEMENT	COMPUTER# COMPUTER ASSY STALL MANAGEMENT
1389	65-52822-7	COMPUTER# COMPUTER ASSY STALL MANAGEMENT	COMPUTER# COMPUTER ASSY STALL MANAGEMENT
1390	65-53776-142	DRAIN # DRAIN MAST LAV B AND C	DRAIN # DRAIN MAST LAV B AND C
1391	65-54200-12	MECHANIS# MECHANISM ASSY	MECHANIS# MECHANISM ASSY
1392	65-54200-14	MECHANIS# MECHANISM ASSY,FLIGHT CONTROLS	MECHANIS# MECHANISM ASSY,FLIGHT CONTROLS
1393	65-54200-15	MECHANIS# MECHANISM ASSY,FLIGHT CONTROLS	MECHANIS# MECHANISM ASSY,FLIGHT CONTROLS
1394	65-54200-16	MECHANIS# MECHANISM ASSY,FLIGHT CONTROLS	MECHANIS# MECHANISM ASSY,FLIGHT CONTROLS
1395	65-54200-7	MECHANIS# MECHANISM ASSY	MECHANIS# MECHANISM ASSY
1396	65-54200-8	MECHANIS# MECHANISM ASSY	MECHANIS# MECHANISM ASSY
1397	65-54499-15	BOX # AURAL WARNING BOX	BOX # AURAL WARNING BOX
1398	65-54499-23	BOX # AURAL WARNING BOX	BOX # AURAL WARNING BOX
1399	65-54499-32	BOX # AURAL WARNING BOX	BOX # AURAL WARNING BOX
1400	65-54499-34	BOX # AURAL WARNING BOX	BOX # AURAL WARNING BOX
1401	65-54499-36	BOX # AURAL WARNING BOX	BOX # AURAL WARNING BOX
1402	65-54499-38	AuWa Box# AURAL WARNING BOX	AuWa Box# AURAL WARNING BOX
1403	65-55636-2	SHAKER # SHAKER CONTROL MOTOR	SHAKER # SHAKER CONTROL MOTOR
1404	65-58250-29	CARD AY # CARD ASSY	CARD AY # CARD ASSY
1405	65-62575-45	MUFFLER # APU EXHAUST MUFFLER	MUFFLER # APU EXHAUST MUFFLER
1406	65-62575-46	MUFFLER # APU EXHAUST MUFFLER	MUFFLER # APU EXHAUST MUFFLER
1407	65-64960-3	LIGHT-AN# ANNUNCIATOR LIGHTS	LIGHT-AN# ANNUNCIATOR LIGHTS
1408	65-65382-14	DRAIN AY# DRAIN ASSY	DRAIN AY# DRAIN ASSY
1409	65-65382-19	DRAIN AY# DRAIN ASSY	DRAIN AY# DRAIN ASSY
1410	65-73606-149	UNIT # ENG ACC UNIT	UNIT # ENG ACC UNIT
1411	65-73606-151	UNIT # ENG ACC UNIT	UNIT # ENG ACC UNIT
1412	65-73606-152	UNIT # ENG ACC UNIT	UNIT # ENG ACC UNIT
1413	65-73606-170	UNIT # ENG ACC UNIT	UNIT # ENG ACC UNIT
1414	65-75960-18	MECH. AY# MECHANISM ASSY AILERON CENTERG	MECH. AY# MECHANISM ASSY AILERON CENTERG
1415	65-75960-22	MECH. AY# MECHANISM ASSY AILERON CENTERG	MECH. AY# MECHANISM ASSY AILERON CENTERG
1416	65-75960-23	MECHANIS# MECHANISM ASSY AILERON CENTER	MECHANIS# MECHANISM ASSY AILERON CENTER
1417	65-75960-25	MECHANIS# MECHANISM ASSY AILERON	MECHANIS# MECHANISM ASSY AILERON
1418	65-84209-21	ACC UNIT# AUTO SPEEDBRAKE ACCESSORY UNIT	ACC UNIT# AUTO SPEEDBRAKE ACCESSORY UNIT
1419	651-635	MASK # MASK FULL FACE OXYGEN	MASK # MASK FULL FACE OXYGEN
1420	6577-1	FAN-EC # FAN-EQUIPMENT COOLING	FAN-EC # FAN-EQUIPMENT COOLING
1421	6594-01	MODULE # CONTROL MODULE FIRE OVERHEAT	MODULE # CONTROL MODULE FIRE OVERHEAT
1422	65C21468-13	GRILL AY# GRILL ASSY	GRILL AY# GRILL ASSY
1423	65C21468-15	GRILL AY# GRILL AY	GRILL AY# GRILL AY
1424	65C25410-1	UNIT RDR# RUDDER CONTR.AND CENTER.UNIT	UNIT RDR# RUDDER CONTR.AND CENTER.UNIT
1425	65C25410-2	UNIT RDR# RUDDER CONTR.AND CENTER.UNIT	UNIT RDR# RUDDER CONTR.AND CENTER.UNIT
1426	65C25465-18	UNIT # ELEVATOR FEEL & CENTERING UNIT	UNIT # ELEVATOR FEEL & CENTERING UNIT
1427	65C25529-11	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1428	65C25529-12	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1429	65C25529-15	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1430	65C25529-16	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1431	65C25529-19	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1432	65C25529-21	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1433	65C25529-22	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1434	65C25529-24	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1435	65C25529-26	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1436	65C25529-6	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1437	65C25529-7	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT	SWITCH A# SW ASSY STEP TRIM CONTR CUTOUT
1438	65C26833-2	VALVE # STEERING DEPRESS.VALVE NLG	VALVE # STEERING DEPRESS.VALVE NLG
1439	65C26833-3	VALVE # STEERING DEPRESS.VALVE NLG	VALVE # STEERING DEPRESS.VALVE NLG
1440	65C26859-1	ACTUATOR# ACTUATOR BRAKE FEEL	ACTUATOR# ACTUATOR BRAKE FEEL
1441	65C26860-11	RSRVR AY# RESERVOIR AY HYDR B SYSTEM	RSRVR AY# RESERVOIR AY HYDR B SYSTEM
1442	65C26860-15	RSRVR AS# RESERVOIR AY, SYS B HYDRAULIC	RSRVR AS# RESERVOIR AY, SYS B HYDRAULIC



№	Код	Наименование детали	Доп.инфо
1443	65C26860-9	RSRVR AY# RESERVOIR AY HYDR B SYSTM	RSRVR AY# RESERVOIR AY HYDR B SYSTM
1444	65C26864-2	ACTUATOR# ACTUATOR ASSY-GROUND SPOILER	ACTUATOR# ACTUATOR ASSY-GROUND SPOILER
1445	65C26869-2	VALVE # VALVE AUTOSLAT CONTROL	VALVE # VALVE AUTOSLAT CONTROL
1446	65C26873-4	MODULAR # PRESSURE MODULAR A+B SYST.	MODULAR # PRESSURE MODULAR A+B SYST.
1447	65C26873-5	MODULAR # PRESSURE MODULAR A+B SYST.	MODULAR # PRESSURE MODULAR A+B SYST.
1448	65C27383-39J	BOX ASSY# BOX ASSY-OXYGEN ONLY	BOX ASSY# BOX ASSY-OXYGEN ONLY
1449	65C27501-1	XSMN AY # FLAP TRANSMISSION POS 1	XSMN AY # FLAP TRANSMISSION POS 1
1450	65C27501-2	YSMN AY # FLAP TRANSMISSION POS 1	YSMN AY # FLAP TRANSMISSION POS 1
1451	65C27501-3	YSMN AY # FLAP TRANSMISSION POS 1	YSMN AY # FLAP TRANSMISSION POS 1
1452	65C27502-3	XSMN AY # FLAP TRANSMISSION POS 2	XSMN AY # FLAP TRANSMISSION POS 2
1453	65C27502-4	XSMN AY # FLAP TRANSMISSION POS 2	XSMN AY # FLAP TRANSMISSION POS 2
1454	65C27502-5	XSMN AY # FLAP TRANSMISSION POS 2	XSMN AY # FLAP TRANSMISSION POS 2
1455	65C27503-1	XSMN AY # FLAP TRANSMISSION POS 3	XSMN AY # FLAP TRANSMISSION POS 3
1456	65C27503-2	XSMN AY # FLAP TRANSMISSION POS 3	XSMN AY # FLAP TRANSMISSION POS 3
1457	65C27503-3	XSMN AY # FLAP TRANSMISSION POS 3	XSMN AY # FLAP TRANSMISSION POS 3
1458	65C27506-1	XSMN AY # FLAP TRANSMISSION POS 6	XSMN AY # FLAP TRANSMISSION POS 6
1459	65C27506-2	XSMN AY # FLAP TRANSMISSION POS 6	XSMN AY # FLAP TRANSMISSION POS 6
1460	65C27506-3	XSMN AY # FLAP TRANSMISSION POS 6	XSMN AY # FLAP TRANSMISSION POS 6
1461	65C27507-3	XSMN AY # FLAP TRANSMISSION POS 7	XSMN AY # FLAP TRANSMISSION POS 7
1462	65C27507-4	XSMN AY # FLAP TRANSMISSION POS 7	XSMN AY # FLAP TRANSMISSION POS 7
1463	65C27507-8	XSMN AY # FLAP TRANSMISSION POS 7	XSMN AY # FLAP TRANSMISSION POS 7
1464	65C27508-1	XSMN AY # FLAP TRANSMISSION POS 8	XSMN AY # FLAP TRANSMISSION POS 8
1465	65C27508-2	XSMN AY # FLAP TRANSMISSION POS 8	XSMN AY # FLAP TRANSMISSION POS 8
1466	65C27508-3	XSMN AY # FLAP TRANSMISSION POS 8	XSMN AY # FLAP TRANSMISSION POS 8
1467	65C31099-1	ACTUATOR# ACTUATOR NLG LOCK	ACTUATOR# ACTUATOR NLG LOCK
1468	65C31099-2	ACTUATOR# ACTUATOR NLG LOCK	ACTUATOR# ACTUATOR NLG LOCK
1469	65C33409-1	DIMM AY # MODULE AY-DIMMING RELAY	DIMM AY # MODULE AY-DIMMING RELAY
1470	65C33409-3	DIMM AY # MODULE AY-DIMMING RELAY	DIMM AY # MODULE AY-DIMMING RELAY
1471	65C33684-10	BALANCE # COUNTERBALANCE AY-CARGO DOOR	BALANCE # COUNTERBALANCE AY-CARGO DOOR
1472	65C33684-11	BALANCE # COUNTERBALANCE AY-CARGO DOOR	BALANCE # COUNTERBALANCE AY-CARGO DOOR
1473	65C33684-5	BALANCE # COUNTERBALANCE AY-CARGO DOOR	BALANCE # COUNTERBALANCE AY-CARGO DOOR
1474	65C33684-6	BALANCE # COUNTERBALANCE AY-CARGO DOOR	BALANCE # COUNTERBALANCE AY-CARGO DOOR
1475	65C33684-7	BALANCE # COUNTERBALANCE AY-CARGO DOOR	BALANCE # COUNTERBALANCE AY-CARGO DOOR
1476	65C34483-5	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH	CARRIAGE# CARRIAGE AY INBD FLP WBL254LH
1477	65C34483-6	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH	CARRIAGE# CARRIAGE AY FLP INBD WBL254 RH
1478	65C34483-7	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH	CARRIAGE# CARRIAGE AY OUTBD FLP WBL355LH
1479	65C34751-10	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1480	65C34751-11	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1481	65C34751-2	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1482	65C34751-3	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1483	65C34751-4	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1484	65C34751-6	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1485	65C34751-7	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1486	65C34751-8	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1487	65C34751-9	HSTA 737# STAB. CONTRL. ACTUATOR	HSTA 737# STAB. CONTRL. ACTUATOR
1488	65C36605-1	RELAIS # RELAIS	RELAIS # RELAIS
1489	65C36725-1	SWITCH # SWITCH PACK	SWITCH # SWITCH PACK
1490	65C37030-1	MECH AY # MECHANISM ASSY-TRANSFER	MECH AY # MECHANISM ASSY-TRANSFER
1491	65C37030-2	MECH AY # MECHANISM ASSY TRANSFER	MECH AY # MECHANISM ASSY TRANSFER
1492	65C37030-3	MECH AY # MECHANISM ASSY TRANSFER	MECH AY # MECHANISM ASSY TRANSFER
1493	65C37030-4	MECH AY # MECHANISM ASSY TRANSFER	MECH AY # MECHANISM ASSY TRANSFER
1494	65C37053-6	PCU RUD # RUDDER POWER CONTROL UNIT	PCU RUD # RUDDER POWER CONTROL UNIT
1495	65C37053-7	PCU RUD # RUDDER POWER CONTROL UNIT	PCU RUD # RUDDER POWER CONTROL UNIT
1496	65C37053-9	RUDDER P# RUDDER POWER CONTROL UNIT	RUDDER P# RUDDER POWER CONTROL UNIT
1497	65C38058-10	SLATACTU# L/E SLAT ACTUATOR 1+6	SLATACTU# L/E SLAT ACTUATOR 1+6
1498	65C38058-11	ACTUATOR# ACTUATOR ASSY L/E SLAT 3+4	ACTUATOR# ACTUATOR ASSY L/E SLAT 3+4
1499	65C38058-12	ACTUATOR# ACTUATOR ASSY L/E SLAT 2+5	ACTUATOR# ACTUATOR ASSY L/E SLAT 2+5
1500	65C38058-13	SLATACTU# L/E SLAT ACTUATOR 1+6	SLATACTU# L/E SLAT ACTUATOR 1+6
1501	65C38058-14	ACTUATOR# ACTUATOR ASSY L/E SLAT 3+4	ACTUATOR# ACTUATOR ASSY L/E SLAT 3+4
1502	65C38058-15	ACTUATOR# ACTUATOR ASSY L/E SLAT 2+5	ACTUATOR# ACTUATOR ASSY L/E SLAT 2+5
1503	65C38058-22	SLATACTU# L/E SLAT ACTUATOR 1+6	SLATACTU# L/E SLAT ACTUATOR 1+6
1504	65C38058-23	ACTUATOR# ACTUATOR ASSY L/E SLAT 3+4	ACTUATOR# ACTUATOR ASSY L/E SLAT 3+4
1505	65C38058-24	ACTUATOR# ACTUATOR ASSY L/E SLAT 2+5	ACTUATOR# ACTUATOR ASSY L/E SLAT 2+5
1506	65C38058-7	ACTUATOR# ACTUATOR ASSY L/E SLAT 3+4	ACTUATOR# ACTUATOR ASSY L/E SLAT 3+4
1507	65C38059-11	SLATACTU# L/E SLAT ACTUATOR 3+4	SLATACTU# L/E SLAT ACTUATOR 3+4
1508	65C38059-12	SLATACTU# L/E SLAT ACTUATOR 2+5	SLATACTU# L/E SLAT ACTUATOR 2+5
1509	65C38059-14	SLATACTU# L/E SLAT ACTUATOR 3+4	SLATACTU# L/E SLAT ACTUATOR 3+4
1510	65C38059-15	SLATACTU# L/E SLAT ACTUATOR 2+5	SLATACTU# L/E SLAT ACTUATOR 2+5
1511	65C38059-7	SLATACTU# L/E SLAT ACTUATOR 3+4	SLATACTU# L/E SLAT ACTUATOR 3+4
1512	66030-5	VALVE # RAIN REPELANT S/O VALVE	VALVE # RAIN REPELANT S/O VALVE
1513	66087	PUMP HYD# PUMP HYDRAULIC,EDP/ADP	PUMP HYD# PUMP HYDRAULIC,EDP/ADP
1514	6657116	FILTERAY# FILTER AY HYD UTILITY FLUID PR	FILTERAY# FILTER AY HYD UTILITY FLUID PR
1515	6670M2230	UNIT # ENGINE VIBRATION MONITOR UNIT	UNIT # ENGINE VIBRATION MONITOR UNIT
1516	6672M201	UNIT # ENGINE VIBRATION MONITOR UNIT	UNIT # ENGINE VIBRATION MONITOR UNIT
1517	6672M202	UNIT # ENGINE VIBRATION MONITOR UNIT	UNIT # ENGINE VIBRATION MONITOR UNIT
1518	6674	FIRE DET# DETECTOR ASSY-STRUT FIRE A.OVE	FIRE DET# DETECTOR ASSY-STRUT FIRE A.OVE
1519	6676	FIRE DET# DETECTOR FIRE WARNING	FIRE DET# DETECTOR FIRE WARNING
1520	6678	FIRE DET# DETECTOR FIRE WARNING	FIRE DET# DETECTOR FIRE WARNING
1521	66940	VALVE # VALVE SOLENOID	VALVE # VALVE SOLENOID
1522	67-2905-001	VALVE # VALVE AY MOTOR OP AIR SHUTTOFF	VALVE # VALVE AY MOTOR OP AIR SHUTTOFF
1523	67-2906-001	VALVE # VALVE WING ANTI ICE	VALVE # VALVE WING ANTI ICE
1524	67-2906-002	VALVE # VALVE WING ANTI ICE	VALVE # VALVE WING ANTI ICE
1525	67321-10-190	SWITCH # SWITCH THERMAL 190 DEGR F	SWITCH # SWITCH THERMAL 190 DEGR F
1526	67321-15-250	SWITCH # SWITCH THERMAL 250 DEGR F	SWITCH # SWITCH THERMAL 250 DEGR F
1527	67321-26-190	SWITCH # SWITCH THERMAL 190 DEGR F	SWITCH # SWITCH THERMAL 190 DEGR F



№	Код	Наименование детали	Доп.инфо
1528	67321-26-190F	SWITCH # SWITCH THERMAL 190 DEGR F	SWITCH # SWITCH THERMAL 190 DEGR F
1529	67321-27-250	SWITCH # SWITCH THERMAL 250 DEGR F	SWITCH # SWITCH THERMAL 250 DEGR F
1530	67321-27-250F	SWITCH # SWITCH THERMAL 250 DEGR F	SWITCH # SWITCH THERMAL 250 DEGR F
1531	67940-2	VALVE AY# T.E. FLAP PRIORITY VALVE	VALVE AY# T.E. FLAP PRIORITY VALVE
1532	6,84E+22	NOZZLE # FUEL NOZZLE (STARTER)	NOZZLE # FUEL NOZZLE (STARTER)
1533	6,84E+23	NOZZLE # FUEL NOZZLE	NOZZLE # FUEL NOZZLE
1534	6840023M1	NOZZLE # FUEL NOZZLE	NOZZLE # FUEL NOZZLE
1535	68E125-3	PUMP JET# PUMP JET CENTER WING TANK	PUMP JET# PUMP JET CENTER WING TANK
1536	69-14106-3	CYLINDER# CYLINDER TRANSFER NLG	CYLINDER# CYLINDER TRANSFER NLG
1537	69-14106-6	CYLINDER# CYLINDER TRANSFER NLG	CYLINDER# CYLINDER TRANSFER NLG
1538	69-14106-7	CYLINDER# CYLINDER TRANSFER NLG	CYLINDER# CYLINDER TRANSFER NLG
1539	69-2914	VALVE # VALVE ASSY SWING CHECK	VALVE # VALVE ASSY SWING CHECK
1540	69-2914-13	VALVE # VALVE ASSY SWING CHECK	VALVE # VALVE ASSY SWING CHECK
1541	69-2914-24	VALVE # VALVE AY SWING CHECK GROUND AI	VALVE # VALVE AY SWING CHECK GROUND AI
1542	69-34511-1	RESERVOR# RESERVOIR AY RAIN REPELLENT	RESERVOR# RESERVOIR AY RAIN REPELLENT
1543	69-35336-1	TOGGLE # TOGGLE ASSY	TOGGLE # TOGGLE ASSY
1544	69-35336-2	TOGGLE # TOGGLE ASSY	TOGGLE # TOGGLE ASSY
1545	69-35500-3	ACTUATOR# ACTUATOR LOCK MLG RH	ACTUATOR# ACTUATOR LOCK MLG RH
1546	69-35500-4	ACTUATOR# ACTUATOR LOCK MLG LH	ACTUATOR# ACTUATOR LOCK MLG LH
1547	69-35500-5	ACTUATOR# ACTUATOR LOCK MLG RH	ACTUATOR# ACTUATOR LOCK MLG RH
1548	69-35500-6	ACTUATOR# ACTUATOR LOCK MLG LH	ACTUATOR# ACTUATOR LOCK MLG LH
1549	69-37307-138	MODULE # MODULE FIRE A.OVERHEAT DETECT.	MODULE # MODULE FIRE A.OVERHEAT DETECT.
1550	69-37307-145	MODULE # MODULE FIRE A.OVERHEAT DETECT.	MODULE # MODULE FIRE A.OVERHEAT DETECT.
1551	69-37307-147	MODULE # MODULE ASSY ENG AND APU FIRE C	MODULE # MODULE ASSY ENG AND APU FIRE C
1552	69-37307-149	MODULE # MODULE FIRE A.OVERHEAT DETECT.	MODULE # MODULE FIRE A.OVERHEAT DETECT.
1553	69-37307-150	MODULE # MODULE ASSY ENG AND APU FIRE C	MODULE # MODULE ASSY ENG AND APU FIRE C
1554	69-37307-153	MODULE # MODULE FIRE A.OVERHEAT DETECT.	MODULE # MODULE FIRE A.OVERHEAT DETECT.
1555	69-37307-155	MODULE # MODULE ASSY ENG AND APU FIRE C	MODULE # MODULE ASSY ENG AND APU FIRE C
1556	69-37307-300	MODULE # ENG& APU FIRE CONTROL MODULE	MODULE # ENG& APU FIRE CONTROL MODULE
1557	69-37313-104	MODULE # MODULE ASSY, FLIGHT CONTR P5-3	MODULE # MODULE ASSY, FLIGHT CONTR P5-3
1558	69-37313-108	MODULE # MODULE ASSY, FLIGHT CONTR P5-3	MODULE # MODULE ASSY, FLIGHT CONTR P5-3
1559	69-37313-401	MODULE # MODULE ASSY, FLIGHT CONTR P5-3	MODULE # MODULE ASSY, FLIGHT CONTR P5-3
1560	69-37313-405	MODULE # MODULE ASSY, FLIGHT CONTR P5-3	MODULE # MODULE ASSY, FLIGHT CONTR P5-3
1561	69-37313-407	MODULE P# MODULE FLIGHT CTRL P5	MODULE P# MODULE FLIGHT CTRL P5
1562	69-37313-408	MODULE P# MODULE FLIGHT CTRL P5	MODULE P# MODULE FLIGHT CTRL P5
1563	69-37314-38	P5-4 # P5-4	P5-4 # P5-4
1564	69-37314-41	P5-4 # P5-4	P5-4 # P5-4
1565	69-37314-43	P5-4 # AC SYS GEN AND APU MODULE	P5-4 # AC SYS GEN AND APU MODULE
1566	69-37314-47	P5-4 # P5-4	P5-4 # P5-4
1567	69-37314-48	P5-4 # P5-4	P5-4 # P5-4
1568	69-37314-53	P5-4 # MODULE GEN APU P5-4	P5-4 # MODULE GEN APU P5-4
1569	69-37314-54	P5-4 # P5-4	P5-4 # P5-4
1570	69-37314-68	P5-4 # MODULE ASSY AC P5-4	P5-4 # MODULE ASSY AC P5-4
1571	69-37314-71	P5-4 # MODULE ASSY AC P5-4	P5-4 # MODULE ASSY AC P5-4
1572	69-37314-81	P5-4 # MODULE ASSY AC P5-4	P5-4 # MODULE ASSY AC P5-4
1573	69-37314-82	MODULE # MODULE AY-AC SYS GEN/APU P5-4	MODULE # MODULE AY-AC SYS GEN/APU P5-4
1574	69-37315-76DLH	P5-5 # P5-5 GENERATOR DRIVE CNT	P5-5 # P5-5 GENERATOR DRIVE CNT
1575	69-37315-79	MODULE A# MODULE GEN DRIVE AND STBY PWR	MODULE A# MODULE GEN DRIVE AND STBY PWR
1576	69-37317-87DLH	MODULE # MODULE HYDR. PUMP P5-8, CUST.	MODULE # MODULE HYDR. PUMP P5-8, CUST.
1577	69-37319-122	P5-10 # AIR COND. MODULE P5-10	P5-10 # AIR COND. MODULE P5-10
1578	69-37319-125	P5-10 # AIR COND MODULE P5-10	P5-10 # AIR COND MODULE P5-10
1579	69-37319-125DLH	P5-10 # AIR COND PANEL P5-10	P5-10 # AIR COND PANEL P5-10
1580	69-37319-144	P5-10 # AIR COND. MODULE P5-10	P5-10 # AIR COND. MODULE P5-10
1581	69-37319-145	P5-10 # AIR COND MODULE P5-10	P5-10 # AIR COND MODULE P5-10
1582	69-37320-104	MODULE # MODULE AY ENG.A.WING ANTI ICE	MODULE # MODULE AY ENG.A.WING ANTI ICE
1583	69-37320-108DLH	VALVE # VALVE WING ANTI ICE P5-11	VALVE # VALVE WING ANTI ICE P5-11
1584	69-37321-66	P5-13 # MODULE P5-13 BATTERY PWR	P5-13 # MODULE P5-13 BATTERY PWR
1585	69-37321-71	P5-13 # MODULE P5-13	P5-13 # MODULE P5-13
1586	69-37324-18	MODULE # MODULE CAB.TEMP	MODULE # MODULE CAB.TEMP
1587	69-37325-129	MODULE # FLT RCDR AND MACH AIRSP P5-19	MODULE # FLT RCDR AND MACH AIRSP P5-19
1588	69-37325-131	MODULE # FLT RCDR AND MACH AIRSP P5-19	MODULE # FLT RCDR AND MACH AIRSP P5-19
1589	69-37325-135	MODULE # FLT RCDR AND MACH AIRSP P5-19	MODULE # FLT RCDR AND MACH AIRSP P5-19
1590	69-37325-137	MODULE # FLT RCDR AND MACH AIRSP P5-19	MODULE # FLT RCDR AND MACH AIRSP P5-19
1591	69-37325-168	MODULE # FLT RCDR AND MACH AIRSP P5-19	MODULE # FLT RCDR AND MACH AIRSP P5-19
1592	69-37334-12	ALTM CAB# CABIN ALTIMETER	ALTM CAB# CABIN ALTIMETER
1593	69-37335-123	MODULE # MODULE FUEL	MODULE # MODULE FUEL
1594	69-37335-129	MODULE # MODULE FUEL P5-2	MODULE # MODULE FUEL P5-2
1595	69-37335-130DLH	MODULE # Fuel Module P5-2	MODULE # Fuel Module P5-2
1596	69-37335-88	MODULE # MODULE FUEL	MODULE # MODULE FUEL
1597	69-37338-34	MODULE # MODULE AY AUXILIARY VERT GYRO	MODULE # MODULE AY AUXILIARY VERT GYRO
1598	69-37346-123	MODULE # MODULE WINDOW PITOT HEAT P5-9	MODULE # MODULE WINDOW PITOT HEAT P5-9
1599	69-37346-138DLH	MODULE # WINDOW HEAT P5-9	MODULE # WINDOW HEAT P5-9
1600	69-37346-146	MODULE # MODULE WINDOW PITOT HEAT P5-9	MODULE # MODULE WINDOW PITOT HEAT P5-9
1601	69-37346-149	MODULE # MODULE P5-9 WINDOW PITOT HEAT	MODULE # MODULE P5-9 WINDOW PITOT HEAT
1602	69-37352-26	MODULE # MODULE ASSY DOOR ANNUNCIATOR	MODULE # MODULE ASSY DOOR ANNUNCIATOR
1603	69-37352-30	MODULE # MODULE ASSY DOOR ANNUNCIATOR	MODULE # MODULE ASSY DOOR ANNUNCIATOR
1604	69-37352-40	MODULE # MODULE ASSY DOOR ANNUNCIATOR	MODULE # MODULE ASSY DOOR ANNUNCIATOR
1605	69-37352-41	MODULE # MODULE ASSY DOOR ANNUNCIATOR	MODULE # MODULE ASSY DOOR ANNUNCIATOR
1606	69-37352-50	MODULE # MODULE ASSY DOOR ANNUNCIATOR	MODULE # MODULE ASSY DOOR ANNUNCIATOR
1607	69-37352-51	MODULE # MODULE ASSY DOOR ANNUNCIATOR	MODULE # MODULE ASSY DOOR ANNUNCIATOR
1608	69-37369-11	MODULE # MOD AY P3-7 GRD PROXIMITY SYS	MODULE # MOD AY P3-7 GRD PROXIMITY SYS
1609	69-37369-24	MODULE # MOD AY P3-7 GRD PROXIMITY SYS	MODULE # MOD AY P3-7 GRD PROXIMITY SYS
1610	69-37399-1	MODULE # MODULE IRS MASTER CAUTION	MODULE # MODULE IRS MASTER CAUTION
1611	69-37399-7	MODULE # MODULE IRS MASTER CAUTION	MODULE # MODULE IRS MASTER CAUTION
1612	69-37399-9	MODULE # MODULE IRS MASTER CAUTION	MODULE # MODULE IRS MASTER CAUTION



№	Код	Наименование детали	Доп.инфо
1613	69-44628-1	BOX # BOX ASSY	BOX # BOX ASSY
1614	69-54600-4	CYLINDER# CYLINDER TRANSFER MLG	CYLINDER# CYLINDER TRANSFER MLG
1615	69-55179-63	MODULE # MODULE,LIGHT DIMMING COCKPIT	MODULE # MODULE,LIGHT DIMMING COCKPIT
1616	69-55179-67	MODULE # MODULE,LIGHT DIMMING COCKPIT	MODULE # MODULE,LIGHT DIMMING COCKPIT
1617	69-56314-10	MODULE # MODULE RAIN REPELL TIME DELAY	MODULE # MODULE RAIN REPELL TIME DELAY
1618	69-56314-9	MODULE # MODULE RAIN REPELL TIME DELAY	MODULE # MODULE RAIN REPELL TIME DELAY
1619	69-60081-7	ROD AY # ROD ASSY	ROD AY # ROD ASSY
1620	69-60177-17	PCB ARLW# PCB AURAL WARNING	PCB ARLW# PCB AURAL WARNING
1621	69-60177-20	PCB ARLW# PCB AURAL WARNING	PCB ARLW# PCB AURAL WARNING
1622	69-60764-1	DIM AY # CIRCUIT AY-PRINTED MASTER DIM	DIM AY # CIRCUIT AY-PRINTED MASTER DIM
1623	69-60765-1	CARD AY # CARD ASSY,BACKGROUND LIGHTING	CARD AY # CARD ASSY,BACKGROUND LIGHTING
1624	69-69882-1	SWIVEL A# SWIVEL ASSY	SWIVEL A# SWIVEL ASSY
1625	69-69882-2	SWIVEL # SWIVEL AY	SWIVEL # SWIVEL AY
1626	69-69882-4	SWIVEL A# SWIVEL ASSY TUBING HYDRAULIC	SWIVEL A# SWIVEL ASSY TUBING HYDRAULIC
1627	69-69882-5	SWIVEL A# SWIVEL ASSY TUBING HYDRAULIC	SWIVEL A# SWIVEL ASSY TUBING HYDRAULIC
1628	69-72023-1	PIN # PIN,TORSION LINK PIN UPPER/LWR	PIN # PIN,TORSION LINK PIN UPPER/LWR
1629	69-72023-2	PIN # PIN,TORSION LINK PIN UPPER/LWR	PIN # PIN,TORSION LINK PIN UPPER/LWR
1630	69-72023-3	PIN # PIN,TORSION LINK PIN UPPER/LWR	PIN # PIN,TORSION LINK PIN UPPER/LWR
1631	69-72023-4	PIN # PIN,TORSION LINK PIN UPPER/LWR	PIN # PIN,TORSION LINK PIN UPPER/LWR
1632	69-73079-6	MODULE # OIL LEVEL INDICATOR MODULE	MODULE # OIL LEVEL INDICATOR MODULE
1633	69-73079-7	MODULE # OIL LEVEL INDICATOR MODULE	MODULE # OIL LEVEL INDICATOR MODULE
1634	69-73485-9	RODEND A# RODEND ASSY SLAT ACT.	RODEND A# RODEND ASSY SLAT ACT.
1635	69-73614-26	MODULE # MOD POWER MANAGEMENT CONTROL	MODULE # MOD POWER MANAGEMENT CONTROL
1636	69-73614-32	MODULE # MOD POWER MANAGEMENT CONTROL	MODULE # MOD POWER MANAGEMENT CONTROL
1637	69-73614-35	MODULE # MOD POWER MANAGEMENT CONTROL	MODULE # MOD POWER MANAGEMENT CONTROL
1638	69-73614-47	MODULE # MOD POWER MANAGEMENT CONTROL	MODULE # MOD POWER MANAGEMENT CONTROL
1639	69-73614-48	MODULE # MOD POWER MANAGEMENT CONTROL	MODULE # MOD POWER MANAGEMENT CONTROL
1640	69-73614-54	MODULE # MOD POWER MANAGEMENT CONTROL	MODULE # MOD POWER MANAGEMENT CONTROL
1641	69-73614-57	MODULE # MOD POWER MANAGEMENT CONTROL	MODULE # MOD POWER MANAGEMENT CONTROL
1642	69-73614-58	MODULE # MOD POWER MANAGEMENT CONTROL	MODULE # MOD POWER MANAGEMENT CONTROL
1643	69-73703-6	MODULE # MODULE ASSY, RUDDER TRIM	MODULE # MODULE ASSY, RUDDER TRIM
1644	69-73703-7	MODULE # MODULE ASSEMBLY	MODULE # MODULE ASSEMBLY
1645	69-73703-8	MODULE # MODULE ASSEMBLY	MODULE # MODULE ASSEMBLY
1646	69-73713-12	MSU IRS # MODE SELECT UNIT IRS	MSU IRS # MODE SELECT UNIT IRS
1647	69-73713-15	MSU IRS # MODE SELECT UNIT IRS	MSU IRS # MODE SELECT UNIT IRS
1648	69-73713-5	MSU IRS # MODE SELECT UNIT IRS	MSU IRS # MODE SELECT UNIT IRS
1649	69-73713-8	MSU IRS # MODE SELECT UNIT IRS	MSU IRS # MODE SELECT UNIT IRS
1650	69-75978-1	MODULE # MODULE ASSY STALL WARNING	MODULE # MODULE ASSY STALL WARNING
1651	69-76436-7	MODULE # MODULE ASSY STAB TRIM AND CAB	MODULE # MODULE ASSY STAB TRIM AND CAB
1652	69-78214-1	BOX # AURAL WARNING BOX	BOX # AURAL WARNING BOX
1653	69-78214-3	MODULE # MODULE AURAL WARNING	MODULE # MODULE AURAL WARNING
1654	692545-1	VALVE # VALVE SOLENOID SHUT OFF	VALVE # VALVE SOLENOID SHUT OFF
1655	693214	IND.TEMP# CSD TEMP INDICATOR	IND.TEMP# CSD TEMP INDICATOR
1656	69660-1	VALVE # LANDING GEAR TRANSFER VALVE	VALVE # LANDING GEAR TRANSFER VALVE
1657	69660-3	VALVE # VALVE HYDRAULIC TRANSFER	VALVE # VALVE HYDRAULIC TRANSFER
1658	698427-14	FAN ASSY# COOLING FAN ASSY	FAN ASSY# COOLING FAN ASSY
1659	698427-14-1	FAN ASSY# COOLING FAN ASSY	FAN ASSY# COOLING FAN ASSY
1660	698427-18	FAN ASSY# COOLING FAN ASSY	FAN ASSY# COOLING FAN ASSY
1661	698427-18-1	FAN ASSY# COOLING FAN ASSY	FAN ASSY# COOLING FAN ASSY
1662	698430-1	SWITCH # SWITCH, LOW OIL PRESS, APU	SWITCH # SWITCH, LOW OIL PRESS, APU
1663	698430-1J	SWITCH # SWITCH, LOW OIL PRESS, APU	SWITCH # SWITCH, LOW OIL PRESS, APU
1664	698430-2	SWITCH # SWITCH OIL PRESS SEQUENCE	SWITCH # SWITCH OIL PRESS SEQUENCE
1665	698430-2J	SWITCH # SWITCH OIL PRESS SEQUENCE	SWITCH # SWITCH OIL PRESS SEQUENCE
1666	7-44169-18	CABLE FU# CABLE FUEL SHUTOFF RH	CABLE FU# CABLE FUEL SHUTOFF RH
1667	70-0366-1	BALLAST # BALLAST UNIT- FLUORESCENT LAMP	BALLAST # BALLAST UNIT- FLUORESCENT LAMP
1668	7000-M91310	VALVE # VALVE CHECK ENG GRD START	VALVE # VALVE CHECK ENG GRD START
1669	705-16V3	HORIZON # INDICATOR STANDBY HORIZON	HORIZON # INDICATOR STANDBY HORIZON
1670	7061M31G01	VALVE # TURBINE CLEARANCE VALVE	VALVE # TURBINE CLEARANCE VALVE
1671	7061M31G02	VALVE # TURBINE CLEARANCE VALVE	VALVE # TURBINE CLEARANCE VALVE
1672	7061M31G03	VALVE # TURBINE CLEARANCE VALVE	VALVE # TURBINE CLEARANCE VALVE
1673	7061M31G04	VALVE # TURBINE CLEARANCE VALVE	VALVE # TURBINE CLEARANCE VALVE
1674	7061M31G05	VALVE # TURBINE CLEARANCE VALVE	VALVE # TURBINE CLEARANCE VALVE
1675	706400-2	MOTOR # HYDRAULIC GEARMOTOR VBV	MOTOR # HYDRAULIC GEARMOTOR VBV
1676	706400-3	MOTOR # HYDRAULIC GEARMOTOR VBV	MOTOR # HYDRAULIC GEARMOTOR VBV
1677	706400-4	MOTOR # HYDRAULIC GEARMOTOR VBV	MOTOR # HYDRAULIC GEARMOTOR VBV
1678	708600-5	PUMP # FUEL PUMP	PUMP # FUEL PUMP
1679	7110-91-01P	BOX # CONTROL BOX (CELSIUS)	BOX # CONTROL BOX (CELSIUS)
1680	711002-5	PANEL-CP# PANEL-CABIN PRESSURE SELECT	PANEL-CP# PANEL-CABIN PRESSURE SELECT
1681	711003-2	VALVE # AFT OUTFLOW VALVE	VALVE # AFT OUTFLOW VALVE
1682	711003-3	VALVE # AFT OUTFLOW VALVE	VALVE # AFT OUTFLOW VALVE
1683	711003-5	VALVE # AFT OUTFLOW VALVE	VALVE # AFT OUTFLOW VALVE
1684	7119M71G07	TIMER # TCC-TIMER	TIMER # TCC-TIMER
1685	71234	PUMPHAND# PUMP ASSY-HAND, HYDRAULIC	PUMPHAND# PUMP ASSY-HAND, HYDRAULIC
1686	713655	IND POS # INDICATOR VALVE POSITION	IND POS # INDICATOR VALVE POSITION
1687	7139M84G01	CONTROL # POWER MANAGE. CONT. CFM56-3B1	CONTROL # POWER MANAGE. CONT. CFM56-3B1
1688	7139M84G03	CONTROL # POWER MANAGE. CONT. CFM56-3B1	CONTROL # POWER MANAGE. CONT. CFM56-3B1
1689	7139M91G01	CONTROL # POWER MANAGE. CONT. CFM56-3B2	CONTROL # POWER MANAGE. CONT. CFM56-3B2
1690	7139M91G02	CONTROL # POWER MANAGE. CONT. CFM56-3B2	CONTROL # POWER MANAGE. CONT. CFM56-3B2
1691	7139M91G03	CONTROL # POWER MANAGE. CONT. CFM56-3B2	CONTROL # POWER MANAGE. CONT. CFM56-3B2
1692	7147M10G03	CONTROL # POWER MANAGE. CONT. CFM56-3C1	CONTROL # POWER MANAGE. CONT. CFM56-3C1
1693	7147M10G04	CONTROL # POWER MANAGE. CONT. CFM56-3C1	CONTROL # POWER MANAGE. CONT. CFM56-3C1
1694	71577-3	DISCONNE# HYDRAULIK DISCONNECT	DISCONNE# HYDRAULIK DISCONNECT
1695	71577-5	DISCONCT# HYDRAULIK DISCONNECT	DISCONCT# HYDRAULIK DISCONNECT
1696	7157M66P01	CONTROL # POWER MANAGE. CONT. CFM56-3B1	CONTROL # POWER MANAGE. CONT. CFM56-3B1
1697	7157M66P03	CONTROL # POWER MANAGE. CONT. CFM56-3B1	CONTROL # POWER MANAGE. CONT. CFM56-3B1



№	Код	Наименование детали	Доп.инфо
1698	7157M67P01	CONTROL # POWER MANAGE. CONT. CFM56-3B2	CONTROL # POWER MANAGE. CONT. CFM56-3B2
1699	7157M67P02	CONTROL # POWER MANAGE. CONT. CFM56-3B2	CONTROL # POWER MANAGE. CONT. CFM56-3B2
1700	7157M67P03	CONTROL # POWER MANAGE. CONT. CFM56-3B2	CONTROL # POWER MANAGE. CONT. CFM56-3B2
1701	7157M68P03	CONTROL # POWER MANAGE. CONT. CFM56-3C1	CONTROL # POWER MANAGE. CONT. CFM56-3C1
1702	7157M68P04	CONTROL # POWER MANAGE. CONT. CFM56-3C1	CONTROL # POWER MANAGE. CONT. CFM56-3C1
1703	71974	SWITCH # SWITCH PRESSURE	SWITCH # SWITCH PRESSURE
1704	720737-5	VALVE # VALVE-OUTFLOW SAFETY	VALVE # VALVE-OUTFLOW SAFETY
1705	721RAA2	SWITCH # SWITCH MECHANISM TORQUE AT	SWITCH # SWITCH MECHANISM TORQUE AT
1706	732-11240-02	PRESS.MO# RESERVOIR PRESS.MODULAR	PRESS.MO# RESERVOIR PRESS.MODULAR
1707	735511A	CSD # CONSTANT SPEED DRIVE	CSD # CONSTANT SPEED DRIVE
1708	735SUE10-12	COMPUTER# COMPUTER AUTOTHROTTLE	COMPUTER# COMPUTER AUTOTHROTTLE
1709	735SUE9-12	COMPUTER# COMPUTER AUTOTHROTTLE	COMPUTER# COMPUTER AUTOTHROTTLE
1710	7514081-901	ANT TCAS# ANTENNA TCAS	ANT TCAS# ANTENNA TCAS
1711	7551901	FILTERAY# FILTER ASSEMBLY-HYDRAULIC SYST	FILTERAY# FILTER ASSEMBLY-HYDRAULIC SYST
1712	7552355	FILTERAY# FILTER AY HYD UTILITY FLUID PR	FILTERAY# FILTER AY HYD UTILITY FLUID PR
1713	755SUE2-4	COMPUTER# COMPUTER AUTOTHROTTLE	COMPUTER# COMPUTER AUTOTHROTTLE
1714	7579078	FILTERAY# FILTER AY HYDR CASE DRAIN	FILTERAY# FILTER AY HYDR CASE DRAIN
1715	7579560	FILTER Y# FILTER AY HYDR SINGLE STAGE	FILTER Y# FILTER AY HYDR SINGLE STAGE
1716	7581418	FILTER O# FILTER CSD COOLING OIL	FILTER O# FILTER CSD COOLING OIL
1717	7583695	FILTER Y# FILTER AY HYDR SINGLE STAGE	FILTER Y# FILTER AY HYDR SINGLE STAGE
1718	7583695-101	FILTERAY# FILTER ASSY SINGLE STAGE.HYDR.	FILTERAY# FILTER ASSY SINGLE STAGE.HYDR.
1719	777-1492-005	ADF RCV # RECEIVER ADF 51Y-7	ADF RCV # RECEIVER ADF 51Y-7
1720	777-1493-004	CTRL ADF# ADF CONTROL PANEL	CTRL ADF# ADF CONTROL PANEL
1721	78169-01	VALVE # AUTO BRAKE CONTROL VALVE	VALVE # AUTO BRAKE CONTROL VALVE
1722	78169-02	VALVE # AUTO BRAKE CONTROL VALVE	VALVE # AUTO BRAKE CONTROL VALVE
1723	78169-03	VALVE # AUTO BRAKE CONTROL VALVE	VALVE # AUTO BRAKE CONTROL VALVE
1724	78169-04	VALVE # AUTO BRAKE CONTROL VALVE	VALVE # AUTO BRAKE CONTROL VALVE
1725	7824791	SCREW AY# TE FLAP BALL NUT + SCREW 3+6	SCREW AY# TE FLAP BALL NUT + SCREW 3+6
1726	7824792	SCREW AY# TE FLAP BALL NUT + SCREW 4+5	SCREW AY# TE FLAP BALL NUT + SCREW 4+5
1727	7825221	SCREW AY# BALL SCREW ASSY 1+8 /2+7	SCREW AY# BALL SCREW ASSY 1+8 /2+7
1728	7825222	SCREW AY# TE FLAP BALL NUT + SCREW 3+6	SCREW AY# TE FLAP BALL NUT + SCREW 3+6
1729	7825223	SCREW AY# TE FLAP BALL NUT + SCREW 4+5	SCREW AY# TE FLAP BALL NUT + SCREW 4+5
1730	792-6140-001	COUPLER # HF ANTENNA COUPLER 490S-1	COUPLER # HF ANTENNA COUPLER 490S-1
1731	792-6275-005	CTRL ADF# ADF CONTROL PANEL	CTRL ADF# ADF CONTROL PANEL
1732	793T100-1	ACTUATOR# ALT FLAP MOTOR	ACTUATOR# ALT FLAP MOTOR
1733	793T100-3	ACTUATOR# ALT FLAP MOTOR	ACTUATOR# ALT FLAP MOTOR
1734	793T100-5	ACTUATOR# ALT FLAP MOTOR	ACTUATOR# ALT FLAP MOTOR
1735	793T100-7	ACTUATOR# ALT FLAP MOTOR	ACTUATOR# ALT FLAP MOTOR
1736	01.05.7977	XMTR POS# POSITION TRANSMITTER	XMTR POS# POSITION TRANSMITTER
1737	7977-18-01	XMTR POS# POSITION TRANSMITTER	XMTR POS# POSITION TRANSMITTER
1738	7G110-3	SWITCH # FUEL LOW PRESS SWITCH	SWITCH # FUEL LOW PRESS SWITCH
1739	7G110-5	SWITCH # SWITCH PRESSURE FUEL	SWITCH # SWITCH PRESSURE FUEL
1740	7G110-6	SWITCH # FUEL LOW PRESS. SWITCH, CENTER	SWITCH # FUEL LOW PRESS. SWITCH, CENTER
1741	8-060-02	CARD PRO# CARD PROX-SWITCH	CARD PRO# CARD PROX-SWITCH
1742	8-372-02	SENSOR # SENSOR-ALTERNATE	SENSOR # SENSOR-ALTERNATE
1743	8001-06-0000	OVEN # GALLEY OVEN	OVEN # GALLEY OVEN
1744	8001-06-0000LH	OVEN # GALLEY OVEN	OVEN # GALLEY OVEN
1745	8001-26-0000	OVEN # GALLEY OVEN	OVEN # GALLEY OVEN
1746	8001-26-0000A	OVEN # GALLEY OVEN	OVEN # GALLEY OVEN
1747	801240-2	FAN.COOL# GROUND COOLING FAN	FAN.COOL# GROUND COOLING FAN
1748	801240-3	FAN.COOL# GROUND COOLING FAN	FAN.COOL# GROUND COOLING FAN
1749	801240-4	FAN.COOL# GROUND COOLING FAN	FAN.COOL# GROUND COOLING FAN
1750	801307-00	CYLINDER# OXYGEN BOTTLE - 115CU/FT.	CYLINDER# OXYGEN BOTTLE - 115CU/FT.
1751	801307-06	OXYBOTLE# OXYGEN BOTTLE - 77CU/FT.	OXYBOTLE# OXYGEN BOTTLE - 77CU/FT.
1752	801321-07	COUPLING# COUPLING, OXYGEN SYSTEM	COUPLING# COUPLING, OXYGEN SYSTEM
1753	802300-14	PBE SMOK# PBE, SMOKE HOOD; CHEMICAL	PBE SMOK# PBE, SMOKE HOOD; CHEMICAL
1754	8055515-4503	PRINTER # DATA PRINTER PTA-45B	PRINTER # DATA PRINTER PTA-45B
1755	8055515-4503-PMA	PRINTER # DATA PRINTER PTA-45B	PRINTER # DATA PRINTER PTA-45B
1756	8055515-4503DLH	PRINTER # DATA PRINTER PTA-45B	PRINTER # DATA PRINTER PTA-45B
1757	8063-207	MEC # MAIN ENGINE CONTROL CFM56-3B2	MEC # MAIN ENGINE CONTROL CFM56-3B2
1758	8063-208	MEC # MAIN ENGINE CONTROL CFM56-3B1	MEC # MAIN ENGINE CONTROL CFM56-3B1
1759	8063-210	MEC # MAIN ENGINE CONTROL CFM56-3C1	MEC # MAIN ENGINE CONTROL CFM56-3C1
1760	8063-213	MEC # MAIN ENGINE CONTROL CFM56-3B2	MEC # MAIN ENGINE CONTROL CFM56-3B2
1761	8063-214	MEC # MAIN ENGINE CONTROL CFM56-3B1	MEC # MAIN ENGINE CONTROL CFM56-3B1
1762	8063-215	MEC # MAIN ENGINE CONTROL CFM56-3C1	MEC # MAIN ENGINE CONTROL CFM56-3C1
1763	80810-1	VALVEFIL# RESERVOIR FILL SELECTOR VALVE	VALVEFIL# RESERVOIR FILL SELECTOR VALVE
1764	8171-1	BALLAST # BALLAST UNIT	BALLAST # BALLAST UNIT
1765	8178-1	BALLAST # BALLAST UNIT-LAMP MZ 100	BALLAST # BALLAST UNIT-LAMP MZ 100
1766	8182-1	BALLAST # BALLAST UNIT	BALLAST # BALLAST UNIT
1767	8184-1	BALLAST # BALLAST UNIT	BALLAST # BALLAST UNIT
1768	8201-01-4000	MODUL # MODUL, CONTROLBOX	MODUL # MODUL, CONTROLBOX
1769	8201-01-4300	MODUL # MODUL, CONTROLBOX	MODUL # MODUL, CONTROLBOX
1770	8201-04-0000	OVEN # GALLEY OVEN	OVEN # GALLEY OVEN
1771	8201-04-4000	MODUL # MODUL CONTROLBOX	MODUL # MODUL CONTROLBOX
1772	8201-04-4300	MODUL # MODUL CONTROLBOX	MODUL # MODUL CONTROLBOX
1773	8201-14-0000	OVEN # GALLEY OVEN	OVEN # GALLEY OVEN
1774	8201-32-0000-01	OVEN # GALLEY OVEN	OVEN # GALLEY OVEN
1775	822-0336-001	XPDR ATC# TRANSPONDER ATC TPR-900	XPDR ATC# TRANSPONDER ATC TPR-900
1776	822-0761-001	NAV RCV # RECEIVER NAV 51RV-5	NAV RCV # RECEIVER NAV 51RV-5
1777	822-1044-004	XCVR VHF# VHF COMM TRANSCEIVER VHF-700B	XCVR VHF# VHF COMM TRANSCEIVER VHF-700B
1778	822-1044-120	XCVR VHF# VHF COMM TRANSCEIVER VHF-700B	XCVR VHF# VHF COMM TRANSCEIVER VHF-700B
1779	822-1045-401	XCVR VHF# VHF COMM TRANSCEIVER 618M-5	XCVR VHF# VHF COMM TRANSCEIVER 618M-5
1780	822-1293-002	XCR TCAS# TRANSCEIVER TCAS II TTR-921	XCR TCAS# TRANSCEIVER TCAS II TTR-921
1781	822-1338-003	XPDR ATC# TRANSPONDER ATC TPR-901	XPDR ATC# TRANSPONDER ATC TPR-901
1782	83000-05601	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT



"STRELA" Limited Liability Company

ПОСТАВКА И РЕМОНТ АВИАЦИОННЫХ КОМПОНЕНТОВ И ОБОРУДОВАНИЯ

Тел/факс (495) 139-60-45 info@strela-at.ru

№	Код	Наименование детали	Доп.инфо
1783	83000-05602	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
1784	83000-05603	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
1785	83000-05604	WHC # WINDOW HEAT CONTROL UNIT	WHC # WINDOW HEAT CONTROL UNIT
1786	835867-401	TIMER # TIMER ASSY TOILET FLUSH	TIMER # TIMER ASSY TOILET FLUSH
1787	840002-074	FILTERAC# HYDRAULIC ACOUSTIC FILTER	FILTERAC# HYDRAULIC ACOUSTIC FILTER
1788	850126-418A	TRIM PNL# Trim panel assy auch NIK B/C	TRIM PNL# Trim panel assy auch NIK B/C
1789	851CM	PROBE # PROBE PITOT	PROBE # PROBE PITOT
1790	851CM-2	PROBE # PROBE PITOT	PROBE # PROBE PITOT
1791	851CM2	PROBE # PROBE PITOT	PROBE # PROBE PITOT
1792	851T	PROBE # PROBE PITOT	PROBE # PROBE PITOT
1793	856AE13	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
1794	856AE15	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
1795	856AE16	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
1796	856AE18	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
1797	856AE8	PROBE # PROBE PITOT STATIC	PROBE # PROBE PITOT STATIC
1798	857-1	ALRTUNIT# AURAL ALTITUDE ALERT UNIT	ALRTUNIT# AURAL ALTITUDE ALERT UNIT
1799	861CAS3	AOA SENS# ANGLE OF ATTACK SENSOR	AOA SENS# ANGLE OF ATTACK SENSOR
1800	87-5273	VALVE # VALVE-SUMP-DRAIN	VALVE # VALVE-SUMP-DRAIN
1801	881600-1001	VALVE AS# VALVE ASSY-SOLENOID	VALVE AS# VALVE ASSY-SOLENOID
1802	887477	PUMP HYD# HYDR PUMP INSTL.-SYS A and B	PUMP HYD# HYDR PUMP INSTL.-SYS A and B
1803	8901-274	SENSOR # CIT SENSOR	SENSOR # CIT SENSOR
1804	8901-278	SENSOR # SENSOR T2	SENSOR # SENSOR T2
1805	8901-326	SENSOR # SENSOR T2	SENSOR # SENSOR T2
1806	8921082G1	HEATER # HEATER ASSY WATER	HEATER # HEATER ASSY WATER
1807	8921082G5	HEATER # HEATER ASSY WATER	HEATER # HEATER ASSY WATER
1808	892480	FIRE EXT# FIRE EXTINGUISHER WATER	FIRE EXT# FIRE EXTINGUISHER WATER
1809	897579	FIRE EXT# FIRE EXTINGUISHER 5LBS	FIRE EXT# FIRE EXTINGUISHER 5LBS
1810	898052	FIRE EXT# FIRE EXTINGUISHER 5LBS	FIRE EXT# FIRE EXTINGUISHER 5LBS
1811	899315-05	MODULE # MODULE FIRE OVERHEAT DETECTOR	MODULE # MODULE FIRE OVERHEAT DETECTOR
1812	8TJ124GGM1	XMTR # F/F TRANSMITTER	XMTR # F/F TRANSMITTER
1813	8V102	INDICATR# INDICATOR	INDICATR# INDICATOR
1814	90-10072	SNUBBER # SNUBBER AY-ENTRY-DOOR	SNUBBER # SNUBBER AY-ENTRY-DOOR
1815	90-10072-1	SNUBBER # SNUBBER AY-ENTRY-DOOR	SNUBBER # SNUBBER AY-ENTRY-DOOR
1816	90-10072-2	SNUBBER # SNUBBER AY-ENTRY-DOOR	SNUBBER # SNUBBER AY-ENTRY-DOOR
1817	9043185-1	IGN LEAD# IGNITION LEAD RH	IGN LEAD# IGNITION LEAD RH
1818	9043185-13	IGN LEAD# IGNITION LEAD RH	IGN LEAD# IGNITION LEAD RH
1819	9043185-14	IGN LEAD# IGNITION LEAD LH	IGN LEAD# IGNITION LEAD LH
1820	9043185-15	IGN LEAD# IGNITION LEAD RH	IGN LEAD# IGNITION LEAD RH
1821	9043185-16	IGN LEAD# IGNITION LEAD LH	IGN LEAD# IGNITION LEAD LH
1822	9043185-2	IGN LEAD# IGNITION LEAD LH	IGN LEAD# IGNITION LEAD LH
1823	9048202-103	IGN LEAD# IGNITER CABLE	IGN LEAD# IGNITER CABLE
1824	9048202-104	IGN LEAD# IGNITER CABLE	IGN LEAD# IGNITER CABLE
1825	9048900-1	EXCITER # EXCITER APU	EXCITER # EXCITER APU
1826	9048900-2	EXCITER # EXCITER APU	EXCITER # EXCITER APU
1827	9048900-2B	EXCITER # EXCITER APU	EXCITER # EXCITER APU
1828	906D896-1	XFORMER # CURRENT TRANSFORMER	XFORMER # CURRENT TRANSFORMER
1829	906D896-3	XFORMER # CURRENT TRANSFORMER	XFORMER # CURRENT TRANSFORMER
1830	90G37	SWITCH # HYDR.PUMP LOW PRESS.SWITCH	SWITCH # HYDR.PUMP LOW PRESS.SWITCH
1831	915F212-4	GCU # GENERATOR CONTROL UNIT	GCU # GENERATOR CONTROL UNIT
1832	915F212-5	GCU # GENERATOR CONTROL UNIT	GCU # GENERATOR CONTROL UNIT
1833	915F212-6	GCU # GENERATOR CONTROL UNIT	GCU # GENERATOR CONTROL UNIT
1834	915F212-7	GCU # GENERATOR CONTROL UNIT	GCU # GENERATOR CONTROL UNIT
1835	915F213-2	PNL BUSP# BUS PROTECTION PANEL	PNL BUSP# BUS PROTECTION PANEL
1836	915F213-3	PNL BUSP# BUS PROTECTION PANEL	PNL BUSP# BUS PROTECTION PANEL
1837	915F213-4	PNL BUSP# BUS PROTECTION PANEL	PNL BUSP# BUS PROTECTION PANEL
1838	9238M66P08	EXCITER # IGNITION EXCITER UNIT TFN-30	EXCITER # IGNITION EXCITER UNIT TFN-30
1839	93-A100-80	CVR # COCKPIT VOICE RECORDER	CVR # COCKPIT VOICE RECORDER
1840	93-A152-20	PNL CVR # CONTROL PANEL CVR	PNL CVR # CONTROL PANEL CVR
1841	9334M96P02	SENSOR # CIT SENSOR	SENSOR # CIT SENSOR
1842	9339M26P09	IGN LEAD# IGNITION LEAD RH	IGN LEAD# IGNITION LEAD RH
1843	9339M26P10	IGN LEAD# IGNITION LEAD LH	IGN LEAD# IGNITION LEAD LH
1844	9339M26P13	IGN LEAD# IGNITION LEAD RH	IGN LEAD# IGNITION LEAD RH
1845	9339M26P14	IGN LEAD# IGNITION LEAD LH	IGN LEAD# IGNITION LEAD LH
1846	9350021	VALVE # VALVE ASSY DRAIN WATER	VALVE # VALVE ASSY DRAIN WATER
1847	9350022	VALVE # VALVE ASSY DRAIN WATER	VALVE # VALVE ASSY DRAIN WATER
1848	9375M82P01	SENSOR # SENSOR T2	SENSOR # SENSOR T2
1849	9375M82P04	SENSOR # SENSOR T2	SENSOR # SENSOR T2
1850	9387M15P11	CONTROL # MAIN ENGINE CONTROL CFM56-3B2	CONTROL # MAIN ENGINE CONTROL CFM56-3B2
1851	93A100-80	CVR # COCKPIT VOICE RECORDER, A100A	CVR # COCKPIT VOICE RECORDER, A100A
1852	93A152-20	PNL CVR # CONTROL PANEL CVR	PNL CVR # CONTROL PANEL CVR
1853	941D335-2	CONTACTR# GENERATOR BREAKER	CONTACTR# GENERATOR BREAKER
1854	941D335-4	CONTACTR# GENERATOR BREAKER	CONTACTR# GENERATOR BREAKER
1855	941D339-1	XFMR # CURRENT XFMR	XFMR # CURRENT XFMR
1856	9454-2	LATCH AY# LATCH ASSY-FAN DUCT	LATCH AY# LATCH ASSY-FAN DUCT
1857	948F458-4	GCU # GENERATOR CONTROL UNIT	GCU # GENERATOR CONTROL UNIT
1858	948F458-5	GCU # GENERATOR CONTROL UNIT	GCU # GENERATOR CONTROL UNIT
1859	9550166840	IGN LEAD# IGNITER CABLE	IGN LEAD# IGNITER CABLE
1860	9550166850	CABLE # IGNITER CABLE, R/H	CABLE # IGNITER CABLE, R/H
1861	9550167930	SWITCH # HIGH OIL TEMP. SWITCH	SWITCH # HIGH OIL TEMP. SWITCH
1862	9550170240	PROBE # PROBE 2, SPEED SENSOR	PROBE # PROBE 2, SPEED SENSOR
1863	9550173560	PROBE # PROBE 1, SPEED SENSOR	PROBE # PROBE 1, SPEED SENSOR
1864	9550173570	PROBE # PROBE 2, SPEED SENSOR	PROBE # PROBE 2, SPEED SENSOR
1865	9560160690	COOLER # OIL COOLER ASSY	COOLER # OIL COOLER ASSY
1866	9560160700	COOLER # OIL COOLER ASSY	COOLER # OIL COOLER ASSY
1867	9599-607-14931	LRRA TR # TRANSCEIVER LRRA ERT530A	LRRA TR # TRANSCEIVER LRRA ERT530A



№	Код	Наименование детали	Доп.инфо
1868	96019-01	ISOLATOR# ISOLATOR VIBRATION FWD ENG	ISOLATOR# ISOLATOR VIBRATION FWD ENG
1869	96019-02	ISOLATOR# ISOLATOR VIBRATION AFT ENG MNT	ISOLATOR# ISOLATOR VIBRATION AFT ENG MNT
1870	961627	PUMP HYD# PUMP HYD AUX/STANDBY	PUMP HYD# PUMP HYD AUX/STANDBY
1871	964-0401-016	DATA LDR# AIRBORNE DATA LOADER	DATA LDR# AIRBORNE DATA LOADER
1872	965-0728-001	AMU # ACARS MANAGEMENT UNIT	AMU # ACARS MANAGEMENT UNIT
1873	965-0976-003-204-204	EGPWC # ENH. GROUND PROX.WARNING COMP.	EGPWC # ENH. GROUND PROX.WARNING COMP.
1874	965-0976-020-216-216	EGPWC # ENH. GROUND PROX.WARNING COMP.	EGPWC # ENH. GROUND PROX.WARNING COMP.
1875	96N9030	PANEL # CONTROL PANEL, ELT	PANEL # CONTROL PANEL, ELT
1876	9700-A1A-BF23A	CYLINDER# OXY.BOTTLE 4,25 CU/FT W/O LUNG	CYLINDER# OXY.BOTTLE 4,25 CU/FT W/O LUNG
1877	9700-C1A-BF20B	OXYBOTTL# OXY.CYLINDER 11CU/FT W/O LUNGS	OXYBOTTL# OXY.CYLINDER 11CU/FT W/O LUNGS
1878	9700-C1A-BF23A	OXYBOTTL# OXY.BOTTLE 11CU/FT W/O LUNGS	OXYBOTTL# OXY.BOTTLE 11CU/FT W/O LUNGS
1879	9700-C1A-BF23B	OXYBOTLE# OXY.BOTTLE 11CU/FT 'W/O LUNGS'	OXYBOTLE# OXY.BOTTLE 11CU/FT 'W/O LUNGS'
1880	9700-C1ABF23A	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS
1881	9700A1ABF23A	OXYBOTTL# OXY.BOTTLE 4,25 CU/FT W/O LUNG	OXYBOTTL# OXY.BOTTLE 4,25 CU/FT W/O LUNG
1882	9700C1ABF23A	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS
1883	9700C1ABF23B	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS	OXYBOTLE# OXY.BOTTLE 11CU/FT W/O LUNGS
1884	971-4193-001	ACCELMTR# ACCELEROMETER THREE AXIS, FDR	ACCELMTR# ACCELEROMETER THREE AXIS, FDR
1885	975-0003-001	SWITCH # SWITCH THERMAL WINDOW NO.2	SWITCH # SWITCH THERMAL WINDOW NO.2
1886	975-0018-007	SWITCH # SWITCH THERMO HYDR FLUID OVERH	SWITCH # SWITCH THERMO HYDR FLUID OVERH
1887	975-0062-002	SWITCH # SWITCH THERMAL ANTI ICE	SWITCH # SWITCH THERMAL ANTI ICE
1888	975-0172-006	SWITCH # SWITCH THERMOSTATIC	SWITCH # SWITCH THERMOSTATIC
1889	975-0221-001	SWITCH # SWITCH	SWITCH # SWITCH
1890	976036-2	TANK # TANK OIL APU	TANK # TANK OIL APU
1891	976J498-1	GEN.AC # GENERATOR-AC 40KVA	GEN.AC # GENERATOR-AC 40KVA
1892	976J498-2	GENERATR# GENERATOR AY- AC 40KVA ENG DRI	GENERATR# GENERATOR AY- AC 40KVA ENG DRI
1893	976J598-1	GEN.AC # GENERATOR-AC 40KVA	GEN.AC # GENERATOR-AC 40KVA
1894	977J460-10	VSCF # Variab. Speed Const. Frequency	VSCF # Variab. Speed Const. Frequency
1895	977J460-11	VSCF # Variab. Speed Const. Frequency	VSCF # Variab. Speed Const. Frequency
1896	977J460-8	VSCF # Variab. Speed Const. Frequency	VSCF # Variab. Speed Const. Frequency
1897	977J460-9	VSCF # Variab. Speed Const. Frequency	VSCF # Variab. Speed Const. Frequency
1898	980-4700-042	DFDR # DIGITAL FLIGHT DATA RECORDER	DFDR # DIGITAL FLIGHT DATA RECORDER
1899	9810	FAUCET # FAUCET ASSY MECHANICALLY TIMED	FAUCET # FAUCET ASSY MECHANICALLY TIMED
1900	9819	FAUCET # FAUCET	FAUCET # FAUCET
1901	9974M82P02	STATOR # STATOR ALTERNATOR	STATOR # STATOR ALTERNATOR
1902	9974M82P03	STATOR # STATOR ALTERNATOR	STATOR # STATOR ALTERNATOR
1903	9974M83P01	ROTOR # ROTOR ALTERNATOR	ROTOR # ROTOR ALTERNATOR
1904	A12SA	MEGAPHON# MEGAPHONE-ELECTRONIC	MEGAPHON# MEGAPHONE-ELECTRONIC
1905	A61498	VALVE AY# PRESS RELIEF VALVE	VALVE AY# PRESS RELIEF VALVE
1906	A61499	VALVE # PRESS RELIEF VALVE A-SYSTEM	VALVE # PRESS RELIEF VALVE A-SYSTEM
1907	A829700-37	FIRE EXT# FIRE EXTINGUISHER	FIRE EXT# FIRE EXTINGUISHER
1908	A829700-5	FIRE EXT# FIRE EXTINGUISHER	FIRE EXT# FIRE EXTINGUISHER
1909	ABS0121-30	SENSOR # SENSOR-ALTERNATE	SENSOR # SENSOR-ALTERNATE
1910	AC7680-6	FILTERAY# FILTER AY HYDR SYSTEM FILLING	FILTERAY# FILTER AY HYDR SYSTEM FILLING
1911	AE7693-127N2	FILTER Y# FILTER AY HYDR SINGLE STAGE	FILTER Y# FILTER AY HYDR SINGLE STAGE
1912	AE7693-128	FILTER Y# FILTER AY HYDR SINGLE STAGE	FILTER Y# FILTER AY HYDR SINGLE STAGE
1913	AE81565G	COUPLING# COUPLING	COUPLING# COUPLING
1914	AE96154E	SWIVEL # SWIVEL	SWIVEL # SWIVEL
1915	AE96155E	SWIVEL # SWIVEL AY	SWIVEL # SWIVEL AY
1916	AR6460M2	MOTOR # A/P STABILIZER TRIM MOTOR	MOTOR # A/P STABILIZER TRIM MOTOR
1917	AR6460M2MOD1	MOTOR # MOTOR STABILIZER TRIM AP	MOTOR # MOTOR STABILIZER TRIM AP
1918	AR6460M2MOD2	MOTOR # MOTOR STABILIZER TRIM AP	MOTOR # MOTOR STABILIZER TRIM AP
1919	AR6460M2MOD3	MOTOR # MOTOR STABILIZER TRIM AP	MOTOR # MOTOR STABILIZER TRIM AP
1920	AR6460M2MOD2	MOTOR # MOTOR STABILIZER TRIM AP	MOTOR # MOTOR STABILIZER TRIM AP
1921	AR6460M2MOD3	MOTOR # MOTOR STABILIZER TRIM AP	MOTOR # MOTOR STABILIZER TRIM AP
1922	AR7077M3	ACTUATOR# ACTUATOR ASSY-ELEC.	ACTUATOR# ACTUATOR ASSY-ELEC.
1923	AV13J5101	VALVE AS# MOTOR OPERATED SELECTOR VALVE	VALVE AS# MOTOR OPERATED SELECTOR VALVE
1924	AV13J5144	VALVE AY# VALVE AY-MOTOR OPERATED SELECT	VALVE AY# VALVE AY-MOTOR OPERATED SELECT
1925	AV13J5147	VALVE AS# MOTOR OPERATED SELECTOR VALVE	VALVE AS# MOTOR OPERATED SELECTOR VALVE
1926	AV16B1350	VALVE AS# MOTOR OPERATED SHUTOFF VALVE	VALVE AS# MOTOR OPERATED SHUTOFF VALVE
1927	AV16B1950	VALVE AS# MOTOR OPERATED SHUTOFF VALVE	VALVE AS# MOTOR OPERATED SHUTOFF VALVE
1928	AV16E1209D	VALVE AY# ACT.-OPERATED FUEL SHUT OFF VL	VALVE AY# ACT.-OPERATED FUEL SHUT OFF VL
1929	AV18B1018	VALVE AY# VALVE RELIEF APU MANIFOLD AIR	VALVE AY# VALVE RELIEF APU MANIFOLD AIR
1930	AVR869	RELAY # PHASE SENSING RELAY,STAB.TRIM	RELAY # PHASE SENSING RELAY,STAB.TRIM
1931	AW2835AB05	DPC IND # DIFF PRESSURE CABIN INDICATOR	DPC IND # DIFF PRESSURE CABIN INDICATOR
1932	B10046	SCREW AY# BALL SCREW 3+6	SCREW AY# BALL SCREW 3+6
1933	B10046B	SCREW AY# BALL SCREW 3+6	SCREW AY# BALL SCREW 3+6
1934	B10046C	SCREW AY# BALL SCREW 3+6	SCREW AY# BALL SCREW 3+6
1935	B10046D	SCREW AY# TE FLAP BALL NUT + SCREW 3+6	SCREW AY# TE FLAP BALL NUT + SCREW 3+6
1936	B10047	SCREW AY# BALL SCREW ASSY 4+5	SCREW AY# BALL SCREW ASSY 4+5
1937	B10047B	SCREW AY# BALL SCREW ASSY 4+5	SCREW AY# BALL SCREW ASSY 4+5
1938	B10047C	SCREW AY# BALL SCREW ASSY 4+5	SCREW AY# BALL SCREW ASSY 4+5
1939	B10047D	SCREW AY# BALL SCREW ASSY 4+5	SCREW AY# BALL SCREW ASSY 4+5
1940	B20745	SCREW AY# BALL SCREW ASSY 1+8 / 2+7	SCREW AY# BALL SCREW ASSY 1+8 / 2+7
1941	B20745C	SCREW AY# BALL SCREW ASSY 1+8 / 2+7	SCREW AY# BALL SCREW ASSY 1+8 / 2+7
1942	B20745D	SCREW AY# BALL SCREW ASSY 1+8 / 2+7	SCREW AY# BALL SCREW ASSY 1+8 / 2+7
1943	BA51015G-3	FIRE EXT# FIRE EXT COCKPIT 1,5KG	FIRE EXT# FIRE EXT COCKPIT 1,5KG
1944	BA51015G3	FIRE EXT# FIRE EXT COCKPIT 1,5KG	FIRE EXT# FIRE EXT COCKPIT 1,5KG
1945	BA51015S-3	FIRE EXT# FIRE EXTNGSHR COCKPIT 1,5KG	FIRE EXT# FIRE EXTNGSHR COCKPIT 1,5KG
1946	BA51015S3	FIRE EXT# FIRE EXTNGSHR COCKPIT 1,5KG	FIRE EXT# FIRE EXTNGSHR COCKPIT 1,5KG
1947	BCREF15073	EGPWC # ENH. GROUND PROX.WARNING COMP.	EGPWC # ENH. GROUND PROX.WARNING COMP.
1948	C-07202-2	SHAKER # SHAKER CONTROL MOTOR	SHAKER # SHAKER CONTROL MOTOR
1949	C-07202-3	SHAKER # SHAKER ASSY-CONTROL	SHAKER # SHAKER ASSY-CONTROL
1950	C-5C	COMPASS # MAGNETIC STANDBY COMPASS	COMPASS # MAGNETIC STANDBY COMPASS



"STRELA" Limited Liability Company

ПОСТАВКА И РЕМОНТ АВИАЦИОННЫХ КОМПОНЕНТОВ И ОБОРУДОВАНИЯ

Тел/факс (495) 139-60-45 info@strela-at.ru

№	Код	Наименование детали	Доп.инфо
1951	C-5L	COMPASS # MAGNETIC STANDBY COMPASS	COMPASS # MAGNETIC STANDBY COMPASS
1952	C07202-2	SHAKER # SHAKER ASSY-COAXIAL CONTRL	SHAKER # SHAKER ASSY-COAXIAL CONTRL
1953	C07202-3	SHAKER # SHAKER ASSY-CONTROL	SHAKER # SHAKER ASSY-CONTROL
1954	C12404EA02	CTRL ATC# ATC/TCAS CONTROL PANEL	CTRL ATC# ATC/TCAS CONTROL PANEL
1955	C17065AA	GPS ANT # ANTENNA-GPS ACTIVE	GPS ANT # ANTENNA-GPS ACTIVE
1956	C201-2500-40	VALVE # RAIN REPELANT S/O VALVE	VALVE # RAIN REPELANT S/O VALVE
1957	C5C	COMPASS # MAGNETIC STANDBY COMPASS	COMPASS # MAGNETIC STANDBY COMPASS
1958	C5L	COMPASS # MAGNETIC STANDBY COMPASS	COMPASS # MAGNETIC STANDBY COMPASS
1959	CA150-00	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
1960	CA151-00	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
1961	CA151-01	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
1962	CA152-00	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
1963	CA152-01	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
1964	CA152-02	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
1965	CA152-03	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
1966	CA152-04	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
1967	CD-00526-1	FILTER A# FILTER ASSY	FILTER A# FILTER ASSY
1968	CD00526-1	FILTER A# FILTER ASSY	FILTER A# FILTER ASSY
1969	CG1135AC01	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT
1970	CG1135AC02	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT	ISDU IRS# INERTIAL SYSTEM DISPLAY UNIT
1971	CGAB1400-00	DETECTOR# SMOKE DETECTOR	DETECTOR# SMOKE DETECTOR
1972	CGAB1400-01	DETECTOR# SMOKE DETECTOR	DETECTOR# SMOKE DETECTOR
1973	CH31723	IGNITER # IGNITER PLUG	IGNITER # IGNITER PLUG
1974	CV02-55	VALVE # VALVE, CHECK	VALVE # VALVE, CHECK
1975	D17978-133	Reservoir# Reserv. + Valve Assy Aft Door	Reservoir# Reserv. + Valve Assy Aft Door
1976	D30665-105	SLIDE # EVACUATION SLIDE/RAFT AFT	SLIDE # EVACUATION SLIDE/RAFT AFT
1977	D30665-109	SLIDE # EVACUATION SLIDE/RAFT AFT	SLIDE # EVACUATION SLIDE/RAFT AFT
1978	D37022-105	Reservoir# Reservoir and Valve Assembly	Reservoir# Reservoir and Valve Assembly
1979	D37022-205	Reservoir# Reservoir and Valve Assembly	Reservoir# Reservoir and Valve Assembly
1980	D434-56-001	ANNUNCIA# AUTOFLIGHT STATUS ANNUNCIATOR	ANNUNCIA# AUTOFLIGHT STATUS ANNUNCIATOR
1981	D533-05-001	SWITCH # SWITCH	SWITCH # SWITCH
1982	D533-06-001	SWITCH # SWITCH	SWITCH # SWITCH
1983	D533-07-001	SWITCH # SWITCH ASSY-ENG FIRE	SWITCH # SWITCH ASSY-ENG FIRE
1984	D533-08-001	SWITCH # SWITCH	SWITCH # SWITCH
1985	DG1035AB03	ADAP IRS# DIGITAL ANALOG ADAPTER IRS	ADAP IRS# DIGITAL ANALOG ADAPTER IRS
1986	DK100	ULB # UNDERWATER LOCATOR BEACON	ULB # UNDERWATER LOCATOR BEACON
1987	DK120	ULB # UNDERWATER LOCATOR BEACON	ULB # UNDERWATER LOCATOR BEACON
1988	DMN23-1	ANT VOR # VOR/ILS ANTENNA	ANT VOR # VOR/ILS ANTENNA
1989	DMN23-1/C	ANT VOR # VOR/ILS ANTENNA	ANT VOR # VOR/ILS ANTENNA
1990	DMN23-1C	ANT VOR # VOR/ILS ANTENNA	ANT VOR # VOR/ILS ANTENNA
1991	E28180-10	PBE CREW# PROTECTIV BREATHING EQUIP CHEM	PBE CREW# PROTECTIV BREATHING EQUIP CHEM
1992	E6020M32-1	MOTOR # MOTOR AND BRAKE ASSY	MOTOR # MOTOR AND BRAKE ASSY
1993	ED44B510	DFDAU # DIG. FLIGHT DATA ACQUIS. UNIT	DFDAU # DIG. FLIGHT DATA ACQUIS. UNIT
1994	ED47B109	DFDAU # DIG. FLIGHT DATA ACQUIS. UNIT	DFDAU # DIG. FLIGHT DATA ACQUIS. UNIT
1995	ELP-362D	ULB # UNDERWATER LOCATOR BEACON	ULB # UNDERWATER LOCATOR BEACON
1996	ELP362D	ULB # UNDERWATER LOCATOR BEACON	ULB # UNDERWATER LOCATOR BEACON
1997	EM487-4	ACTUATOR# ACTUATOR FUEL S/O VALVE	ACTUATOR# ACTUATOR FUEL S/O VALVE
1998	EM56-20-5	SHUTOFF # SHUTOFF VALVE MOTOR ACTUATED	SHUTOFF # SHUTOFF VALVE MOTOR ACTUATED
1999	EM91-79-5	S/O-VALV# S/O-VALVE ASSY	S/O-VALV# S/O-VALVE ASSY
2000	FA00914D	FILTER # FILTER FUEL NOZZLE	FILTER # FILTER FUEL NOZZLE
2001	FDS765A-1	SENSOR # SMOKE SENSOR LAVATORIE	SENSOR # SMOKE SENSOR LAVATORIE
2002	FDS765A1	SENSOR # SMOKE SENSOR LAVATORIE	SENSOR # SMOKE SENSOR LAVATORIE
2003	FDS765A2	SENSOR # SMOKE SENSOR LAVATORIE	SENSOR # SMOKE SENSOR LAVATORIE
2004	FS93-11	IGNITER # IGNITER PLUG	IGNITER # IGNITER PLUG
2005	G-2581	CTRL SEL# SELCAL CONTROL PANEL	CTRL SEL# SELCAL CONTROL PANEL
2006	G-2581-03	CTRL SEL# SELCAL CONTROL PANEL	CTRL SEL# SELCAL CONTROL PANEL
2007	G-5921	ANNUNTR # PANEL FLAP U SLATS ANN P5-12	ANNUNTR # PANEL FLAP U SLATS ANN P5-12
2008	G-5931	CTRL ADF# ADF CONTROL PANEL	CTRL ADF# ADF CONTROL PANEL
2009	G-6076-05	CTRL VHF# VHF COMM CONTROL PANEL	CTRL VHF# VHF COMM CONTROL PANEL
2010	G-6226-02	CTRL WXR# WXR CONTROL PANEL	CTRL WXR# WXR CONTROL PANEL
2011	G1-1Q	SWITCH # SWITCH, THERMAL WINDOW NO.3	SWITCH # SWITCH, THERMAL WINDOW NO.3
2012	G2581	CTRL SEL# SELCAL CONTROL PANEL	CTRL SEL# SELCAL CONTROL PANEL
2013	G2581-03	CTRL SEL# SELCAL CONTROL PANEL	CTRL SEL# SELCAL CONTROL PANEL
2014	G37-1C	SWITCH # SWITCH THERMO HYDR FLUID OVERH	SWITCH # SWITCH THERMO HYDR FLUID OVERH
2015	G37-1J	SWITCH # SWITCH THERMO HYDR FLUID OVERH	SWITCH # SWITCH THERMO HYDR FLUID OVERH
2016	G5407-03	CTRL COM# VHF COMM NAV CONTROL PANEL	CTRL COM# VHF COMM NAV CONTROL PANEL
2017	G5921	ANNUNTR # PANEL FLAP U SLATS ANN P5-12	ANNUNTR # PANEL FLAP U SLATS ANN P5-12
2018	G5931	CTRL ADF# ADF CONTROL PANEL	CTRL ADF# ADF CONTROL PANEL
2019	G6076-05	CTRL VHF# VHF COMM CONTROL PANEL	CTRL VHF# VHF COMM CONTROL PANEL
2020	G6200-06	CTRL VHF# VHF COMM CONTROL PANEL	CTRL VHF# VHF COMM CONTROL PANEL
2021	G6226-02	CTRL WXR# WXR CONTROL PANEL	CTRL WXR# WXR CONTROL PANEL
2022	G6773-02	CTRL NAV# VHF NAV CONTROL PANEL	CTRL NAV# VHF NAV CONTROL PANEL
2023	G6773-04	CTRL VHF# VHF NAV CONTROL PANEL	CTRL VHF# VHF NAV CONTROL PANEL
2024	G7185-05	PANEL # PANEL SMOKE DETECTOR CONTROL	PANEL # PANEL SMOKE DETECTOR CONTROL
2025	G7400-23	VHF CTRL# VHF COMM CONTROL PANEL	VHF CTRL# VHF COMM CONTROL PANEL
2026	G7400-30	VHF CTRL# VHF COMM CONTROL PANEL	VHF CTRL# VHF COMM CONTROL PANEL
2027	G7401-03	CTRL HF # HF COMM CONTROL PANEL	CTRL HF # HF COMM CONTROL PANEL
2028	G7404-10	RTP # RADIO TUNING PANEL	RTP # RADIO TUNING PANEL
2029	G7406-04	CTRL VHF# VHF COMM CONTROL PANEL	CTRL VHF# VHF COMM CONTROL PANEL
2030	G7406-09	CTRL VHF# VHF COMM CONTROL PANEL	CTRL VHF# VHF COMM CONTROL PANEL
2031	GM5341-7	XDCR # TRANSDUCER AIL+ELEV FORCE	XDCR # TRANSDUCER AIL+ELEV FORCE
2032	GM5341-8	XDCR # TRANSDUCER AIL+ELEV FORCE	XDCR # TRANSDUCER AIL+ELEV FORCE
2033	H321AKM1	HORIZON # INDICATOR STANDBY HORIZON	HORIZON # INDICATOR STANDBY HORIZON
2034	H341ANM1	HORIZON # INDICATOR STANDBY HORIZON	HORIZON # INDICATOR STANDBY HORIZON
2035	H504A	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER



№	Код	Наименование детали	Доп.инфо
2036	H504B	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
2037	H504C	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
2038	H505B	XMTR POS# POSITION TRANSMITTER	XMTR POS# POSITION TRANSMITTER
2039	H509B	X MITTER# TRANSMITTER-CONTROL SURFACE PO	X MITTER# TRANSMITTER-CONTROL SURFACE PO
2040	H61C0552M1	VALVE AY# VALVE CHECK HYDR SYSTEM	VALVE AY# VALVE CHECK HYDR SYSTEM
2041	H7034-1	PROBE # PROBE PITOT	PROBE # PROBE PITOT
2042	H7034-1A	PROBE # PROBE PITOT	PROBE # PROBE PITOT
2043	H7034-1B	PROBE # PROBE PITOT	PROBE # PROBE PITOT
2044	HG1050AC04	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2045	HG1050AD04	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2046	HG1050AD05	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2047	HG1050AD09	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2048	HG1050AD10	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2049	HG1050AE09	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2050	HG1050AE10	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2051	HG480B43	DADC # DIGITAL AIR DATA COMPUTER	DADC # DIGITAL AIR DATA COMPUTER
2052	HG480E1	DADC # DIGITAL AIR DATA COMPUTER	DADC # DIGITAL AIR DATA COMPUTER
2053	HME1410-CA	BOOM SET# BOOM SET	BOOM SET# BOOM SET
2054	HME1410CA	BOOM SET# BOOM SET	BOOM SET# BOOM SET
2055	HME46-K	BOOM SET# BOOM SET HME 46-K	BOOM SET# BOOM SET HME 46-K
2056	HME46K	BOOM SET# BOOM SET HME 46-K	BOOM SET# BOOM SET HME 46-K
2057	HS-140-3	SYNCHRO # P.L.A.SYNCHRO TRANSMITTER	SYNCHRO # P.L.A.SYNCHRO TRANSMITTER
2058	HS140-3	SYNCHRO # P.L.A.SYNCHRO TRANSMITTER	SYNCHRO # P.L.A.SYNCHRO TRANSMITTER
2059	HSL-0C12B	IND RUDDT# RUDDER TRIM INDICATOR	IND RUDDT# RUDDER TRIM INDICATOR
2060	HSL0C12B	IND RUDDT# RUDDER TRIM INDICATOR	IND RUDDT# RUDDER TRIM INDICATOR
2061	L-4871	ARRESTOR# FLAME ARRESTOR	ARRESTOR# FLAME ARRESTOR
2062	L4871	ARRESTOR# FLAME ARRESTOR	ARRESTOR# FLAME ARRESTOR
2063	L8602419-2	COOLER # CSD OIL COOLER	COOLER # CSD OIL COOLER
2064	LHM1410CA	BOOM SET# BOOM SET	BOOM SET# BOOM SET
2065	LKCB-8027	AMPMETER# METER - AC AMP	AMPMETER# METER - AC AMP
2066	LKCB18032	AMPMETER# METER - AC AMP	AMPMETER# METER - AC AMP
2067	LKCB18036	METER,AM# DC AMP METER	METER,AM# DC AMP METER
2068	LKCB8027	AMPMETER# METER - AC AMP	AMPMETER# METER - AC AMP
2069	LKCB8036	METER,AM# DC AMP METER	METER,AM# DC AMP METER
2070	LKCB8056	METER,V # DC VOLT METER	METER,V # DC VOLT METER
2071	LKCC8031	IND. TEMP# CSD TEMP INDICATOR	IND. TEMP# CSD TEMP INDICATOR
2072	LM-321-118	ISOLATOR# ISOLATOR VIBRATION FWD ENG	ISOLATOR# ISOLATOR VIBRATION FWD ENG
2073	LM-321-118-V	ISOLATOR# ISOLATOR VIBRATION FWD ENG	ISOLATOR# ISOLATOR VIBRATION FWD ENG
2074	LM-321-118H	ISOLATOR# ISOLATOR VIBRATION FWD ENG	ISOLATOR# ISOLATOR VIBRATION FWD ENG
2075	LM-321-118V	ISOLATOR# ISOLATOR VIBRATION FWD ENG	ISOLATOR# ISOLATOR VIBRATION FWD ENG
2076	LM-321-SA19	ISOLATOR# ISOLATOR VIBRATION AFT ENG MNT	ISOLATOR# ISOLATOR VIBRATION AFT ENG MNT
2077	LM-321-SA19-V	ISOLATOR# ISOLATOR VIBRATION AFT ENG MNT	ISOLATOR# ISOLATOR VIBRATION AFT ENG MNT
2078	LM321-109	ISOLATOR# ISOLATOR VIBRATION (FWD)	ISOLATOR# ISOLATOR VIBRATION (FWD)
2079	LM321-118	ISOLATOR# ISOLATOR VIBRATION (FWD)	ISOLATOR# ISOLATOR VIBRATION (FWD)
2080	LM321-118-V	ISOLATOR# ISOLATOR VIBRATION FWD	ISOLATOR# ISOLATOR VIBRATION FWD
2081	LM321-118V	ISOLATOR# ISOLATOR VIBRATION FWD	ISOLATOR# ISOLATOR VIBRATION FWD
2082	LM321SA18	ISOLATOR# ISOLATOR VIBRATION FWD ENG	ISOLATOR# ISOLATOR VIBRATION FWD ENG
2083	LM321SA19	ISOLATOR# ISOLATOR VIBRATION AFT ENG MNT	ISOLATOR# ISOLATOR VIBRATION AFT ENG MNT
2084	LM321SA19V	ISOLATOR# ISOLATOR VIBRATION AFT	ISOLATOR# ISOLATOR VIBRATION AFT
2085	M171254-100CD	FADEC AP# FADEC APU APS2000	FADEC AP# FADEC APU APS2000
2086	M4500228A	NOZZLE # nozzle assy	NOZZLE # nozzle assy
2087	M913-1	VALVE # VALVE CHECK ENG GRD START	VALVE # VALVE CHECK ENG GRD START
2088	MC10-17-100	QD-MASK # QD-MASK AY WITH REGULATOR	QD-MASK # QD-MASK AY WITH REGULATOR
2089	MC10-25-104	QD-MASK # QD-MASK AY WITH REGULATOR	QD-MASK # QD-MASK AY WITH REGULATOR
2090	MC10-25-154	QD-MASK # QD-MASK AY WITH REGULATOR	QD-MASK # QD-MASK AY WITH REGULATOR
2091	MF10-02-11	MASK AY # FF/QD MASK WITH REGULATOR	MASK AY # FF/QD MASK WITH REGULATOR
2092	MPEV3-056-7A	PUMP HYD# HYDR PUMP B-SYSTEM ELECTRIC	PUMP HYD# HYDR PUMP B-SYSTEM ELECTRIC
2093	MS9-3911-30ZE	MOTOR # TE FLAP DRIVE HYDR MOTOR	MOTOR # TE FLAP DRIVE HYDR MOTOR
2094	MS9-3911-30ZE-4C	MOTOR # TE FLAP DRIVE HYDR MOTOR	MOTOR # TE FLAP DRIVE HYDR MOTOR
2095	MS9-3911-30ZE4C	MOTOR # TE FLAP DRIVE HYDR MOTOR	MOTOR # TE FLAP DRIVE HYDR MOTOR
2096	MPX139	BOX ASSY# CREW OXYGEN MASK STOWAGE BOX	BOX ASSY# CREW OXYGEN MASK STOWAGE BOX
2097	MPX147-2	BOX ASSY# CREW OXYGEN MASK STOWAGE BOX	BOX ASSY# CREW OXYGEN MASK STOWAGE BOX
2098	P10-009-0001	LIGHT AY# GLARESHIELD FLOODLIGHT	LIGHT AY# GLARESHIELD FLOODLIGHT
2099	P10-0090002	ANNUNTR # PANEL FLAP U SLATS ANN P5-12	ANNUNTR # PANEL FLAP U SLATS ANN P5-12
2100	PDC1-1B-161	SWITCH # AIRSPEED SWITCH	SWITCH # AIRSPEED SWITCH
2101	PDC1-1B161	SWITCH # AIRSPEED SWITCH	SWITCH # AIRSPEED SWITCH
2102	PU90-461R3	DETECTOR# SMOKE DETECTOR LAVATORY	DETECTOR# SMOKE DETECTOR LAVATORY
2103	PV3-160-4B	PUMP EDP# PUMP HYDRAULIC EDP	PUMP EDP# PUMP HYDRAULIC EDP
2104	R1053M18	LIMITER # LIMITER AILERON FORCE	LIMITER # LIMITER AILERON FORCE
2105	R1053M18-1	LIMITER # LIMITER AILERON FORCE	LIMITER # LIMITER AILERON FORCE
2106	R1053M18-2	LIMITER # LIMITER AILERON FORCE	LIMITER # LIMITER AILERON FORCE
2107	R15048	ACTUATOR# ACTUATOR-AILERON TRIM	ACTUATOR# ACTUATOR-AILERON TRIM
2108	R5303-5	ACTUATOR# AUTOM.SPEED BRAKE ACT	ACTUATOR# AUTOM.SPEED BRAKE ACT
2109	R5303-51	ACTUATOR# AUTOM.SPEED BRAKE ACT	ACTUATOR# AUTOM.SPEED BRAKE ACT
2110	R5303M1	ACTUATOR# AUTOM.SPEED BRAKE ACT	ACTUATOR# AUTOM.SPEED BRAKE ACT
2111	R6166M1	ACTUATOR# ACT AY-ROTARY FWD AIRSTAIR DOO	ACTUATOR# ACT AY-ROTARY FWD AIRSTAIR DOO
2112	R6200M3-11	ACTUATOR# ACTUATOR, AIR INLET DUCT, APU	ACTUATOR# ACTUATOR, AIR INLET DUCT, APU
2113	RMI-335-011-904-0	PANEL # MID ACOUSTIC PANEL	PANEL # MID ACOUSTIC PANEL
2114	RMI335-011-904-0	PANEL # PANEL	PANEL # PANEL
2115	RP211-00	SENSOR # TEMP SENSOR T12	SENSOR # TEMP SENSOR T12
2116	S210N701-18	VALVE # CHECK VALVE	VALVE # CHECK VALVE
2117	S210N701-2	SENSOR # SENSOR - LOW FLOW	SENSOR # SENSOR - LOW FLOW
2118	S210N701-25	FAN MOTR# EQU.COOLING SUPPLY FAN	FAN MOTR# EQU.COOLING SUPPLY FAN
2119	S210N701-33	FAN MOTR# EQU.COOLING SUPPLY FAN	FAN MOTR# EQU.COOLING SUPPLY FAN
2120	S210T130-31	VALVE # VALVE AY AIR CHECK RECIRCULTN	VALVE # VALVE AY AIR CHECK RECIRCULTN



№	Код	Наименование детали	Доп.инфо
2121	S231N212-2	METER,AM# DC AMP METER	METER,AM# DC AMP METER
2122	S231N212-5	MTR.FREQ# FREQUENCY METER	MTR.FREQ# FREQUENCY METER
2123	S231T102-2	VSI IND # VERTICAL SPEED INDICATOR	VSI IND # VERTICAL SPEED INDICATOR
2124	S231T310-2	INDIC. # BRAKE TEMP. IND.	INDIC. # BRAKE TEMP. IND.
2125	S232T303-1023	HEADREST# HEADREST AY GREY, CPT F/O	HEADREST# HEADREST AY GREY, CPT F/O
2126	S232T303-1025	SEAT PIL# SEAT, PILOT	SEAT PIL# SEAT, PILOT
2127	S232T303-1026	SEAT COP# SEAT, COPILOT	SEAT COP# SEAT, COPILOT
2128	S232T303-1033	SEAT PIL# SEAT, PILOT	SEAT PIL# SEAT, PILOT
2129	S232T303-1034	SEAT COP# SEAT, COPILOT	SEAT COP# SEAT, COPILOT
2130	S232T303-1041	SEAT PIL# SEAT, PILOT	SEAT PIL# SEAT, PILOT
2131	S232T303-1042	SEAT COP# SEAT, COPILOT	SEAT COP# SEAT, COPILOT
2132	S242A600-2001	CDU FMS # CONTROL DISPLAY UNIT FMS	CDU FMS # CONTROL DISPLAY UNIT FMS
2133	S242T101-105	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2134	S242T101-107	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2135	S242T101-111	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2136	S242T101-112	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2137	S242T101-114	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2138	S242T101-115	IRU # INERTIAL REFERENCE UNIT	IRU # INERTIAL REFERENCE UNIT
2139	S242T404-350	EFIS CTL# EFIS CONTROL PANEL	EFIS CTL# EFIS CONTROL PANEL
2140	S242T404-352	EFIS CTL# EFIS CONTROL PANEL	EFIS CTL# EFIS CONTROL PANEL
2141	S242T404-413	EFIP-701# EFIS SYMBOL GENERATOR	EFIP-701# EFIS SYMBOL GENERATOR
2142	S242T404-414	EFIP-701# EFIS SYMBOL GENERATOR	EFIP-701# EFIS SYMBOL GENERATOR
2143	S242T404-420	EFIP-701# EFIS SYMBOL GENERATOR UNIT	EFIP-701# EFIS SYMBOL GENERATOR UNIT
2144	S242T404-421	EFIP-701# EFIS SYMBOL GENERATOR UNIT	EFIP-701# EFIS SYMBOL GENERATOR UNIT
2145	S242T404-511	EFIS ADI# EFIS ATTITUDE DIRECTOR IND	EFIS ADI# EFIS ATTITUDE DIRECTOR IND
2146	S242T404-521	EFIS ADI# EFIS ATTITUDE DIRECTOR IND	EFIS ADI# EFIS ATTITUDE DIRECTOR IND
2147	S242T404-610	EFIS HSI# EFIS HORIZONTAL SITUATION IND	EFIS HSI# EFIS HORIZONTAL SITUATION IND
2148	S242T404-611	EFIS HSI# EFIS HORIZONTAL SITUATION IND	EFIS HSI# EFIS HORIZONTAL SITUATION IND
2149	S242T404-621	EFIS HSI# EFIS HORIZONTAL SITUATION IND	EFIS HSI# EFIS HORIZONTAL SITUATION IND
2150	S242T404-701	EFIS RLS# EFIS REMOTE LIGHT SENSOR	EFIS RLS# EFIS REMOTE LIGHT SENSOR
2151	S250N104-2	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
2152	S250N104-4	XMTR POS# POSITION TRANSMITTER	XMTR POS# POSITION TRANSMITTER
2153	S250N104-5	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
2154	S250N104-6	X MITTER# TRANSMITTER,POS CTRL.SURFACE	X MITTER# TRANSMITTER,POS CTRL.SURFACE
2155	S250N104-7	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
2156	S250N212-1	MOTOR # TE FLAP DRIVE HYDR MOTOR	MOTOR # TE FLAP DRIVE HYDR MOTOR
2157	S251A307-1	RUDDER P# RUDDER POWER CONTR. UNIT	RUDDER P# RUDDER POWER CONTR. UNIT
2158	S251T220-304	COMPUTER# RUDDER & ELEV. FEEL COMPUTER	COMPUTER# RUDDER & ELEV. FEEL COMPUTER
2159	S256T011-8	ACTUATOR# ALTERNATE FLAP DRIVE ACTUATOR	ACTUATOR# ALTERNATE FLAP DRIVE ACTUATOR
2160	S270T010-14	S/O-VALV# S/O-VALVE ASSY	S/O-VALV# S/O-VALVE ASSY
2161	S270T010-15	S/O VALV# SHUTOFF VALVE MOTOR ACTUATED	S/O VALV# SHUTOFF VALVE MOTOR ACTUATED
2162	S270T202-15	COUPLING# COUPLING	COUPLING# COUPLING
2163	S271N301-2	VALVE # RESERVOIR VENT VALVE ASSEMBLY	VALVE # RESERVOIR VENT VALVE ASSEMBLY
2164	S271N301-3	VALVE AY# RESERVOIR VENT VALVE AY	VALVE AY# RESERVOIR VENT VALVE AY
2165	S271N501-2	VALVE AY# MOTOR OP. SHUTOFF VALVE	VALVE AY# MOTOR OP. SHUTOFF VALVE
2166	S271N501-3	VALVE AY# MOTOR OP. SHUTOFF VALVE	VALVE AY# MOTOR OP. SHUTOFF VALVE
2167	S271T451-1	XMTR HYD# XMTR PRESS HYDRAULIC	XMTR HYD# XMTR PRESS HYDRAULIC
2168	S271T451-3	XMTR HYD# XMTR PRESS HYDRAULIC	XMTR HYD# XMTR PRESS HYDRAULIC
2169	S271T452-16	SWITCH # SWITCH PRESS	SWITCH # SWITCH PRESS
2170	S271T452-17	SWITCH # SWITCH	SWITCH # SWITCH
2171	S271T452-3	SWITCH # SWITCH PRESSURE	SWITCH # SWITCH PRESSURE
2172	S271T452-7	SWITCH # SWITCH PRESS ALTERN. BRAKE	SWITCH # SWITCH PRESS ALTERN. BRAKE
2173	S271T462-2	VALVEFIL# RESERVOIR FILL SELECTOR VALVE	VALVEFIL# RESERVOIR FILL SELECTOR VALVE
2174	S272U860-5	FUSE # FUSE HYDRAULIC	FUSE # FUSE HYDRAULIC
2175	S274A100-2	PACK AY # modular package assy-stby syst	PACK AY # modular package assy-stby syst
2176	S274A101-2	ACCUMLTR# ACCUMULATOR HYD BRAKE	ACCUMLTR# ACCUMULATOR HYD BRAKE
2177	S274T120-9	VALVE # SHUTTLE VALVE AUTOBRAKE	VALVE # SHUTTLE VALVE AUTOBRAKE
2178	S274T401-6	VALVE # AUTO BRAKE CONTROL VALVE	VALVE # AUTO BRAKE CONTROL VALVE
2179	S282T002-4	CHARGER # CHARGER-BATTERY	CHARGER # CHARGER-BATTERY
2180	S282T002-6	CHARGER # CHARGER-BATTERY	CHARGER # CHARGER-BATTERY
2181	S282T004-10	INVERTER# Static Inverter	INVERTER# Static Inverter
2182	S282T004-8	INVERTER# Static Inverter	INVERTER# Static Inverter
2183	S283N702-103	BALLAST # BALLAST UNIT	BALLAST # BALLAST UNIT
2184	S283N702-3	BALLAST # BALLAST UNIT-FLOURESCENT LAMP	BALLAST # BALLAST UNIT-FLOURESCENT LAMP
2185	S283T011-3	ACCELMTR# ACCELEROMETER THREE AXIS	ACCELMTR# ACCELEROMETER THREE AXIS
2186	S283U008-16	BALLAST # BALLAST UNIT	BALLAST # BALLAST UNIT
2187	S283U008-19	BALLAST # BALLAST UNIT-LAMP MZ 100	BALLAST # BALLAST UNIT-LAMP MZ 100
2188	S302A005-3	ISOLATOR# ISOLATOR VIBRATION AFT ENG MNT	ISOLATOR# ISOLATOR VIBRATION AFT ENG MNT
2189	S315A108-18	CABLE FU# CABLE FUEL SHUTOFF RH	CABLE FU# CABLE FUEL SHUTOFF RH
2190	S315A110-3	SYNCHRO # P.L.A.SYNCHRO TRANSMITTER	SYNCHRO # P.L.A.SYNCHRO TRANSMITTER
2191	S315N370-1	SYN LOCK# SYNCRO LOCK MANUAL DRIVE AY	SYN LOCK# SYNCRO LOCK MANUAL DRIVE AY
2192	S315N370-2	SYN LOCK# SYNCRO LOCK	SYN LOCK# SYNCRO LOCK
2193	S315N370-3	SYN LOCK# SYNCRO LOCK	SYN LOCK# SYNCRO LOCK
2194	S332A001-12	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
2195	S332A001-3	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
2196	S332A001-4	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
2197	S332A001-7	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
2198	S332A001-9	STARTER # STARTER CFM56-3	STARTER # STARTER CFM56-3
2199	S332A002-2	VALVE # STARTER VALVE	VALVE # STARTER VALVE
2200	S332A101-7	VALVE # NOSE COWL A/I VALVE	VALVE # NOSE COWL A/I VALVE
2201	S332A101-8	VALVE # NOSE COWL A/I VALVE	VALVE # NOSE COWL A/I VALVE
2202	S332T004-7	SWITCH # FUEL DIFF PRESS SWITCH	SWITCH # FUEL DIFF PRESS SWITCH
2203	S332T101-1	FIRE DET# GEARBOX FIRE DETECTOR ASSY	FIRE DET# GEARBOX FIRE DETECTOR ASSY
2204	S332T101-2	FIRE DET# DETECTOR STRUT FIRE OVERHEAT	FIRE DET# DETECTOR STRUT FIRE OVERHEAT
2205	S332T101-3	FIRE DET# EXHAUST CORE DETECTOR ASSY	FIRE DET# EXHAUST CORE DETECTOR ASSY



№	Код	Наименование детали	Доп.инфо
2206	S341T001-2	VALVE # VALVE-SUMP-DRAIN	VALVE # VALVE-SUMP-DRAIN
2207	S341T001-3	VALVE # VALVE-SUMP-DRAIN	VALVE # VALVE-SUMP-DRAIN
2208	S347T001-6	XMTR # F/F TRANSMITTER	XMTR # F/F TRANSMITTER
2209	S360N021-201	UNIT # ENGINE VIBRATION MONITOR UNIT	UNIT # ENGINE VIBRATION MONITOR UNIT
2210	S360N021-202	UNIT # ENGINE VIBRATION MONITOR UNIT	UNIT # ENGINE VIBRATION MONITOR UNIT
2211	S417N511-1	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
2212	S417N511-2	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
2213	S417N511-3	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
2214	S417N511-8001	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
2215	S417N511-8003	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL	LIGHT AY# LIGHT AY-FLUORESCENT SIDEWALL
2216	S417N512-1	SIGN # INT. ILLUM. WIN-AND EXIT SIGN	SIGN # INT. ILLUM. WIN-AND EXIT SIGN
2217	S417T105-15	VALVE # VALVE DRAIN ASSY	VALVE # VALVE DRAIN ASSY
2218	S802-30	RESERVOIR# RESERVOIR LIFE RAFT 46 PERS.	RESERVOIR# RESERVOIR LIFE RAFT 46 PERS.
2219	SEL-0C4AD	INDICATR# OIL PRESS INDICATOR	INDICATR# OIL PRESS INDICATOR
2220	SEL0C4AD	INDICATR# OIL PRESS INDICATOR	INDICATR# OIL PRESS INDICATOR
2221	SRDL-0C7E	INDICATR# INDICATOR DUAL DUCT PRESSURE	INDICATR# INDICATOR DUAL DUCT PRESSURE
2222	SRDL-6D	IND-DP # INDICATOR - DUAL PRESSURE	IND-DP # INDICATOR - DUAL PRESSURE
2223	SRDL-6D-M1	IND-DP # INDICATOR - DUAL PRESSURE	IND-DP # INDICATOR - DUAL PRESSURE
2224	SRDL-7H	HYDR. PR# HYDRAULIC PRESSURE INDICATOR	HYDR. PR# HYDRAULIC PRESSURE INDICATOR
2225	SRDL-0C7E	INDICATR# INDICATOR DUAL DUCT PRESSURE	INDICATR# INDICATOR DUAL DUCT PRESSURE
2226	SRDL0C7E	INDICATR# INDICATOR DUAL DUCT PRESSURE	INDICATR# INDICATOR DUAL DUCT PRESSURE
2227	SRDL6D	IND-DP # INDICATOR - DUAL PRESSURE	IND-DP # INDICATOR - DUAL PRESSURE
2228	SRDL7H	IND.PRES# HYDR. PRESS INDICATOR	IND.PRES# HYDR. PRESS INDICATOR
2229	SRDLOC7E	INDICATR# INDICATOR DUAL DUCT PRESSURE	INDICATR# INDICATOR DUAL DUCT PRESSURE
2230	SRL-0C7EM	IND HYDR# BRAKE PRESS,INDICATOR	IND HYDR# BRAKE PRESS,INDICATOR
2231	SRL-0C7EM	IND HYDR# BRAKE PRESS,INDICATOR	IND HYDR# BRAKE PRESS,INDICATOR
2232	SRL0C7EM	IND HYDR# BRAKE PRESS,INDICATOR	IND HYDR# BRAKE PRESS,INDICATOR
2233	SRLOC7EM	IND HYDR# BRAKE PRESS,INDICATOR	IND HYDR# BRAKE PRESS,INDICATOR
2234	ST-106AB	XMTR # PRESS TRANSMITTER AIR FLOW	XMTR # PRESS TRANSMITTER AIR FLOW
2235	ST-107R	XMTR # HYDR. PRESS TRANSMITTER	XMTR # HYDR. PRESS TRANSMITTER
2236	ST106AB	XMTR # PRESS TRANSMITTER AIR FLOW	XMTR # PRESS TRANSMITTER AIR FLOW
2237	ST107R	XMTR # HYDR. PRESS TRANSMITTER	XMTR # HYDR. PRESS TRANSMITTER
2238	TC174-00	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
2239	TC174-01	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
2240	TC174-02	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
2241	TC200-00	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
2242	TC200-01	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
2243	TC200-02	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE	HARNESS # THERMOCOUPLE WIR.HARNESS/PROBE
2244	TD-1702-1002	TIMER # TIMER ASSY TOILET FLUSH	TIMER # TIMER ASSY TOILET FLUSH
2245	TD-2004-1002	TIMER # TIMER ASSY TOILET FLUSH	TIMER # TIMER ASSY TOILET FLUSH
2246	TD1702-1002	TIMER # TIMER ASSY TOILET FLUSH	TIMER # TIMER ASSY TOILET FLUSH
2247	TD2004-1002	TIMER # TIMER ASSY TOILET FLUSH	TIMER # TIMER ASSY TOILET FLUSH
2248	TFC12-0057	PANEL # PANEL FAULT ISOLATION	PANEL # PANEL FAULT ISOLATION
2249	TFC13-0024-3	DETECTOR# SMOKE DETECTOR	DETECTOR# SMOKE DETECTOR
2250	TFC14-0039-1	FIRE EXT# FIRE EXTINGUISHER	FIRE EXT# FIRE EXTINGUISHER
2251	TFC16-0026-1	VALVE # VALVE METERING	VALVE # VALVE METERING
2252	TFC16-0029-1	VALVE # VALVE DIVERTER	VALVE # VALVE DIVERTER
2253	TY1878-20	SYN LOCK# SYNCRO LOCK MANUAL DRIVE AY	SYN LOCK# SYNCRO LOCK MANUAL DRIVE AY
2254	TY1878-20B	SYN LOCK# SYNCRO LOCK MANUAL DRIVE AY	SYN LOCK# SYNCRO LOCK MANUAL DRIVE AY
2255	TY1878-21	SYN LOCK# SYNCRO LOCK	SYN LOCK# SYNCRO LOCK
2256	TY1878-21A	SYN LOCK# SYVCHRO LOCK	SYN LOCK# SYVCHRO LOCK
2257	TY1878-21B	SYN LOCK# SYNCHRO LOCK	SYN LOCK# SYNCHRO LOCK
2258	TY1878-21C	SYN LOCK# SYNCHRO LOCK	SYN LOCK# SYNCHRO LOCK
2259	TY1878-22	SYN LOCK# SYNCRO LOCK	SYN LOCK# SYNCRO LOCK
2260	TY1878-22A	SYN LOCK# SYNCHRO LOCK	SYN LOCK# SYNCHRO LOCK
2261	U-54A	ACTUATOR# ACTUATOR MACH TRIM	ACTUATOR# ACTUATOR MACH TRIM
2262	U26A	ACTUATOR# RUDDER TRIM ACTUATOR	ACTUATOR# RUDDER TRIM ACTUATOR
2263	U26B	ACTUATOR# RUDDER TRIM ACTUATOR	ACTUATOR# RUDDER TRIM ACTUATOR
2264	U54-A	ACTUATOR# ACTUATOR MACH TRIM	ACTUATOR# ACTUATOR MACH TRIM
2265	U54A	ACTUATOR# ACTUATOR MACH TRIM	ACTUATOR# ACTUATOR MACH TRIM
2266	UA538551-2	COOLER # CSD OIL COOLER	COOLER # CSD OIL COOLER
2267	V5000-40	VALVE # VALVE SOLENOID SHUT OFF	VALVE # VALVE SOLENOID SHUT OFF
2268	VD82-2941	VALVE # VALVE-SUMP-DRAIN	VALVE # VALVE-SUMP-DRAIN
2269	W92A	ACTUATOR# ROTARY ACT RUD/PEDAL STEERING	ACTUATOR# ROTARY ACT RUD/PEDAL STEERING
2270	W92B	ACTUATOR# ROTARY ACT RUD/PEDAL STEERING	ACTUATOR# ROTARY ACT RUD/PEDAL STEERING
2271	W92C	ACTUATOR# ROTARY ACT RUD/PEDAL STEERING	ACTUATOR# ROTARY ACT RUD/PEDAL STEERING
2272	WL101EED3	INDICATR# INDICATOR N1	INDICATR# INDICATOR N1
2273	WL102AMS3	STBY IND# ALTIMETER AND AIRSPEED STANDBY	STBY IND# ALTIMETER AND AIRSPEED STANDBY
2274	WL201EED2	INDICATR# INDICATOR N2	INDICATR# INDICATOR N2
2275	WL501RC1	IND-ROC # INDICATOR-RATE OF CLIMB	IND-ROC # INDICATOR-RATE OF CLIMB
2276	XW20891-150-75	BLADE # BLADE ASSY WINDSHIELD WIPER	BLADE # BLADE ASSY WINDSHIELD WIPER
2277	XW21181-11	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
2278	XW21181-12	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
2279	XW21181-15	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
2280	XW21181-16	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
2281	XW21181-17	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
2282	XW21181-18	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
2283	XW21181-2	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
2284	XW23629-1	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
2285	XW23629-2	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
2286	XW23629-3	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT L/H
2287	XW23629-4	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H	MOTOR # WINDSH.WIPER MOTOR/CONVERT R/H
2288	ZR1A	XMTR POS# POSITION TRANSMITTER	XMTR POS# POSITION TRANSMITTER
2289	ZR2A	X MITTER# POSITION TRANSMITTER	X MITTER# POSITION TRANSMITTER
2290	ZR3A	X MITTER# TRANSMITTER-CONTROL SURFACE PO	X MITTER# TRANSMITTER-CONTROL SURFACE PO